

**BESTRON**

**AWM100  
Waffle  
Maker**



# bESTRON AWM100 Waffle Maker Instruction Manual

[Home](#) » [bESTRON](#) » bESTRON AWM100 Waffle Maker Instruction Manual 

## Contents

- 1 bESTRON AWM100 Waffle Maker
- 2 Product Usage Instructions
- 3 FAQ
- 4 SAFETY INSTRUCTIONS
- 5 OPERATION
- 6 CLEANING AND MAINTENANCE
- 7 Documents / Resources
  - 7.1 References

**BESTRON**

**bESTRON AWM100 Waffle Maker**



### Specifications:

- **Model:** AWM100
- **Voltage:** 220-240V
- **Frequency:** 50/60 Hz
- **Safety Class:** 1
- **Power:** 1600 Watts
- **Device Dimensions (L x W x H):** 21.0 x 10.0 x 24.0 cm
- **Cable length:** 70 cm

### Product Usage Instructions

#### First Use:

1. Remove the packaging and clean the baking plates to remove any residues from the manufacturing process. Thoroughly dry afterwards.
2. Plug the device into a power outlet and let the waffle maker heat for 10 minutes to eliminate any packaging odor.

**Note:** The non-stick coating on the baking plates may release a harmful substance for birds.

#### Preparation:

1. Place the device on a flat, stable, and heat-resistant surface.
2. Close the lid and set the temperature control to OFF.
3. Plug the device into the power outlet. The red indicator light (Power) will turn on.
4. Adjust the temperature control to the desired level. The green indicator light (Ready) will illuminate.

When the green light goes off, it indicates that the device has reached the desired temperature and is ready for use.

### **Waffle Baking:**

1. Prepare the waffle batter according to a recipe or instructions on the batter packaging.
2. Preheat the device as described in 'Preparation.'
3. Grease both baking plates using a brush to distribute oil or butter evenly.
4. Place the desired amount of batter on the lower baking plate, ensuring it does not overflow.
5. Close the lid and bake the waffles until they reach the desired color. The usual cooking time.

### **Cleaning and Maintenance:**

After each use, clean the device.

1. Unplug the device and let it cool completely.
2. Clean the device with a damp cloth, ensuring no liquid enters it.
3. Thoroughly dry the device after cleaning.
4. Store the waffle maker appropriately.

### **FAQ**

#### **Q: What should I do in case of a malfunction?**

**A:** In the unlikely event of a malfunction, please contact Bestron customer service at [www.bestron.com/service](http://www.bestron.com/service).

### **SAFETY INSTRUCTIONS**

- This appliance is not intended for professional use, but is intended for domestic and similar use, such as in staff kitchens, in shops, offices and other working environments, by guests in hotels, motels and other residential environments, in Bed & Breakfast type environments and farms.
- Make sure that the mains voltage matches with the voltage shown on the rating plate.
- Always install the appliance on a stable and level surface where it cannot fall over.
- Parts of this appliance may become warm or hot. Avoid burning yourself. Do not touch.
- Your hands must be dry when you touch this appliance, its cord and plug.
- This appliance must lose its heat so give it sufficient clearance around it. Also do not cover it.
- This appliance, the cord and the plug must not come into contact with water, heat sources or open flames.
- Do not touch this device if it has come into contact with water.  
Immediately remove the plug from the socket.
- Never let the cord hang over the edge of the sink, worktop or table.
- Always remove the plug from the socket when you are not using the electrical appliance.
- Remove the plug from the socket by pulling on the plug itself and not on the cord.
- Do not use the electrical appliance if the cord is damaged.
- Do not operate this appliance with an external timer or separate remote control system.
- If the appliance or cord is defective, do not attempt to repair it yourself.

Always have repairs carried out by a qualified technician. It must be replaced by the manufacturer, a technical

service provider or a person with equivalent qualifications, to avoid any danger.

- Do not move this device when it is turned on or still hot.
- Do not place heavy objects on the lid to keep the device closed.
- Never use this device near birds. The fumes released from the nonstick coating can cause stress or worse in birds.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the dangers.
- Children are not allowed to clean or maintain the appliance unless they are over 8 years old and supervised.
- Keep the appliance and the cord out of the reach of children under the age of 8.
- Children shall not play with the appliance.

## ENVIRONMENT

- Dispose of packaging material such as plastic and cardboard boxes in the designated containers.
- Do not dispose of this product as normal domestic waste at the end of its life, but hand it in at a collection point for the reuse of electric and electronic equipment. Look for the symbol on the product, the user instructions or the packaging showing the type of waste.
- The materials can be used as indicated. By helping us reuse and process the materials or otherwise recycle the old equipment, you will be making an important contribution towards the protection of the environment.
- Your municipality can tell you where to find the designated waste collection point in your neighbourhood.

## SERVICE

In the unlikely event of a malfunction, please contact Bestron customer service: [www.bestron.com/service](http://www.bestron.com/service)

| Technical Specifications               |                |
|--|----------------|
| Model                                  | AWM100         |
| Mains (V)                              | 220-240V       |
| Frequency (Hz)                         | 50/60          |
| Safety Class                           | 1              |
| Power (Watt)                           | 1600           |
| Noise (dB(A))                          | –              |
| Max. Capacity                          | –              |
| Maximum continuous operating time (KB) | –              |
| Dimensions (L x W x H) (cm)            | 21,0×10,0×24,0 |
| Cable length (cm)                      | 70             |

## OPERATION

### General information

The below description goes with the image on page 2.

1. Cover
2. Handle
3. Baking plate top
4. Baking plate bottom
5. Green indication light (Ready)
6. Temperature control dial
7. Red indication light (Power)



### First use

1. Remove the packaging and clean the baking trays to remove any residue from the manufacturing process. Then dry thoroughly.
2. Plug in the plug and let the waffle maker heat for 10 minutes to remove any packaging smell.

### Attention:

- The appliance may emit a little smoke and a characteristic smell when you switch it on for the first time. This is normal, and will soon stop. Make sure there is sufficient ventilation in the room.
- Keep house birds away from the appliance when it is in use. Fumes released from the non-stick coating when the baking plates are hot may be harmful to birds.

### Preparations

1. Place the appliance on a flat, stable and heat-resistant surface.
2. Close the lid and set the temperature to OFF.
3. Insert the plug into the wall socket. The red indication light (Power) lights up.

4. Adjust the temperature setting to the desired position. The green indication light (Ready) comes on.

When the green light goes out, the desired temperature has been reached and the device is ready for use.

### **Baking waffles**

1. Prepare the waffle dough according to a recipe or according to the instructions on the dough packaging.
2. Preheat the appliance as described in 'Preparations'.
3. Grease both baking trays. Use a brush to distribute the oil or butter.
4. Place the desired amount of dough on the lower baking tray. Prevent the dough from running over the edge of the baking tray.
5. Close the lid and bake the waffles until they have the desired color. The normal preparation time is about 3 – 5 minutes, depending on the dough used and your personal taste. Keep the appliance closed as much as possible during baking, because opening it in the meantime can affect the appearance of the waffles.
6. When the waffles are ready, gently remove them with a heat-resistant wooden or plastic spatula to prevent damage to the non-stick coating.
7. When you have finished baking waffles, unplug the appliance and open the appliance to let it cool down.

### **CLEANING AND MAINTENANCE**

Clean the device after every use.

1. Remove the plug from the socket and let the appliance cool down completely.
2. Clean the device with a damp cloth. Make sure that no liquid enters the device.
3. Dry the device thoroughly after cleaning.
4. Store the waffle maker.

#### **Attention:**

- Do not use aggressive or abrasive cleaning agents or sharp objects (such as knives or hard brushes) when cleaning.
- Never immerse the appliance, the cord or the plug of the appliance in water or any other liquid.

### **ALL YOU WANT TO KNOW ABOUT YOUR UNIQUE 5 YEAR WARRANTY**

[BESTRON.COM/GUARANTEE](https://bestron.com/guarantee)

#### **NEED HELP?**

CHECK OUT OUR SERVICE PAGE



## EASTERN EUROPE CUSTOMER SERVICE

POLSKA [bestron.service.pl@sertronics.de](mailto:bestron.service.pl@sertronics.de)  
HRVATSKA [bestron.service.hr@sertronics.de](mailto:bestron.service.hr@sertronics.de)  
CZECHIA [bestron.service.cz@sertronics.de](mailto:bestron.service.cz@sertronics.de)  
SLOVENSKO [bestron.service.sk@sertronics.de](mailto:bestron.service.sk@sertronics.de)  
ROMÂNIA [bestron.service.ro@sertronics.de](mailto:bestron.service.ro@sertronics.de)  
BULGARIA [bestron.service.bg@sertronics.de](mailto:bestron.service.bg@sertronics.de)


**SERVICE HOTLINE:** 00800 954 39 543



241111-01

| Hersteller / Fournisseur/ Výrobce / Proizvođač / Producător / Výrobca / Производител   |                            |                        |                              |                               |                             |                           |                                |
|--|----------------------------|------------------------|------------------------------|-------------------------------|-----------------------------|---------------------------|--------------------------------|
| Bestron Nederland BV, Moeskampweg 20, 5222 AW, 's-Hertogenbosch<br>Niederlande, Pays-Bas, Nizozemí, Hollandia, Holandia, Olanda, Holandsko, Холандия |                            |                        |                              |                               |                             |                           |                                |
| D  | FR                         | CZ                     | HR                           | PL                            | RO/MD                       | SK                        | BG                             |
| Ursprungs-<br>land<br>China  | Pays<br>d'origine<br>Chine | Země<br>původu<br>Čína | Zemlja<br>podrijetla<br>Kina | Wyprodu-<br>kowane w<br>Chiny | Tara de<br>origine<br>China | Krajina<br>pôvodu<br>Čína | Страна на<br>произход<br>Китай |

## Documents / Resources

|  |  |
|--|--|
|  | <a href="#">bESTRON AWM100 Waffle Maker</a> [pdf] Instruction Manual<br>AWM100, AWM100 Waffle Maker, Waffle Maker, Maker |
|--|--|

## References

- » [Guarantee EN](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.