

BFT Cellular Call Box with Keypad User Guide

Home » BFT » BFT Cellular Call Box with Keypad User Guide 🖫



BFT Cellular Call Box with Keypad



Contents

- 1 SIM Service
- 2 Earthing
- 3 Site Wiring
- **4 Wiring Relays**
- **5 Inserting SIM**
- 6 Power
- 7 LEDs
- **8 Basic Programming**
- 9 Documents /
- Resources
- **10 Related Posts**

SIM Service

This product comes with a SIM card, which will run on At&T service. You must have At&T signal in the area for this unit to operate. Please survey the location for signal BEFORE installing this device.




Earthing

This product MUST be EARTHED in the following states in order to qualify for manufacturers warranty.




FL, LA, MS, AR, OK, MO, AL, IL, KY, TN, IN, KS, SC, GA, IA, TX, OH, NC, NE, MD, WV, VA, DE

Site Wiring

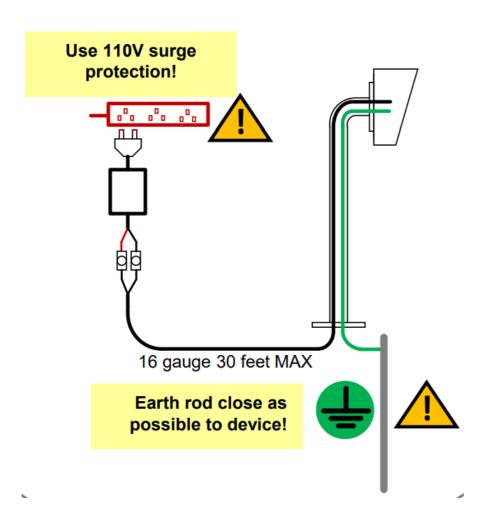

Wiring Relays

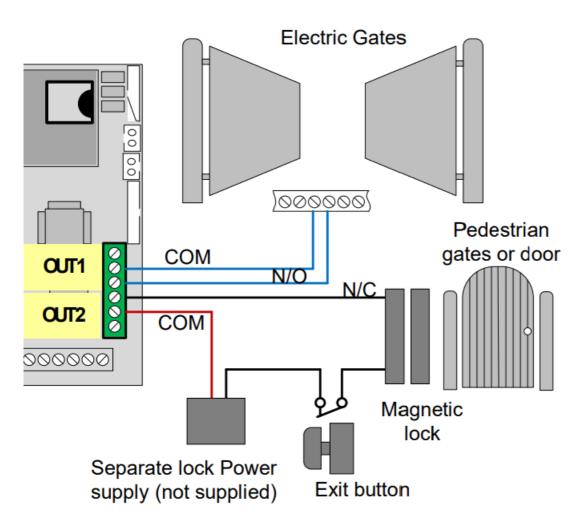


Inserting SIM


Power OFF!

NANO SIM


45 chamfer IN, pads DOWN

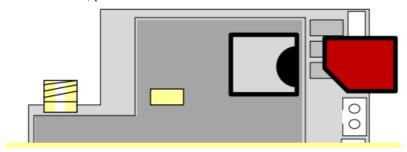

Power

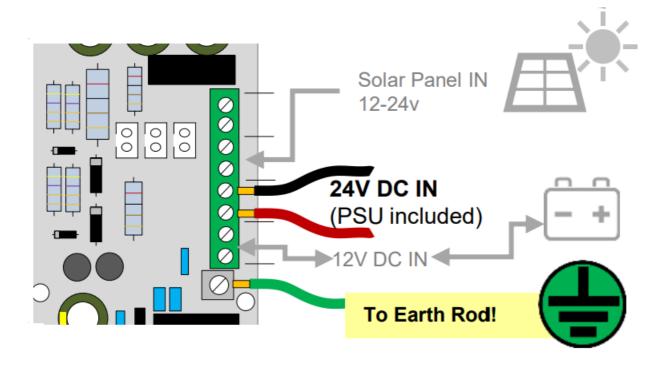

LEDs

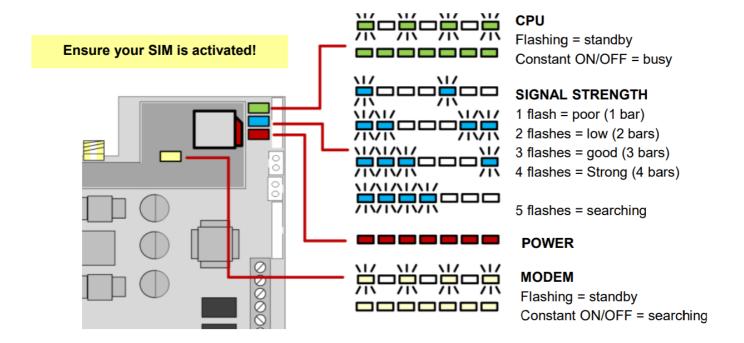


Basic Programming

1. Check for Signal


Use your phone to send SMS *20# to the intercom cell number.

Intercom should reply. 1-31 (1=min, 31=max) Less than 10 is too low!

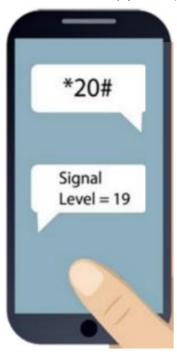


2. Setting APN

Only do this if the signal reply is 3G. APN details for various networks in main manual and can be searched online. To change APN send SMS below..

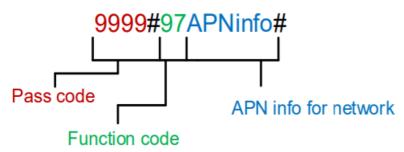


3. To Set Dial out phone numbers..

Send SMS below...

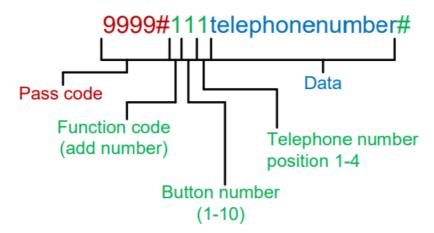

4. To program keypad codes..

Send SMS below...

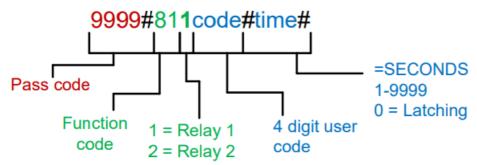

5. To program caller ID phone numbers

Send SMS below..

9999#72telephonenumber#72telephonenumber#72telephonenumber#72telephonenumber#

Scan to view full instructions



Documents / Resources



BFT Cellular Call Box with Keypad [pdf] User Guide Cellular Call Box with Keypad, Call Box with Keypad, Box with Keypad