



Bifevsr B0BZJH38Y4 4K Digital Camera with Viewfinder Flash and Dial User Guide

[Home](#) » [Bifevsr](#) » Bifevsr B0BZJH38Y4 4K Digital Camera with Viewfinder Flash and Dial User Guide 

Bifevsr

B0BZJH38Y4 4K Digital Camera with Viewfinder Flash and Dial
User Guide



Quick Start Guide
Any questions please contact us

Contents

- [1 How to Find the Camera Seller](#)
- [2 Summary of product usage steps](#)
- [3 How to Install Micro SD Card](#)
- [4 How to Charge the Camera](#)
- [5 How to Format Micro SD Card](#)
- [6 How to Take Still Images](#)
- [7 How to Take Videos](#)
- [8 How to view and delete photo videos](#)
- [9 How to Use the Viewfinder](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)

How to Find the Camera Seller

Dear customer:

Hello! Thank you very much for purchasing our digital camera ! We are committed to improving the quality of life and recording a better life. Your purchase is just the beginning of our service! During use, if you have any questions, please feel free to contact us for a quick solution :

Find a seller:

[Sign in to Amazon](#)



[Your Account](#)



[Your Order](#)



[Ask a Product Question](#)

Your satisfaction is our ultimate goal!

Summary of product usage steps

◆ How to Install the Battery



1. Please push the battery cover lock lever to open the cover as shown in the picture



2. The front of the battery with text logo is aligned with the screen, Then insert the battery and keep pressing until the battery is locked by the battery lock lever

 


3. If you want to remove the battery, please push the battery lock lever and the battery will pop out

How to Install Micro SD Card



1. Please push the battery cover lock lever to open the cover as shown in the picture

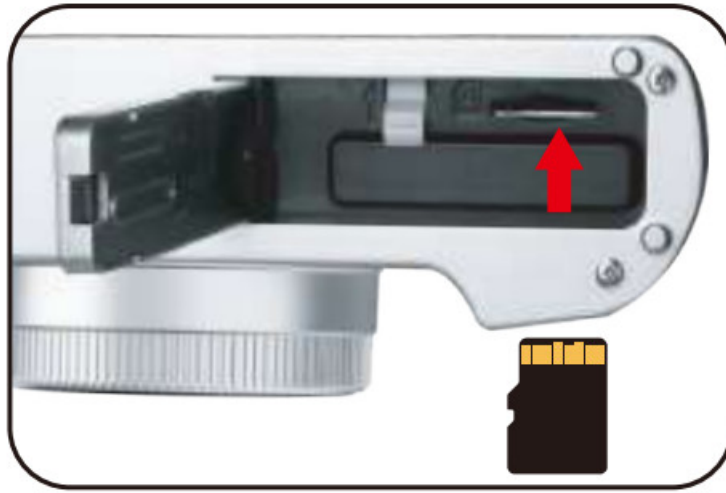

2. The metal side is parallel to the screen, Then insert the micro SD card and keep pressing until the card is locked, you will hear an audible click



3. Please note that 4-128Gb Class 10/ U1 card is recommended
4. The memory card can only be inserted in one way. Do not force the
5. Close the battery door by pushing it down
6. If you want to remove the card, please keep pressing the SD card until the card lock ever is unlocked

How to Charge the Camera

1. Please use Type-C cable and 5V charger to charge the camera,



2. The red indicator light will light up when charging
3. The red light turns off when fully charged
4. A blinking red light means the camera is not properly inserted into the battery

 
How to Format Micro SD Card



1. Turn the mode dial to system settings mode.



2. Select the "Format" option.

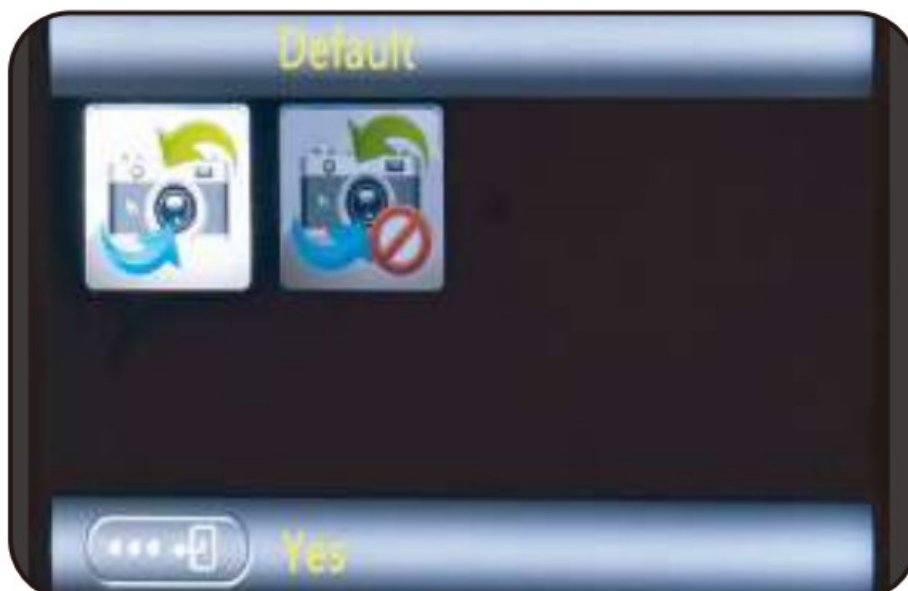

3. Press the “OK” button twice to confirm the formatting.

 
How to Take Still Images



1. Please turn on the camera



2. Please rotate the mode dial on the top right corner of the camera to the still photo mode marked in green

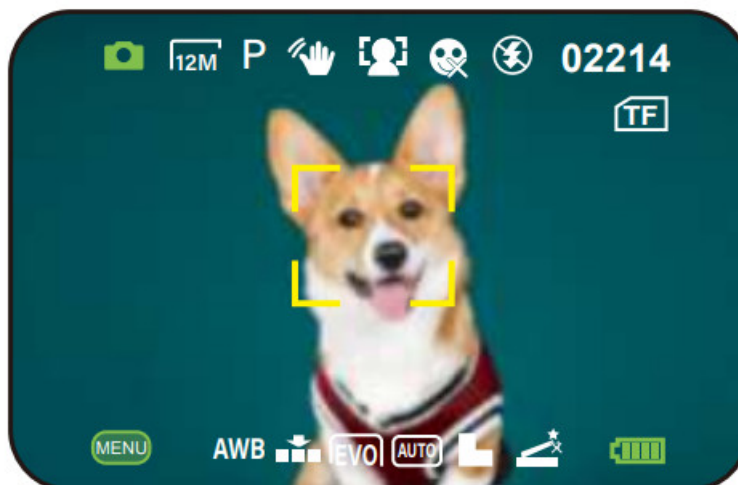

Shutter button

3. Please press the shutter button halfway (press lightly) to focus, and the focus frame will turn from yellow to green after the focus is completed



 
Shutter button

4. Please press the shutter button fully to take a photo

How to Take Videos




1. Please turn on the camera

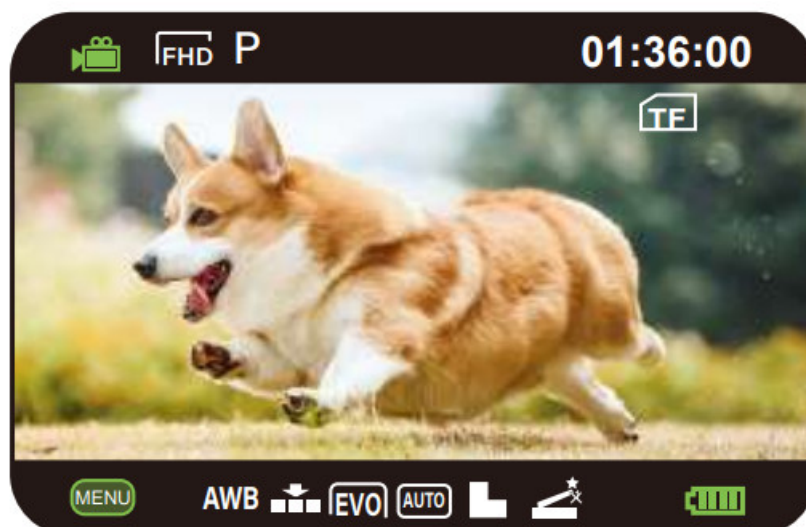

2. Please turn the mode wheel on the top right corner of the camera to video mode



 3. Please press the shutter button to start recording video

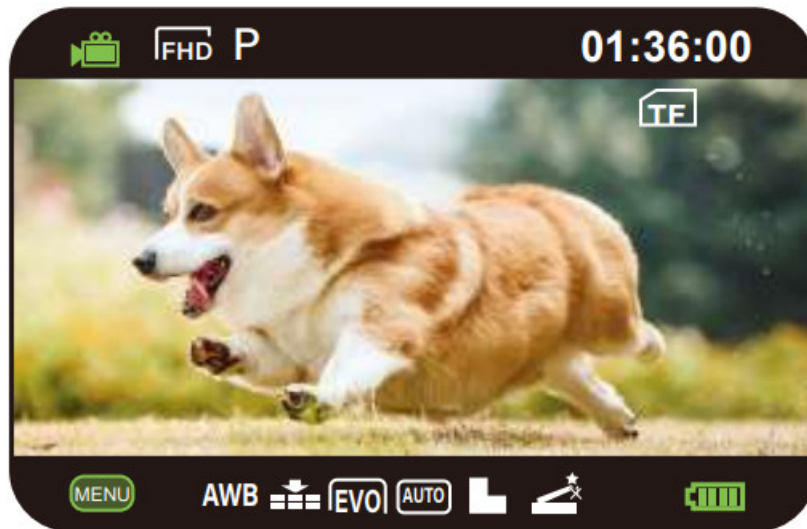


4. When the video recording is complete, press the shutter button again to stop

 
How to view and delete photo videos



Turn to video recording mode.

Press the (Playback)  button.

Selecting the next/previous video through the left and right buttons.

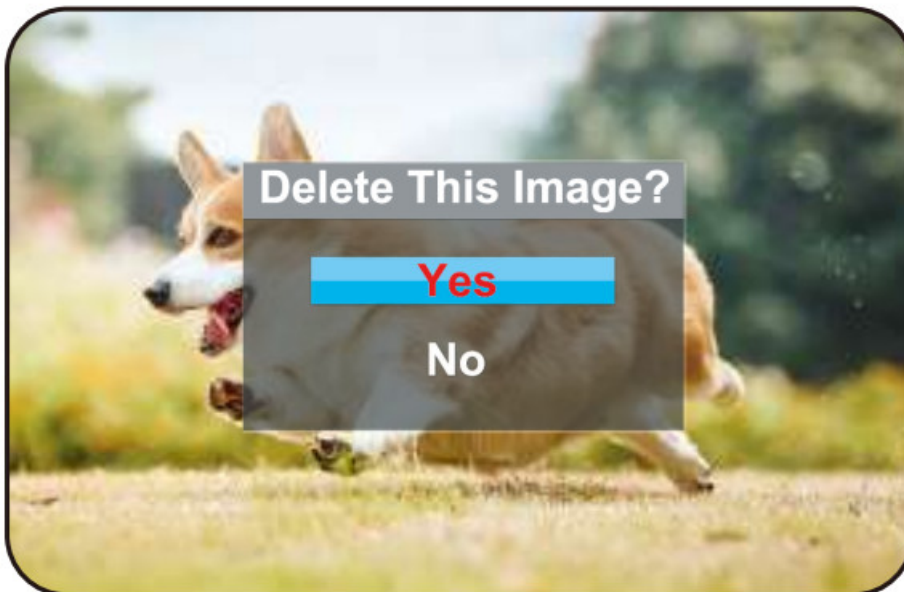


Press the Delete  button to delete.

How to Use the Viewfinder

1.



 
Optical viewfinder is located in the upper left corner of the camera

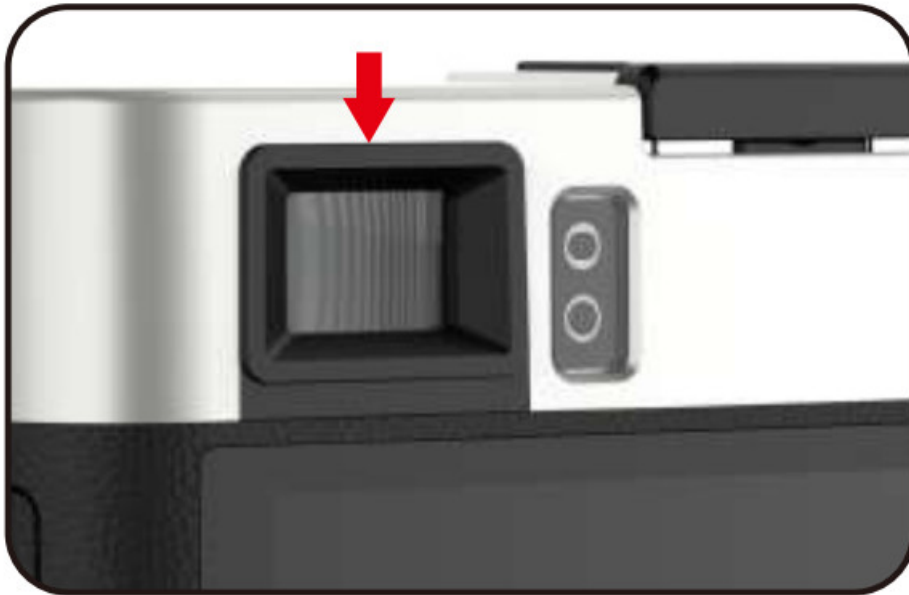

2. You can observe the captured scene through the optical viewfinder, and the camera screen will automatically turn off to save power

Bifevsr

Documents / Resources

 <p>Quick Start Guide</p> <p>Any questions please contact us</p>	Bifevsr B0BZJH38Y4 4K Digital Camera with Viewfinder Flash and Dial [pdf] User Guide B0BZJH38Y4 4K Digital Camera with Viewfinder Flash and Dial, B0BZJH38Y4, 4K Digital Cam era with Viewfinder Flash and Dial, Viewfinder Flash and Dial, and Dial
---	--