



Big Button 304357 40dB Amplified Speakerphone Instruction Manual

[Home](#) » [Big Button](#) » Big Button 304357 40dB Amplified Speakerphone Instruction Manual 

Contents

- [1 Big Button 304357 40dB Amplified Speakerphone](#)
- [2 FEATURES](#)
- [3 INSTALLATION](#)
- [4 OPERATION INSTRUCTION](#)
- [5 SAFETY INSTRUCTIONS](#)
- [6 LIMITED WARRANTY AND SERVICE](#)
- [7 Documents / Resources](#)


Big Button

Big Button 304357 40dB Amplified Speakerphone



FEATURES

1. 2 ONE-TOUCH DIALING MEMORIES
2. '911' EMERGENCY ONE-TOUCH KEY
3. 10 TWO-TOUCH DIALING MEMORIES
4. HOLD FUNCTION
5. FLASH FUNCTION
6. REDIAL FUNCTION
7. SPEAKERPHONE FUNCTION
8. RECEIVER VOLUME CONTROL (HI/MI/LO)
9. RINGER VOLUME CONTROL (HI/LO/OFF)
10. SPEAKERPHONE VOLUME CONTROL (MAX to MIN)
11. INCOMING CALL NEON INDICATOR
12. IN USE LED INDICATOR

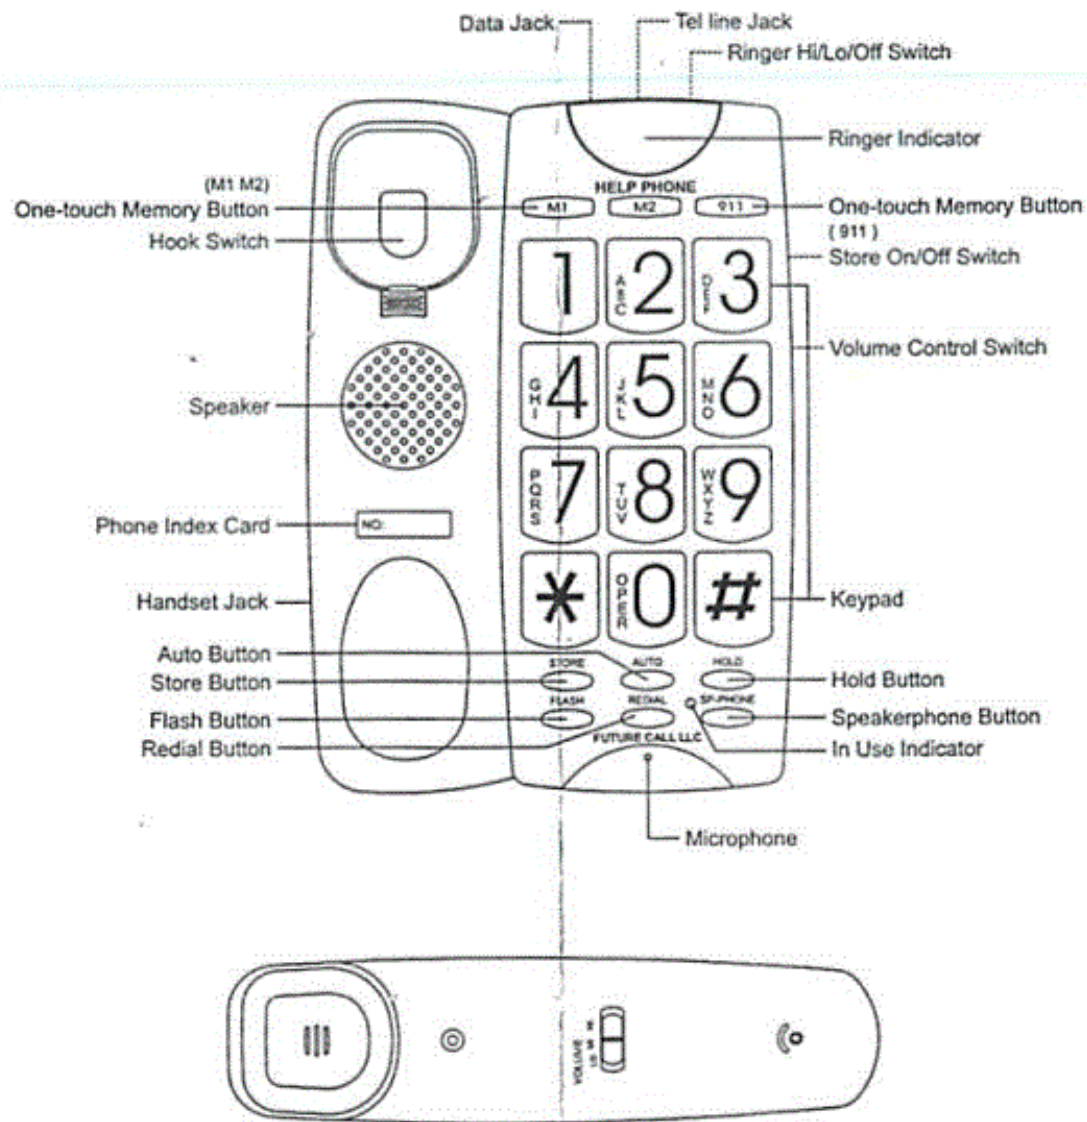

CAUTION

This product is an electrical device and can be hazardous if immersed in water. To avoid the possibility of shock, do not use it while in the bathtub or shower or when you are wet. If you accidentally drop it into water, first unplug its cord (or cords) from the modular jack, and then remove the equipment from the water.

INSTALLATION

Plug one end of the flat cord to the line jack in the base and the other end to the wall jack. Of the handset plug one end of the coiled cord to the handset and the other end to the jack to the left hand of the base unit. DO NOT PLUG THE COILED CORD TO THE BACK OF THE PHONE LINE / DATA SOCKET

OPERATION INSTRUCTION

RECEIVER SWITCH (HI/MI/LO)

- Slide the [RECEIVER] switch to 'HI' position for the highest handset volume, 'MI' for medium volume, and the 'LO' position for the lowest handset volume

SPEAKERPHONE (MAX to MIN) SWITCH

- Slide the [SP-PHONE] switch to the 'MAX' position for the highest speaker volume and the 'MIN' position for

the lowest speaker volume.

RINGER (HI/LO/OFF) SWITCH

- Slide the [RINGER] switch to the 'HI' position for high ringer volume and the 'LO' position for low ringer volume.
- Slide the [RINGER] switch to the 'OFF' position to turn the ringer off. The ringer will not be activated by any incoming calls. (Ringer NEON will still flash to remind you if there is an incoming call) Don't forget to turn the ringer 'ON' when you are ready to receive calls; otherwise, you will not hear any ringing sound.

INCOMING CALL NEON INDICATOR

The bulb will flash if there is an incoming call.

IN USE INDICATOR

This bulb will light if the handset is off-hook, the Speakerphone key is "ON" or if the phone is on "HOLD" showing you the phone is connected properly and will remain on until the phone is off properly

MAKING CALLS AS NORMAL TELEPHONE

- Pick up the handset or press (the SP-PHONE] key to listen for a dial tone.
- Dial your call.

RECEIVING CALLS AS A NORMAL TELEPHONE

When the phone rings:

- Lift the handset and speak into the mouthpiece of the handset or
- Press the [SP-PHONE] key to speak
- Hang up the handset or press [SP-PHONE) key to release the telephone line when the conversation is completed.

'911' EMERGENCY ONE-TOUCH DIALING

For the emergency dialing of '911', just pick the handset or press [SP-PHONE] to get a dial tone, then press the (911) button to dial out the call directly.

LAST NUMBER REDIAL

- Lift the handset or press (SP-PHONE] to get the dial tone
- The last number you called can be redialed automatically by using [REDIAL]. This is useful especially if the line is busy.
- Redial functions will not be executed if any other key is entered prior to the redial key entry.

FLASH

For Call Waiting or when in an office equipped with PBX service, this telephone makes it easy to transfer calls

1. Ask the caller to wait
2. Press the [FLASH] button for and Call waiting
3. You can now answer the 2call, by pressing [FLASH) again you can go back to the 1" call.

4. Or for PBX equipped dial the extension number that the caller intended
5. When the person answers -s, just replace the handset back onto the phone
6. If you receive a busy call or there is nobody answer, press the [FLASH] button to re-connect to the caller

MUSIC ON HOLD FUNCTION

- During the conversation, to put your party on music “hold”, press the [HOLD] button. Your caller will be placed on “hold” while he or she listens to music.
- To release the “hold”, lift the handset or press the [SP-PHONE] button and speak to the calling party

STORE ON/OFF SWITCH

- Slide the “STORE” switch to the ‘ON’ position, and the one-touch or two-touch memories will be able to be programmed.
- Slide the “STORE” switch to the ‘OFF’ position, the one-touch or two-touch memories will not be able to be programmed.

TO STORE 2 ONE-TOUCH MEMORIES

Lift the handset or press the [SP-PHONE] button

- Press [STORE] button
- Enter the number you want to store
Press M1 or M2
- Replace the handset or press [SP-PHONE] button

TO STORE 10 TWO-TOUCH MEMORIES

- Lift the handset or press the [SP-PHONE] button
- Press [STORE] button
- Enter the number you want: to store
- Press [AUTO] button
- Press a number from 0 to 9 (where the location you would like to store)
- Replace the handset or press [SP-PHONE] button

TO DIALA NUMBER FROM 2 ONE-TOUCH (M1/M2) MEMORIES

- Lift the handset or press [SP-PHONE] button to get the dial tone
- Press the one-touch button (M 1 /M2)

TO DIALA NUMBER FROM 10 TWO-TOUCH MEMORIES

- Lift the handset or press the [SP-PHONE] button to get the dial tone
- Press the [AUTO] button first, then enter the desired location from 0-9

SAFETY INSTRUCTIONS

- This unit is an electrical device and can be hazardous if immersed in water. If you accidentally drop it into water, first unplug it from the wall jack, and then remove it from the water.
- Please keep the telephone! dry and do not use it in moist places. (i.e., near a bathtub, washbowl, kitchen sink, laundry tub or swimming pool). Do not use it in rain.
- Unplug the device from the wall jack before cleaning it with a damp cloth. Please do not use liquid or aerosol cleaners.
- Handle the phone carefully. Do not drop it.
- Do not use or put the unit in extreme temperatures.
- Keep the phone away from dust and dirt.
- Use the correct power batteries as indicated in the manual. Do not put batteries in a fire for such action can lead to an explosion.
- Do not modify or tamper with the telephone's internal components. Improper adjustment can cause damage and can be dangerous.

SAVE THESE INSTRUCTIONS

LIMITED WARRANTY AND SERVICE

FUTURE CALL LLC. warrants this product to be free from defective materials of factory workmanship and will replace or repair this unit or any part thereof, except batteries, if it proves to be defective in normal use or service within 90 days from the date of original purchase. Our obligation under this warranty is the repair or replacement of the defective instrument or any part thereof, except batteries. This warranty will be considered void if the unit is tampered with, improperly serviced, or subjected to misuse, negligence, or accidental carnage. There are no other express warranties other than those stated herein. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE PLEASE E-MAIL us ON info@future-call.com OR CALL US TOLL FREE 1-888-934-CALL (1-888-934-2255). "from 9 AM to 6 PM PST" IF THE UNIT IS UNDER WARRANTY PROOF OF PURCHASE MUST BE PROVEN.

FUTURE CALL LLC ITEM NUMBER: 4357

MODEL Help Phone

Email:info@future-call.com

Toll free 1-888-934-CALL(2255)"from 9AM to 6PM PST" www.future-call.com

Documents / Resources



[Big Button 304357 40dB Amplified Speakerphone](#) [pdf] Instruction Manual
304357 40dB Amplified Speakerphone, 304357, 40dB Amplified Speakerphone, Amplified Speakerphone, Speakerphone