



# BIGBIB WON ARMOR-X Pro Wireless Back Button for Xbox Series XIS Controller User Manual

[Home](#) » [BIGBIB WON](#) » BIGBIB WON ARMOR-X Pro Wireless Back Button for Xbox Series XIS Controller User Manual 

## Contents

- 1 BIGBIB WON ARMOR-X Pro Wireless Back Button for Xbox Series XIS Controller
- 2 BIGBIB WON THE ELITE APP
- 3 CONNECT BIGBIB WON ELITE APP
- 4 NAME OF EACH PART
- 5 ATTACH THE ARMORX PRO
- 6 MOTION CONTROL
  - 6.1 THE MODES OF MOTION CONTROL
- 7 SUPPORT SWITCH ORIGINAL MOTION CONTROL
  - 7.1 THE CALIBRATION OF THE GYROSCOPE
  - 7.2 MAPPING BUTTON
- 8 TURBO BUTTON
- 9 MACRO RECORDING
- 10 ADJUSTMENT OF RUMBLE MOTOR
- 11 ON-BOARD PROFILE
- 12 BATTERY
- 13 FCC
  - 13.1 Labeling requirements
- 14 Documents / Resources
  - 14.1 References
- 15 Related Posts



**BIGBIB WON ARMOR-X Pro Wireless Back Button for Xbox Series XIS Controller**



## **BIGBIB WON THE ELITE APP**



Customize the button functions of your ARMORX Pro back button with BIGBIB WON ELITE APP, and a series functions can be set such as Macro, on-board configuration, mapping back buttons, motion control and more. [www.bigbigwon.com/support](http://www.bigbigwon.com/support)

## **BIGBIB WON ELITE APP REQUIREMENTS APP**

- iOS 13(or higher) / Android 11(or higher)
- The ELITE APP needs internet, Bluetooth permission and location permission.
- Please APP get these permission when install.
- if there is no prompt please open it in your mobile phone's system or the APP can not connect to your device.

 
## **CONNECT BIGBIB WON ELITE APP**

1. Ensure that the ARMORX Pro is connected to your controller successfully.
2. Turn on the mobile device's Bluetooth function.
3. Press "ARMORX Pro" to connect your ARMORX Pro.
4. After the connection is successful, you can set many custom functions for your device.

<b>PACKAGE CONTENTS</b>	BIGBIG WON ARMORX Pro Wireless Back Button/USB Wireless Adapter TYPE-C Data Cable/User Manual/Qualified Certification
<b>SUPPORTED CONTROLLER</b>	Xbox Series Controller
<b>SUPPORTED PLATFORM</b>	Xbox Series X   S / Xbox One / Switch / Win 10/11



**NOTICE:** The audio jack of controller can not be used when using ARMORX Pro

## NAME OF EACH PART

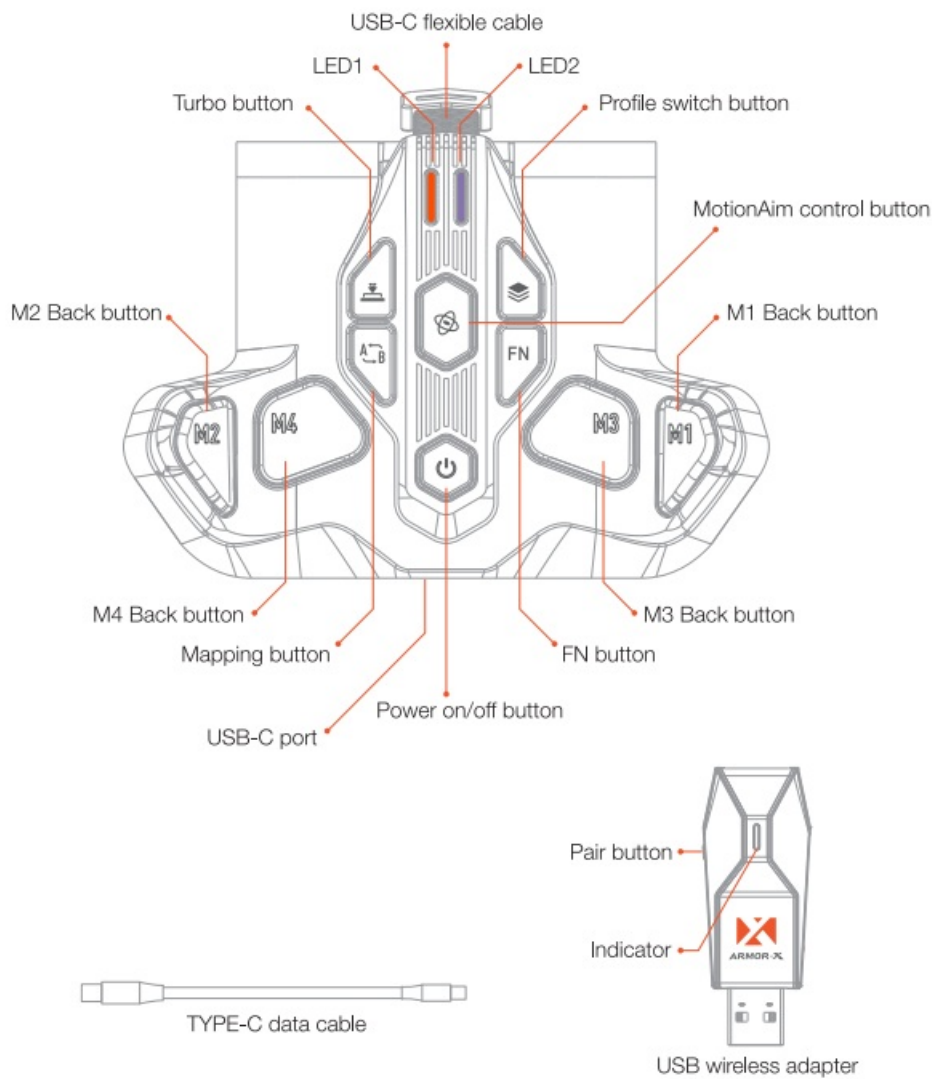

## ATTACH THE ARMORX PRO

  1. Remove the battery compartment cover off the Controller and attach the ARMORX Pro to the battery compartment
2. Plug the USB-C flexible cable of ARMORX Pro into the USB port of the Xbox Series Controller,

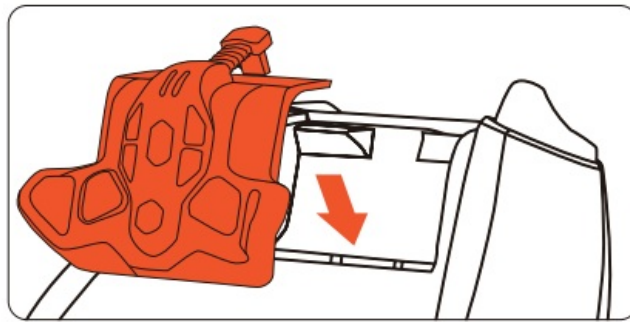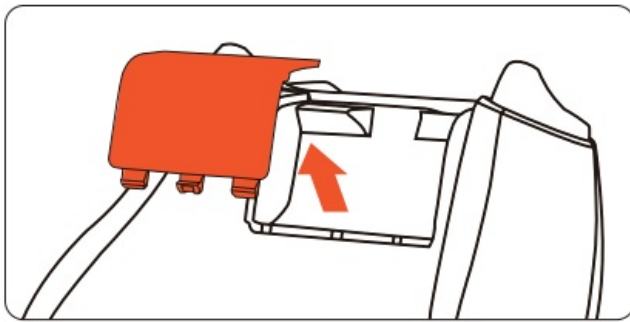

**NOTICE:** For best performance, please fully charge the ARMORX Pro before using it for the first time. It takes about 2.5 hours to fully charge a depleted battery.

## CONNECT TO THE CONSOLE



- The Xbox Series controller with ARMORX Pro can support Xbox/ PC/ Switch originally. Hold the power button to turn on the ARMORX Pro and plug the USB wireless adapter into the console's USB port. The ARMORX Pro will detect the platform automatically.
- LED1 slowly flashes meaning that the ARMORX Pro is connecting with the adapter. And the fast flashes mean that the ARMORX Pro is pairing with the adapter. After the connection is successful, the LED1 will become always on (The adapter indicator is the same).
- After the connection is successful, the LED1 and adapter indicator will become always on and switch to the corresponding platform color.
- LED2 flashes mean the connection between ARMORX Pro and the controller is unsuccessful and always on means connection success.
- To connect with the Switch console, need to set: System Settings > Controllers and Sensors > Pro Controller Wired Communication On.

## RE-PAIR

- ARMORX Pro is already paired with the adapter in the factory. The only situation you need to pair it with is that the connection of ARMORX Pro and adapter is failed.

### The steps of repair:



1. After the ARMORX Pro is on, hold the  +  until the LED1 fast flashes, and the ARMORX Pro enters pairing mode.
2. Plug the adapter into the console and hold the pair button on the adapter until the indicator fast flashes, and the adapter enters the pairing mode.
3. When the LED1 and adapter indicator are fast flashing, it means it is pairing. Please wait for it until the LED1 and adapter indicator become always on, and the repair is successful.

## MOTION CONTROL

1. The ARMORX Pro has a motion control function that allows you to use the gyroscope to simulate the action of

left/right joysticks in games that do not support motion control originally.



2. **Turn on:** Click once the MotionAim control button. The LED2 will be purple.
3. **Turn off:** Click the MotionAim control button once again to turn off the motion control. The LED2 will flash twice and turn off.

## THE MODES OF MOTION CONTROL

There are three modes of motion control:

Global right joystick simulation, Response right joystick simulation, Global left joystick simulation.

**The open methods of three modes:**

1. Global joystick simulation:



Hold +LS to open the global left joystick simulation,



Hold + RS to open the global right joystick simulation.

2. Response joystick simulation:



Hold + response button and press RS to open the response left joystick simulation.

Open the motion control by clicking once the MotionAim control button will open the last mode you have used.

## SUPPORT SWITCH ORIGINAL MOTION CONTROL

ARMORX Pro has a built-in 6-axis gyroscope, and the game of Switch console supports native motion control by default. There is no need to turn on Simulated motion control, please make sure Simulated motion control is turned off.

## THE CALIBRATION OF THE GYROSCOPE

Put the Xbox Series controller that is already attached to the ARMORX Pro on the horizontal desk and press the



Xbox Series controller. The LED2 will slowly flash in purple. The LED2 flashes twice and turns off means the calibration is successful.

## MAPPING BUTTON

1. **MAPPING SETTING:**




Press +(M1/M2/M3/M4) to enter the mapping mode. The LED2 will breathe in green. Then press the target button, and the LED2 will flash twice. The mapping is a Success.


2. **THE BUTTONS SUPPORT MAPPING:**

ABXY.D-pad, LT/RT/LB/RB, M1-M4, RS/LS, menu, view, share.

3. **CANCEL MAPPING:**


Hold the button that needs to be canceled (M1-M4 ) and double-clicks  the I  
LED2 will flash twice in green means cancel success.

#### 4. CANCEL ALL MAPPING:

Double-click the,  LED2 will flash twice in green means cancel success.

## TURBO BUTTON

#### 1. TURBO SETTING:

Hold  +the button needs TURBO to open the TURBO function. The controller will shake for 0.2 seconds and LED2 will flash twice in orange.

#### 2. THE BUTTONS SUPPORT TURBO:

ABXYD-pad, LT/RT/LB/RB, M1-M4, RS/LS.


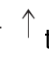
#### 3. CANCEL TURBO:

Hold the button that needs to be canceled+ double click  the; the LED2 will flash twice in orange.

#### 4. CANCEL ALL BUTTONS' TURBO:

Double click the, LED2 will lash twice in orange and all TURBO will be canceled.

#### 5. CHANGE THE FREQUENCY OF THE TURBO:

Hold  +  to changes the frequency in 5/s, 10/s, 20/s (The TURBO frequency won't be changed by onboard profiles).

## MACRO RECORDING

#### 1. MACRO RECORDING:

Press+ (M1/M2/M3/M4), the LED2 will breathe in red the ARMORX Pro enters recording mode. Press the buttons on the controller after the recording is finished click once LED2 will flash twice means end recording. The LED2 will slowly flash during the MACRO is being executed.

#### 2. THE BUTTONS SUPPORT RECORDING:

ABXY,D-pad, LT/RT/LB/RB, M1-M4, RS/LS, joystick.

#### 3. ANCEL MACRO:

Hold the button need to be canceled (M1-M4) and double click the, LED2 will flash twice in red means cancel Success.

#### 4. CANCEL ALL MACRO:

Double click the, LED2 will flash twice in red means cancel success.

## ADJUSTMENT OF RUMBLE MOTOR

1. Press+to change the vibration intensity of trigger motor. 4 gears vibration intensity can be changed cyclically: strong, medium, weak, off.
2. Press+to change the vibration intensity of handle motor. 4 gears vibration intensity can be changed cyclically:

strong, medium, weak, off.

## ON-BOARD PROFILE

ARMORX Pro has 3 on-board profiles can be cycle switched by click the [e].  
The color of LED1 on the left side shows different profiles.

1. Orange is the first profile.
2. Green is the second profile.
3. Blue is the third profile.

## BATTERY

The ARMORX has 1300mAh to satisfy 10 hours using. The biggest factor affecting battery life is the vibration intensity of motor. The high-frequency vibration will greatly reduce battery life.  
The charging power is 5V/1A, and it will take 2 hours to fully charge.

1. **Low battery:** When the battery is too low, the controller will vibrate 3 times and the LED1 will flash quickly in red. It will cycle every 5 minutes.
2. **Charging:** When the ARMORX Pro is charging LED1 will be always on in red. And it will be always on in green after fully charged.

## DETAILED FUNCTIONAL OPERATION INSTRUCTIONS

Please access "BIGBIG WON Official Website>Support" to check the instructions  
<https://www.bigbigwon.com/support/>

## NOICE Please read these Precautions carefully,

- CONTAINS SMALL PARTS. Keep out of reach of children under the age of 3.
- Seek immediate medical attention if swallowed or inhaled.
- DO NOT use the product near fire.
- DO NOT expose to direct sunlight or high temperatures.
- DO NOT leave the product in a humid or dusty environment.
- DO NOT impact the product or cause it to fall due to strong impact.
- DO NOT touch USB port directly or it might cause malfunctions.
- DO NOT strongly bend or pull cable parts.
- Use a soft, dry cloth while cleaning.
- DO NOT use chemicals such as gasoline or thinner.
- DO NOT disassemble, repair or modify.
- DO NOT use for purposes other than its original purpose.
- We are NOT responsible for accidents or damage when used for non-original purposes.
- DO NOT look directly at the optical light. It might damage your eyes.
- If you have any quality concerns or suggestions, please contact BIGBIG WON or your local distributor.
- PS5, PS4, PS3, DualSense and DualShock are registered trademarks or trademarks of Sony Computer Entertainment Inc. Windows, Xbox One, Elite and Elite Series 2 are registered trademarks of Microsoft Inc. Switch and Switch Lite are registered trademarks of Nintendo Inc. All rights reserved. All other trademarks are

the property of their respective owners. Photos and illustrations are not binding. Contents, designs and specifications are Subject to change without notice and may vary from one country to another. This product is not distributed under an approved official license and is not sponsored or endorsed by Sony Computer Entertainment Inc. This product is not manufactured by Sony Computer Entertainment Inc or Microsoft Inc or Nintendo Inc.

## **FCC**

### **Caution**

#### **Labeling requirements**

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### **Changes or modification warning**

- Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### **Information to the user.**

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### **Scan the QR code to watch video tutorial**

**Visit the official support page for a detailed video tutorial:** [www.bigbigwon.com/support](http://www.bigbigwon.com/support)

you have any questions or issues, please submit a support request through the ways below: amazon AMAZON Product page> Seller profile> "Ask a question"

**Customer Service Address:** [support@bigbigwon.com](mailto:support@bigbigwon.com)

#### **BIGBIG WON SUPPORT**







## WELCOME TO THE BIGBIGWON COMMUNITY

The BIG BIG WON community is built to connect those who seek the winning edge. Join us in Discord and Follow our social channels for the latest offerings, exclusive event coverage, and opportunities to score BIGBIG WON hardware.

## BIGBIG WON DISCORD



## Documents / Resources

	<a href="#">BIGBIG WON ARMOR-X Pro Wireless Back Button for Xbox Series XIS Controller</a> [pdf] User Manual ARMORX, 2AYJK-ARMORX, 2AYJKARMORX, ARMOR-X Pro Wireless Back Button for Xbox Series XIS Controller, ARMOR-X Pro, Wireless Back Button for Xbox Series XIS Controller, ARMOR-X Pro Wireless Back Button, Wireless Back Button, Back Button
	<a href="#">BIGBIG WON Armor X PRO Wireless Back Button</a> [pdf] User Manual Armor X PRO Wireless Back Button, Armor X PRO, Wireless Back Button, Button

## References

-  [SUPPORT - BIGBIG WON](#)
-  [SUPPORT - BIGBIG WON](#)