



BIGBIG WON BLITZ Wireless Gamepad Game Controller User Manual

[Home](#) » [BIGBIG WON](#) » BIGBIG WON BLITZ Wireless Gamepad Game Controller User Manual 

Contents


- 1 BIGBIG WON BLITZ Wireless Gamepad Game Controller
- 2 NAME OF EACH PART
- 3 PACKAGE CONTENTS
- 4 SUPPORTED PLATFORM
- 5 MODE SWITCH
- 6 MACRO RECORDING
- 7 JOYSTICK CALIBRATION
- 8 VIBRATION ADJUSTMENT
- 9 FCC Caution
- 10 Documents / Resources
 - 10.1 References



BIGBIG WON BLITZ Wireless Gamepad Game Controller



NAME OF EACH PART

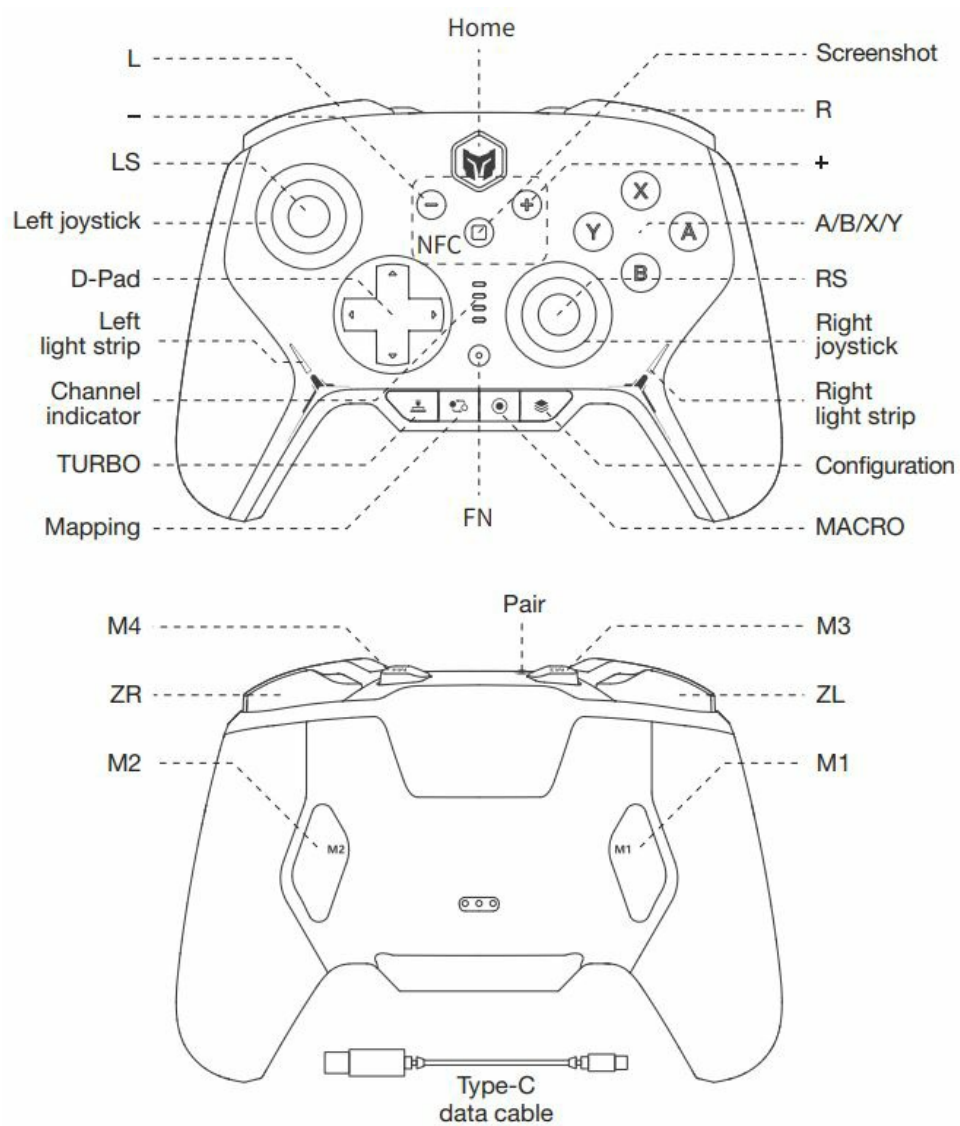

PACKAGE CONTENTS

- Blitz 1
- User Manual 1
- Quality Certificate 1
- USB cable 1

SUPPORTED PLATFORM

- Switch / win10/11 / Android/iOS

TURN ON/OFF

Press the HOME button for 3 seconds to turn on/off the controller.

CONNECTION

The controller is equipped with two connection ways, Bluetooth connection and wired connection. The connections are as follows: Bluetooth connection: After the controller is switched on, press the top pairing button for 3 seconds; the HOME indicator flashes quickly, meaning it is in pairing status; the HOME indicator will become solid after the connection is successful. (In Switch mode, the bright channel indicator depends on the sequence of the controller on the console) Wired connection: After the controller is switched on, use a type-C cable to connect the controller and the console.

Note: Please note that the controller is compatible with Switch and Xinput modes. After the connection with the console, you need to switch to the mode corresponding to the machine. The switch is the default mode. Steam: To connect with Steam, you need to tick "Xbox Configuration Support" in the "Settings-Controller-GENERAL CONTROLLER SETTINGS" of Steam otherwise the controller may not be recognized in games. Switch: After connecting the Switch via a wired connection, you need to enable the "System Settings – Controller and Sensors – Pro Controller Wired Communication".



MODE SWITCH


The controller is compatible with Switch and Xinput. You need to switch to the corresponding mode for proper use. The settings are as follows: Press A + HOME for 3 seconds until the HOME turns red, meaning it has switched to the Switch mode; Press B + HOME for 3 seconds until the HOME turns green, meaning it has switched to the Xinput mode.

Notice: If you need to connect iOS and Android mobile with Bluetooth please turn the controller to Xinput mode.

REMAP



The controller is equipped with four removable additional buttons and is compatible with key mapping settings.

The settings are as follows: Set key mapping: Press the 0  + (M1/M2/M3/M4); the FN indicator shows a breathing status, meaning it is in key mapping status; Then press the  target button mapped to M1/M2/M3/M4; the FN indicator flickers twice, meaning the key mapping is successful.




Clear single key mapping: Hold the button for clearing key mapping (M1/M2/M3/M4) and double click the indicator flashes, twice, meaning. the key mapping of the selected  button is cleared successfully. Clear all key mapping: Double-click the 5, and the FN indicator flashes twice, meaning the key mapping of all the buttons is cleared successfully. TURBO The controller supports turbo settings. The supported buttons include A/B/X/Y, 1/\</>, UR/ZUZR, M1/M2/M3/M4.

The settings are as follows




Set TURBO: Hold the  "target key"; the FN indicator flickers twice, meaning the function is enabled

successfully. (When TURBO is operated, the FN indicator flickers with the current turbo frequency) Clear single TURBO: Hold the “target button” and double-click the FN  indicator flickers twice, meaning the function of this button is disabled successfully. Clear all TURBO: Double-click  the, FN indicator flickers twice, meaning the function of all the buttons is disabled successfully. TURBO frequency: You can switch to any of the three frequencies, 5s, 10s, and 20s, by pressing FN + <. The default is 5s.

MACRO RECORDING

The controller supports MACRO recording. Each set of MACRO must be bound with a back key (M1/M2/M3/M4) as a trigger switch. The keys that use the function include A/B/XY, 1/4/<-/>, L/R/ZL/ZR, joystick L/joystick R, and joystick. The settings are as follows: Record MACRO: Hold the  (M1/M2/M3/M4) for 3 seconds; the FN indicator is in a breathing status, meaning it is in MACRO recording. Press any  key for the MACRO recording, and click the O key after the recording is finished; the FN indicator flickers twice, meaning the recording is finished. (When MACRO is operated, the FN indicator is flashing slowly status until the MACRO operation is finished) Clear single MACRO: Press the “target key” (M1/M2/M3/M4)” and double click the  FN indicator flickers twice, meaning the MACRO of the selected key is cleared successfully. Clear all MACRO: Double-click the O, and the FN indicator flickers twice, meaning the function of all the buttons is disabled successfully.

ONBOARD CONFIGURATION

Switch mode: Click  the and the channel indicator will change from red to white, which means entering the configuration switch mode. The four indicators  in this mode show four different onboard configurations; Click the & again to start the configuration switching, and the indicator lights will switch in order from top to bottom. The first  indicator is the first configuration and so on. If there is no action within the 5s configuration switch mode, it will automatically exit the mode, the indicator will change from white to red, and the indicator will back to the channel indicator Xinput mode: There is no channel indication function in this mode, so the indicator light is white by default, indicating the current onboard configuration. In this mode, clicking the & will switch the configuration directly. Reset the configuration: Press the Configuration switch button for 3 seconds to clear all settings of the current configuration.

JOYSTICK CALIBRATION

1. When the joystick drifts and cannot be pushed to the maximum value, you can try to calibrate the joystick, and the operating method is as follows:
2. Press and hold the + and – keys at the same time for 3 seconds, and the left and right light strips will breathe in orange at the same time, which indicates entering the calibration mode.
3. Push the joystick to the limit value and rotate it at a constant speed. Repeat the operation for 3-5 times.
4. Finally, press the + and – keys at the same time, and the left and right light strips will go out after double flashing, which indicates the calibration is completed.

GYROSCOPE CALIBRATION

When the gyroscope of the controller drifts, you can try to calibrate the gyroscope, and the method is as follows:

1. Place the controller on a horizontal table, press the + key and screenshot key at the same time, and the left and right light strips will breathe in purple at the same time, which indicates entering the calibration mode.
2. Wait for a moment, and when the left and right light strips double flash in purple, it indicates the calibration is completed.

VIBRATION ADJUSTMENT

The controller is equipped with four levels of vibration adjustment. The settings are as follows: Press the FN + → to circularly switch to any of the four vibration levels of the trigger motor, namely Strong, Medium, Weak, and Off.

BATTERY INSTRUCTIONS

eight times per second in times ever vine to comingle it tan. After connecting to the power supply, the light strip will red breathing indicated in the charging state. The light strip will return to its original state when the charging is finished. Charging stand: stand without any light indication in the standby status. When the controller is connected to the stand the stand's lights will turn on, which means the controller is charging. If the light is always on in green, it means the controller battery is full.

DETAILED FUNCTIONAL OPERATION INSTRUCTIONS

Please access "BIGBIG WON Official Website>Support" to check the instructions

<https://www.bigbigwon.com/support/>

YOUR RIGHTS

12-month limited warranty from the date of purchase.

WELCOME TO THE BIGBIGWON COMMUNITY

The BIG BIG WON community is built to connect those who seek the winning edge. Join us in Discord and Follow our social channels for the latest offerings, exclusive event coverage, and opportunities to score BIGBIG WON hardware.

BIGBIG WON DISCORD

Scan the QR code to watch video tutorial

Visit the official support page for a detailed video tutorial / FAQ / User manual / APP Download

www.bigbigwon.com/support



FCC Caution

Labelling requirements. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modification warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Information to the user.


Note: This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used by the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.







RF warning for Portable devices

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction. According to §15.247(e)(i) and §1.1307(b)(1), systems operating under the provisions of this section shall be operated in a manner that ensures that the public is not exposed to radio frequency energy levels more than the Commission’s guidelines.

Documents / Resources

	<p>BIGBIG WON BLITZ Wireless Gamepad Game Controller [pdf] User Manual BLITZ Wireless Gamepad Game Controller, BLITZ, Wireless Gamepad Game Controller, Gam epad Game Controller, Game Controller</p>
--	---

References

-  [SUPPORT - BIGBIG WON](#)
-  [BIGBIGWON | Play big won big](#)
-  [SUPPORT - BIGBIG WON](#)
-  [BIGBIGWON | Play big won big](#)
-  [BIGBIGWON | Play big won big](#)
-  [SUPPORT - BIGBIG WON](#)
- [User Manual](#)