



## BIGFUN Electronic Keyboard Instruction Manual

[Home](#) » [BIGFUN](#) » BIGFUN Electronic Keyboard Instruction Manual

Contents [ [hide](#) ]

- [1 BIGFUN Electronic Keyboard](#)
- [2 Illustration](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

# BIGFUN

### BIGFUN Electronic Keyboard



#### IMPORTANT NOTICE FOR SAFTY USE

1. This product is not including power adaptor. It is shared the adaptor with your mobile phone which specification

should be INPUT: 100-240V- 50/60Hz OUTPUT DC 5V, electricity should be 1000mA or above. The adaptor to be used with this product should be regularly examined for potential hazard, such as damage to the cable or cord, plug, enclosure of other parts. In the event of such damage, this product must not be used until the damage had been properly removed.

2. This product is including USB cable. If users choose other USB cables, please check carefully if there's any damage on it. The mobile phone original USB cable and adaptor are recommended to use with this product. Inferior USB cable and adaptor will bring noise and other potential hazard when you play this keyboard.
3. This product is not suitable for children under 3 years old.
4. Do not play the music aloud for a long time. Too loud music will hurt your hearing.
5. Do not place this product in below locations; otherwise it may cause fire or electric shock.
  - Humid or dusty place
  - Kitchen or place that have lamp black
  - Near air conditioner, electric blanket, exposed under the sunlight or any other place would warm this keyboard up.
6. Do not put this product near TV, Radio or beside other electronic product which may cause audio or video receiving interference.
7. Unplug the adaptor before cleaning this product or when you are not using it for a long time.

## Illustration

1. Power on/off
2. Tones
3. Volume + –
4. Drum combination / Animal sound
5. Stop
6. Demo A
7. Demo B
8. Record
9. Program
10. Play
11. Tempo
12. Rhythm
13. DC 5V Micro-USB port

## CHOICE OF POWER SUPPLY

1. **DC adaptor:** only use DC adaptor with USB connector which voltage output should be DC 5V, electricity should be 1000mA or above. Use other voltage adaptor may cause malfunction.
2. **Computer:** only connect to USB with voltage output DC 5V, electricity should be 1000mA or above. Use other voltage computer USB may cause malfunction.

## TURN ON FOR PLAYING

Choose one of the above power supplies and connect the USB cable with the keyboard. Press the power on/off button and play any white or black keys, if there's a piano rings up, the keyboard works.

## Sleep function:

1. When the keyboard is not playing more than 3 minutes, it will automatically enter the sleep function.
2. To wake it up, press any white or black keys.

## HOW TO PLAY

1. Demos
  - Press DEMO A , it will play 11 demos in sequence. The song will replay when it is finished. If you want to stop, then press STOP button.
  - Press DEMO B, it will play 11 demos randomly. If you want to stop, then press STOP button.
2. Volume Control: Press + or – button to adjust the volume.
3. Tempo Control Press + or – button to adjust the tempo.
4. Tone The factory setting tone is piano. There're totally 8 tones for you, just press T1 to T8 to choose.
5. Rhythm There're totally 8 rhythms for you, just press R1 to R8 to choose.
6. Drum combination There're 4 percussions with 4 different buttons.
7. Drum/Animal sounds exchange There're 4 kinds of animal sounds: dog, frog, duck and bird. Press this key to enter the animal sound mode.
8. Record Press REC button and you can record the music you play.
9. Play Press PLAY button to play the music you just recorded.
10. Program Press PROG button to enter this mode, and press the percussion buttons to record your own percussions. Please record 16 percussions by one time. Pay attention: if pressing less or more than 16 percussions, the program record won't be active. And press PLAY button to play the sound you program.
11. Stop Under the mode of RHYTHM, PLAY, DEMO A/B/C, press STOP to stop the playing.

## Common problems and solutions

Problem	Solution
No sound after pressing the power on/off	Check the DC adaptor is correctly plugged in or not. Check the USB cable is correctly or tightly plugged in by both ends.
The keyboard stops during playing.	Check if the power supply is disconnected. Check if the USB cable is disconnected by either one end, or improperly plugged.

## Operation notice:

1. This product should not be placed near these accessories, such as radio, television, tuner to avoid the mutual interference when receiving audio or video while using.
2. Please use the nearest power socket , so that you can unplug the adaptor immediately when malfunction or other necessary events happened.
3. Please unplug the adaptor if not using for a long time.
4. Please do not tear down the inner parts or remake this product. This product is not including any parts which can be remained by users. If anything unusual , please stop using.

