



bimar RSH-WS027 Presa 16A, WiFi 16A WiFi Socket Instruction Manual

[Home](#) » [bimar](#) » bimar RSH-WS027 Presa 16A, WiFi 16A WiFi Socket Instruction Manual 



RSH-WS027 Presa 16A, WiFi 16A WiFi Socket Instruction Manual

Contents

- [1 RSH-WS027 Presa 16A, WiFi 16A WiFi Socket](#)
- [2 SAFETY NOTICES](#)
- [3 INSTALLATION](#)
- [4 DESCRIPTION](#)
- [5 Pairing the device with your smartphone](#)
- [6 Use](#)
- [7 CLEANING AND MAINTENANCE](#)
- [8 GUARANTEE](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

RSH-WS027 Presa 16A, WiFi 16A WiFi Socket



This symbol tells you to read these instructions carefully before using the appliance, and to inform any third parties if necessary. Keep the instruction booklet for further reference throughout the lifetime of the appliance. If when reading these instructions you find any parts difficult to understand or have

any doubts, contact the manufacturer at the address provided on the back page before using the product.



Only use the appliance indoors.



WARNING!

Warnings and installation, use, cleaning and maintenance procedures may vary slightly from those described in this manual; for further details, please consult the updated on-line manual at www.bimaritaly.it.

SAFETY NOTICES

- The smart plug allows switching on and off of all the devices connected to it, thought APP such as: fans, ovens, grills, lights, fan, heaters, lamps, washing machines, etc.
- This device intentionally emits and/or receives radio waves for radiocommunication and/or radiodetermination purposes.

Examples of household appliances are appliances for typical household functions, those used in the home, or those which may be used for typical household functions even by untrained persons:

- in shops, offices and other similar workplaces;
- on farms and in similar locations;
- by the customers of hotels, motels and other residential environments;
- in bed and breakfast establishments.

Any other use constitutes misuse and is hazardous. The manufacturer cannot be held liable for any damage arising from misuse or incorrect or irresponsible use, and/or from repairs carried out by unqualified persons.

- The device is not a toy. The device must be kept out of reach of children and people with impaired physical, sensory or mental capabilities and pets. Children must be supervised to ensure that they do not play with the device. Cleaning and maintenance intended to be carried out by the user should not be done by children unless they are supervised.
- Check that the device does not come into contact with water or other liquids. If it is accidentally wet or immersed in a liquid, first disconnect the power supply by turning off the control panel switch, and only then remove the plug from the power socket. Dry both the plug and the power socket carefully before reactivating the power socket. Reconnect the plug to the power socket and then use the appliance. If in doubt, call in qualified staff.
- To avoid all risk of electric shock, never immerse the device in water or any other liquid.
- Do not touch the appliance with wet hands or feet.
- Never leave the device exposed to the weather (sun, rain, etc.).
- If the appliance is dropped or malfunctions, disconnect. Check all parts for damage and do not switch it on unless certain it is intact: if in doubt, call in qualified staff.

INSTALLATION

- After removing the packaging, check that the appliance is intact; if in doubt, do not use it and call in qualified staff. Packaging components (plastic bags, nails, etc.) must not be left within reach of children since they are potentially hazardous; dispose of them in accordance with the current law.
- Before each use, check that the appliance is in good condition: if in doubt, call in qualified staff.

- Make sure that the appliance is functioning correctly; otherwise, switch off the appliance and have it checked by qualified staff.
- Place the device in the same room (there must be no barriers between the appliance and the device) on a smooth, horizontal, stable, non-slip supporting surface large enough to prevent it from falling, well away from other heat sources (stoves, fan heaters, etc.), flammable materials (curtains, liquids, gas cylinders, etc.) and from sinks etc. containing liquids.

DESCRIPTION

Smart device with integrated Wifi module, usable via Smartphone through the applications with Android or iOS operating systems.

- Generally, routers have double bands set: (2.4 and 5) GHz; most dual-band routers automatically broadcast on both bands, for activation and configuration (of the fixed frequency at 2.4GHz) it is necessary to access the IP address of the router and look for the network settings section.
- Check that the router is for domestic use, that there are no access restrictions except the password, that the Wi-Fi network is 2.4 GHz, and that there is a strong, uniform Wi-Fi signal in the room where the device is to be installed.
- Make sure that the smartphone is connected to the wi-fi network to be used for the appliance.

First Installation/Setup

1.1 Install the “BIMAR life Smart” App via Google Play (Android) or AppStore (iOS), or scan the QR code provided here.

For Android



For iOS



<http://uqr.to/c8dm>

<http://uqr.to/c8dl>

1.2 Once installed, the app icon appears. Click the “Bimar Live Smart” icon to run the app.



1.3 At the first access, register and fill in your credentials:

- click on “Create a new account”, confirm “I agree” for the data relating to the Privacy Policy (by pressing: ” ” the text of the informative report pursuant to Article 13 of the 2016/679 European Regulation appears, while by selecting “User Agreement” the Bimar srl Service Agreement appears)
- enter your email address (select the desired country)

– click on the writing “Get the verification code”, wait for a few seconds and then enter the code received in the “Verification code” part using your registration email address (possibly also check the Junk e-mail folder, if you don’t receive it in the inbox folder).

1.4 Enter your personalized password and click “Done”.

If the procedure is carried out correctly, the control panel screen for using the application appears.

Pairing the device with your smartphone

2.1 Insert the plug into the socket, press the “ ” for about five seconds: symbol on the display will flash quickly; release the button.

2.2 Opening the APP on your smartphone: on the first screen click “ADD DEVICE” or click on “ ” in options, at the top right.

 
 
 
 
 


2.3 Next, click on the writing “ ” / Smart plug”.

2.4 Then, “set up Wi-Fi”, Enter: Name and PASSWORD of your Wi-Fi network, and click on the “Next” symbol to activate the connection.

2.5 On the next screen: click on the writing “Confirm” to activate, then the LED will flash quickly; after this press on the “Next” symbol.

2.6 The countdown will start: Scanning devices ⇒ Register the device on Cloud ⇒ Start the device that stops when the connection between your device and the smartphone has occurred ⇒ End.

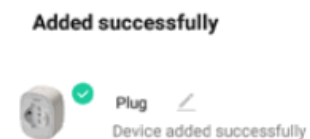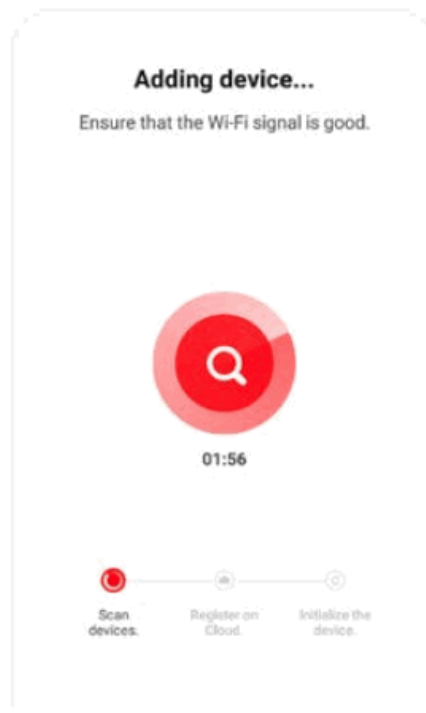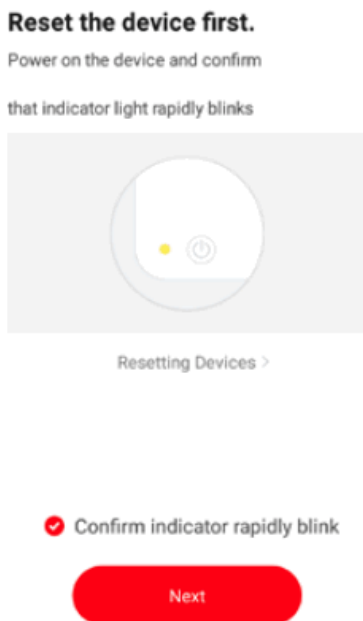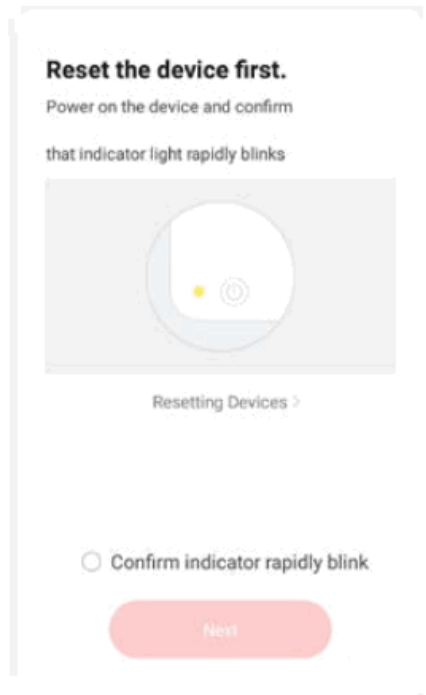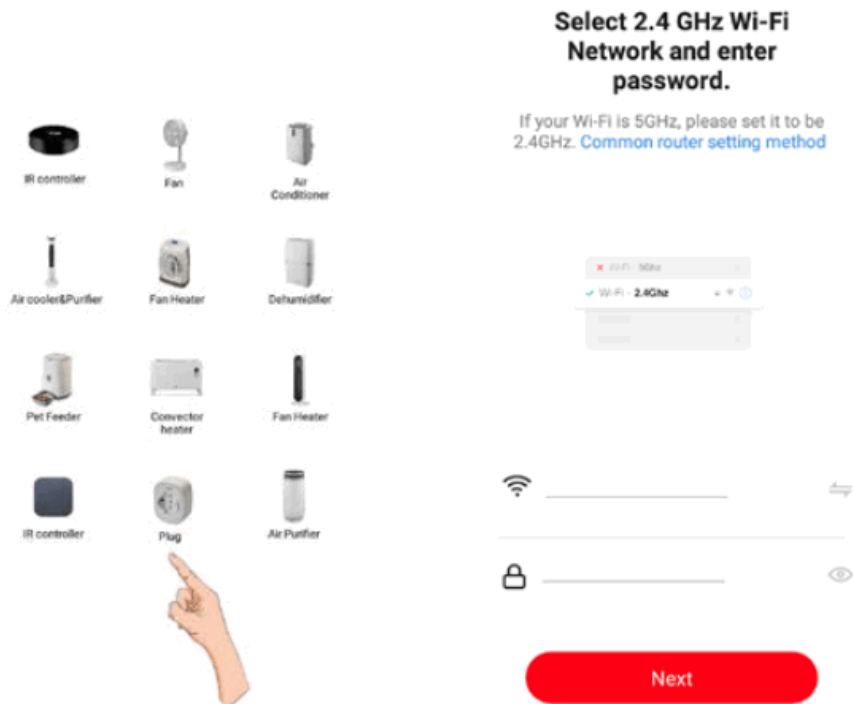



The device can also be paired using the “AP Mode”, press the button for about five seconds; the light on the front will flash quickly. Access the smartphone Wi-Fi settings and connect to the “BimarLive Smart xxx” or “Smart Lifexxx” network, then press “connect now”.






In case the operations described above do not work correctly, you need to reset the device, operating in this way: remove the device from the power supply and leave the device disconnected for 30 seconds. Connect the device to the power supply again, press the button “ ” for about five seconds the front light will flash quickly and release the button.

Settings and customisations.

Open the smartphone screen and press  in the bottom right corner to customise the following functions: Home management, Message centre, Assistance centre, Configure (audio, alerts, info, cache memory clear).

Press  in the bottom centre to customise operation of the device to suit the various scenarios or operating situations provided by the APP (for example: Back home, Leaving home, Dawn, Goodnight, Temperature, Humidity, Weather, Air quality, Dawn/dusk) or in combination with other devices.

Press  in the bottom left corner and then in the top of the screen, for example:  to customise (update and/or change where permitted) the appliance's position or the outdoor wind speed, air pressure, humidity and temperature (see right).

Press  top right to customise the following: Change Device name, Device position, Check Network, Third-party devices supported: Amazon Alexa, Google Assistant, Device, sharing, Create a Comment group, Device Info, Feedback, Update Firmware

The smartphone must be connected to Wi-Fi or cellular data network for remote control.

Voice control

The device is compatible with Amazon Alexa and Google Assistant voice controls. Open the corresponding App/connect the Skill (make sure that the account and password used are the same as those of the “Bimar Live Smart” app) and follow the settings.

Google Home: some basic vocal commands are:

– “OK Google” or “Hey Google”, turn on XX (name of the device)

- “OK Google” or “Hey Google”, turn off XX (name of the device)
- etc.

Amazon Alexa: some basic vocal commands are:




- “Alexa”, turn on XX (name of the device)
- “Alexa”, turn off XX (name of the device)
- etc.

Note: the voice control has preset functions, our customer service (assistenza.privati@bimar-spa.it) is always available to send an updated list of controls supported by the devices.

Use

Insert the plug into the power outlet.

Description of the control panel of the fan with smartphone.

1. Button “”: press to switch on or switch off of the device.
2. Button “ ”: press to select:
 - 2.1 Timer (Min. time: 1 minute. Max time: 23hours and 59 minutes). When the device is switch off and the time is selected, at the end of the selected value the device turns on, while if the device is switch On and the time is selected, at the end of the selected parameter the device turns off. To deactivate the timer, press the “” symbol.
 - 2.2 Weekly programmer: sets the on/off periods of each day of the week. Programming can be: ON timer, or OFF timer where you can select the on and off periods (hours and minutes: AM or PM) once or for each day of the week.
3. Statistics “” button: allows you to check the consumption of the device (voltage, power, current and consumption in Kwh) connected to the smart socket in real time, allowing you to also view the history.
To activate the device in manual mode, press the button on the socket and it is backlit (On), if pressed again the light is switched off (Off).
For long periods of inactivity, remove the plug from the socket.

CLEANING AND MAINTENANCE

Warning: before cleaning the appliance, disconnect the plug from the power socket.

- Clean the body of the device with a soft, damp cloth: do not use metal scouring pads or abrasive products.
- If the device is to be out of use for a long period of time, cover it and store it in a dry place. It is best to return it to its original packaging to protect it from dust and damp.
- Do not immerse the appliance in water or any other liquid and do not wash it under running water or in a dishwasher.

Information for correct disposal of the product under the European Directive 2011/65/EU.

At the end of its lifetime, the product must not be disposed of with ordinary urban waste. It can be consigned to the special waste recycling centres provided by local government, or by the retailers who provide this service. Proper disposal of a household appliance prevents possible detrimental effects on the environment or health arising from its incorrect disposal and allows the recovery of its constituent materials, generating major savings of energy and resources. The product bears the crossed-out symbol of a wheeled rubbish bin to indicate that it must be disposed of separately. Illegal dumping of the product by the user will be subject to prosecution under the

relevant law.

GUARANTEE



This guarantee begins on the date of purchase of your appliance and covers all material and manufacturing defects during the legal length in use in the country of purchase of the appliance. Do not forget to keep your receipt in case of a claim under this warranty. No guarantee claims will be accepted for broken accessories, defects resulting from inappropriate use, excessive wear due to intensive use, wrong use due to the non-observance of the instruction manual, or failure to descale where appropriate or otherwise clean/maintain your item in line with the instructions and good practise. No guarantee claims will be accepted if the appliance has been modified or if some attempts have been made to repair the appliance. In such case, the vendor cannot be held responsible in case of accidents. In the event of claim, in the first instance, please contact your vendor who will inform you about their warranty procedure or send the appliance cleaned, well packed and with a short, easily readable description of the default as well as the receipt freight prepaid to the customer service.



Via G.Amendola, 16/18
25019 Sirmione (BS) – ITALY

www.bimaritaly.it

Servizio clienti:



Assistenza.privati@bimaritaly.it

Documents / Resources

	<p>bimar RSH-WS027 Presa 16A, WiFi 16A WiFi Socket [pdf] Instruction Manual Presa 16A WiFi 16A WiFi Socket, Presa 16A, Presa WiFi 16A WiFi Socket, WiFi 16A WiFi Socket, WiFi Socket, 16A WiFi Socket, 16A Socket, Socket, RSH-WS027 Presa 16A WiFi 16A WiFi Socket, RSH-WS027</p>
--	--

References

- [Site Under Construction](#)
- [Small Bimar appliances. Quality and Design.](#)

[Manuals+.](#)