



BIRD-X Peller Handheld Fat Laser Instruction Manual

[Home](#) » [Bird-X](#) » BIRD-X Peller Handheld Fat Laser Instruction Manual 

Contents

- [1 BIRD-X Peller Handheld Fat Laser](#)
- [2 Product Information](#)
- [3 Product Features](#)
- [4 Usage Instructions](#)
- [5 Bird-X Handheld Fat Laser Operating Instructions](#)
- [6 BATTERY REPLACEMENT INSTRUCTIONS](#)
- [7 Documents / Resources](#)



BIRD-X Peller Handheld Fat Laser



Product Information

The Bird-X Handheld Fat Laser is a device designed to deter birds from congregating in certain areas. It emits a laser beam that is visible to birds and helps to scare them away.

Product Features

- Handheld design for easy use
- Red laser beam visible to birds
- Trigger guard for preventing unintended laser activation

Usage Instructions

1. Before using the Bird-X Handheld Fat Laser, remove the red trigger guard (1) and keep it aside for future shipping or storage. The trigger guard is used to prevent unintended laser activation when the device is not in use.
2. When aiming the laser, direct it at the ground near the birds or focus it on the body of a prominent bird within the flock.
3. As the laser beam reflects off the ground or nearby objects, the birds will recognize the laser as an approaching threat and may be scared away.

Note: The Bird-X Handheld Fat Laser should be used responsibly and in accordance with local regulations regarding laser usage.

Bird-X Handheld Fat Laser Operating Instructions



USAGE INSTRUCTIONS

1. Before use, remove the red trigger guard (1) and store it for future shipping or storage. The trigger guard prevents unintended laser activation when not in use.
2. When aiming the laser, direct it at the ground near the birds or focus it on the body of a prominent bird within the flock.
3. As the laser beam reflects off the ground or nearby objects, the birds will recognize the laser as an approaching threat and raise an alarm. Laser “harassment” will prompt the flock to disperse and take flight, ensuring their safety.

BATTERY REPLACEMENT INSTRUCTIONS

1. To safely replace the batteries, pivot open the battery door (2).
2. Insert four (4) AAA batteries into the compartment, ensuring correct polarity (+/-) alignment.
3. Always replace all four batteries simultaneously to maintain optimal performance and prevent potential issues.
4. Close the battery door securely to prevent accidental dislodging during use.

WARNINGS

- **Avoid Eye Exposure:** Never look directly at the laser beam or point the laser at anyone’s eyes.
- **Avoid Aircraft Hazards:** Do not point the laser into the sky, especially if airplanes are in the vicinity. Interfering with aircraft can lead to severe legal consequences.
- **Battery Precaution:** For extended periods of inactivity (greater than 1 month), it is recommended to remove the batteries from the device. This helps prevent unintentional activation and ensures safety when not in use.

Contact our bird control specialists at Bird-X • 800-662-5021 or 312-226-2473 • solutions@bird-x.com • www.bird-x.com

Documents / Resources



BIRD-X Peller Handheld Fat Laser [pdf] Instruction Manual
Peller Handheld Fat Laser, Handheld Fat Laser, Fat Laser, Laser