



# BITMAIN AntMiner S9k 14T Bitcoin Miner Installation Guide

[Home](#) » [BITMAIN](#) » BITMAIN AntMiner S9k 14T Bitcoin Miner Installation Guide 



**S9k Server  
Installation Guide  
Document Version 1.0  
Jun. 2019**

© Copyright Bitmaintech Pte. Ltd. 2007 – 2019. All rights reserved.

Bitmaintech Pte. Ltd. (Bitmain) reserves the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice.

Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to Bitmain's terms and conditions of sale supplied at the time of order acknowledgment.

Bitmain warrants the performance of its products to the specifications applicable at the time of sale in accordance with Bitmain's standard warranty. Testing and other quality control techniques are used to the extent Bitmain deems necessary to support this warranty.

Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

Bitmain assumes no liability for third-party applications assistance. Customers are responsible for their products and applications using Bitmain components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

Bitmain does not warrant or represent that any license, either express or implied, is granted under any Bitmain patent right, copyright, or other Bitmain intellectual property right relating to any combination, machine, or process in which Bitmain products or services are used. Information published by Bitmain regarding third-party products or

services does not constitute a license from Bitmain to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from Bitmain under the patents or other intellectual property of Bitmain.

Resale of Bitmain products or services with statements different from or beyond the parameters stated by Bitmain for that product or service voids all express and any implied warranties for the associated Bitmain product or service and is an unfair and deceptive business practice. Bitmain is not responsible or liable for any such statements.

All company and brand products and service names are trademarks or registered trademarks of their respective holders.

All text and figures included in this publication are the exclusive property of Bitmaintech Pte. Ltd.

(Bitmain), and may not be copied, reproduced, or used in any way without the express written permission of Bitmain. Information in this document is subject to change without notice and does not represent a commitment on the part of Bitmain. Although the information in this document has been carefully reviewed, Bitmain does not warrant to be free of errors or omissions. Bitmain reserves the right to make corrections, updates, revisions, or changes to the information in this document.

**Bitmaintech Pte. Ltd.**

**Tel: +86-400-890-8855**

[www.bitmain.com](http://www.bitmain.com)

## **Contents**

**1 Overview**

**2 S9k Server Components**

**3 Connecting to the Power Supply**

**4 Documents / Resources**

**5 Related Posts**

## **Overview**

The S9k server is Bitmain's newest version in the S9k server series. All S9k servers are tested and configured prior to shipping to ensure easy setup.



**Front View**



**Back View**




**Placement**



1. You must provide your own ATX power supply.
2. Please refer to the layout above to place your goods in usage in case of any damage.


## **S9k Server Components**

The main components and controller front panel of the S9k server are shown in the following figure:

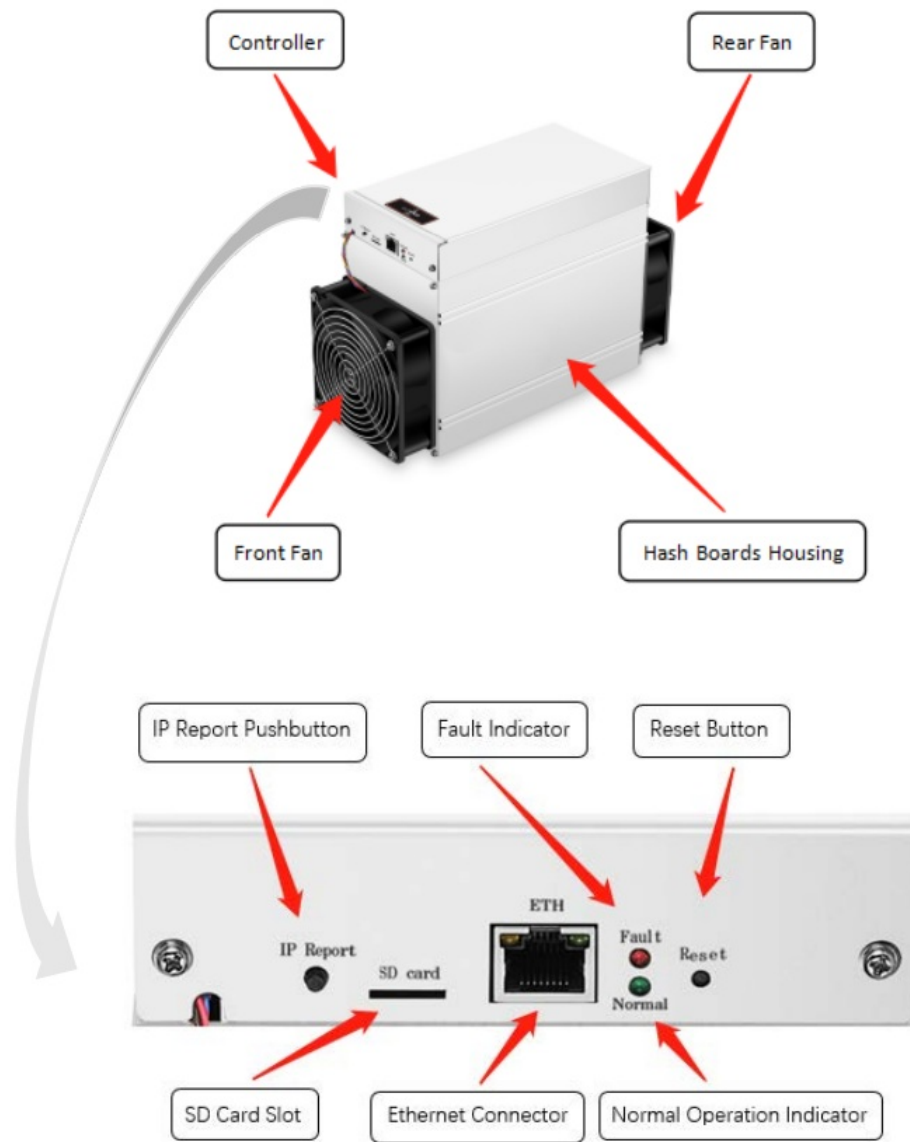


## Connecting to the Power Supply


1. Remove the screw at the position indicated by A with a cross screwdriver.

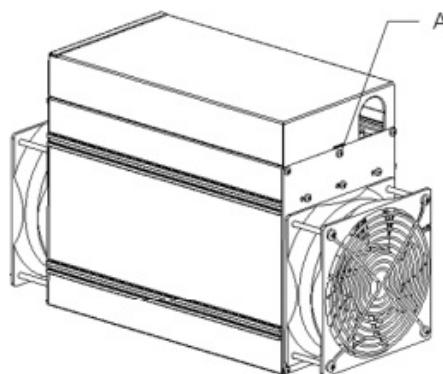


2. Lift the upper cover of the control board upward in the direction indicated by the arrow shown in the figure and then pull it in the upper rear direction.

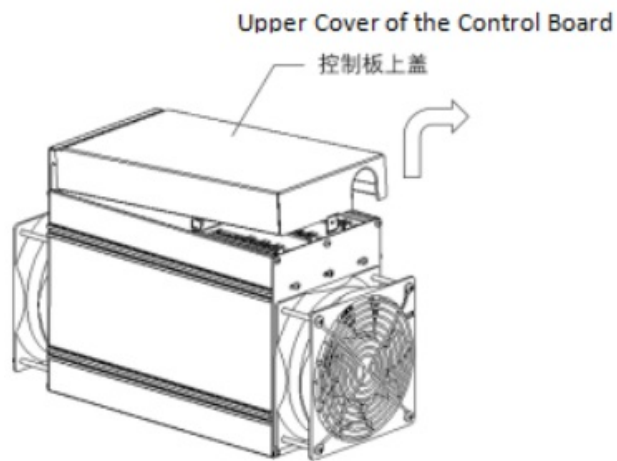

3. The position and name of the socket are shown in the figure below after removing the upper cover of the control board.

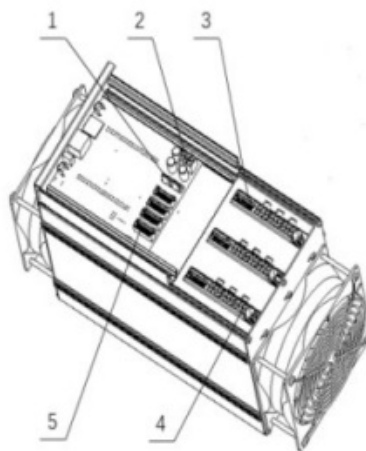

## Documents / Resources

	<p><a href="#">BITMAIN AntMiner S9k 14T Bitcoin Miner</a> [pdf] Installation Guide AntMiner S9k, 14T Bitcoin Miner</p>
---	--