

BITMAIN
E11 Antminer
ETC Miner



BITMAIN E11 Antminer ETC Miner User Manual

[Home](#) » [BITMAIN](#) » BITMAIN E11 Antminer ETC Miner User Manual 

Contents

- [1 BITMAIN E11 Antminer ETC Miner](#)
- [2 Specifications](#)
- [3 Performance Curves](#)
- [4 FAQs](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)

BITMAIN

BITMAIN E11 Antminer ETC Miner



Specifications

Product Glance	Value
Model	E11
Version	ET1-10
Crypto algorithm Coins	Ethash ETC
Typical Hashrate, GH/s(1-1)	9.0/9.5
Power on wall @25°C, Watt(1-1)	2340/2470
Power efficiency on wall@25°C, J/MH (1-1)	0.26
Dynamic Random Access Memory, GB	5.625


Detailed Characteristics	Value
Power supply	
Power supply AC input voltage range, V(2-1)	200-240V AC
Power supply AC Input Frequency Range, Hz	50-60
Power supply AC Input current, A(2-2)	20
Adapted AC output power requirement, W(2-3)	4000
Hardware configuration	
Network connection mode	RJ45 Ethernet 10/100M
Server size (Length*Width*Height, w/o package), mm	407*195.5*289
Server size (Length*Width*Height, with the package), mm	570*316*430
Net weight, kg	15.85
Gross weight, kg	17.45
Noise, dBA @25°C (2-4)	70
Environment requirements	
Operation temperature, °C	-20~40
Storage temperature, °C	-20~70
Operation humidity(non-condensing), RH	10~90%
Operation altitude, m(2-5)	≤2000

Notes


1. The Hashrate value, Power on the wall, and Power efficiency on the wall are all typical values.
2. The actual Hashrate value fluctuates by $\pm 3\%$, and the actual Power on the wall and Power efficiency on the wall fluctuate by $\pm 5\%$.
3. Caution: Wrong input voltage may cause server damage.
4. Two AC inputs 10 A per wire.
5. Caution: It is strongly recommended that the power on the wall of the miner does not exceed this value.
6. Max condition: Fan is under max RPM(rotation per minute).
7. When the server is used at an altitude from 900m to 2000m, the highest operating temperature decreases by 1°C for every increase of 300m.

Performance Curves

- (1) Hashrate Vs. Ambient Temperature

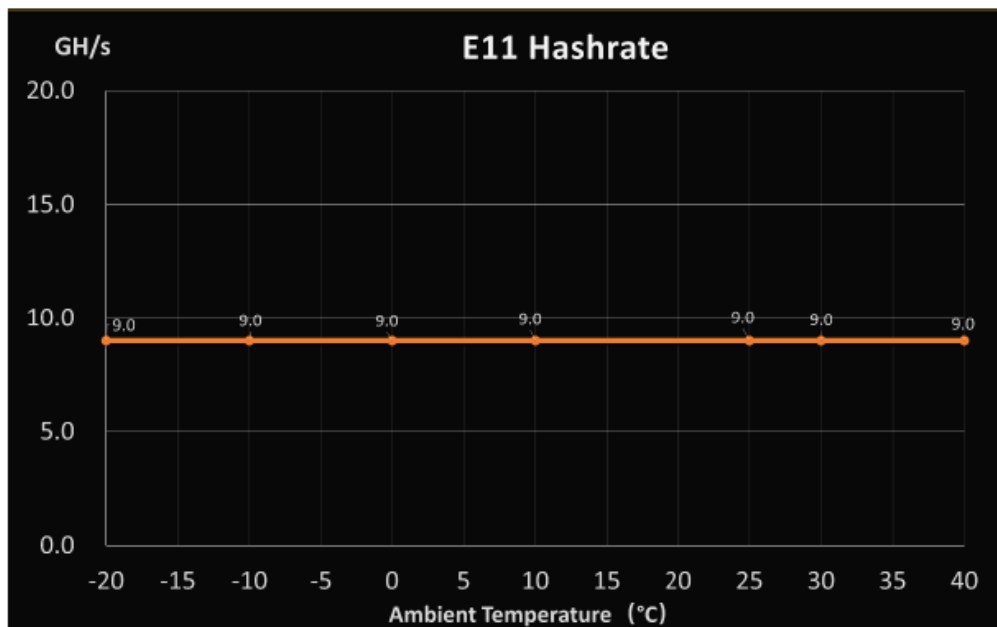

- (3) J/M Vs. Ambient Temperature

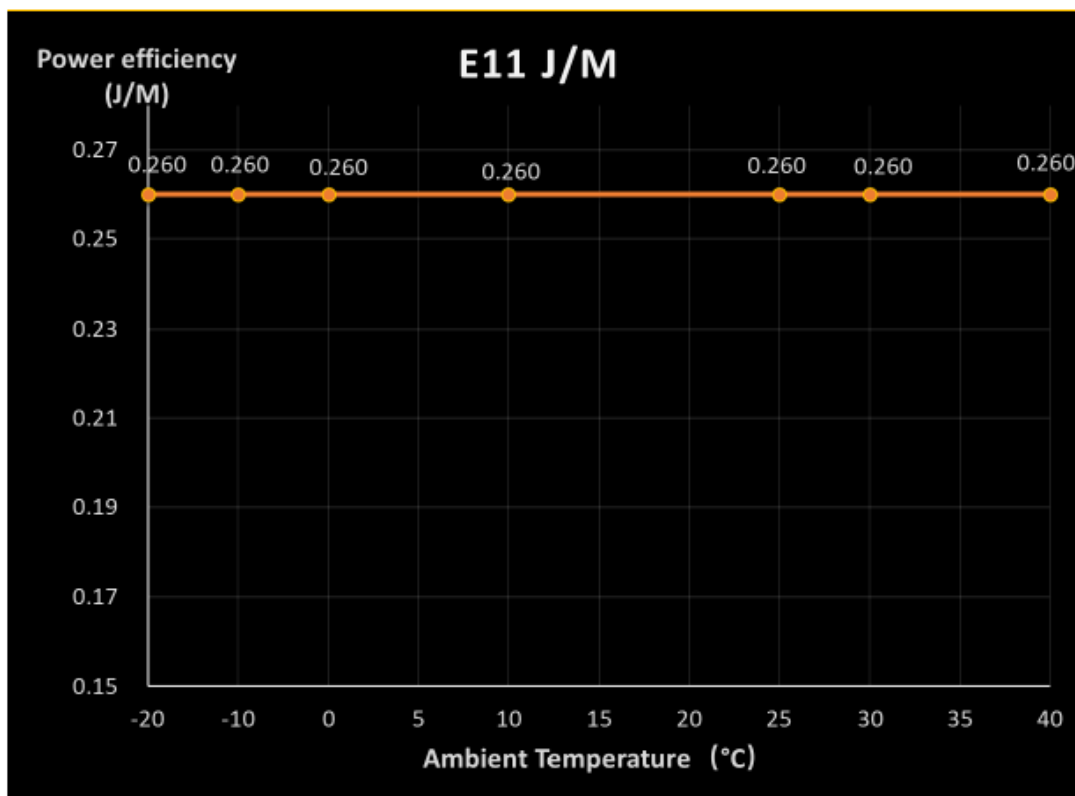


FAQs

Q: What should I do if the server exceeds the altitude limit?

A: If the server is used at an altitude above 2000m, it may affect the operating temperature. Make sure to keep the server within the specified altitude range for optimal performance.

Documents / Resources

	BITMAIN E11 Antminer ETC Miner [pdf] User Manual ET1-10, E11 Antminer ETC Miner, E11, Antminer ETC Miner, ETC Miner, Miner
---	---

References

-  [BITMAIN](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.