

**BITMAIN**  
**S19e XP Hyd**  
**Bitcoin**  
**Miner**  
**Antminer**



# BITMAIN S19e XP Hyd Bitcoin Miner Antminer Owner's Manual

[Home](#) » [BITMAIN](#) » BITMAIN S19e XP Hyd Bitcoin Miner Antminer Owner's Manual 

## Contents

- [1 BITMAIN S19e XP Hyd Bitcoin Miner Antminer](#)
- [2 Product Specifications](#)
- [3 Detailed Characteristics](#)
- [4 Product Usage Instructions](#)
- [5 Specification](#)
- [6 Performance Curve](#)
- [7 Frequently Asked Questions \(FAQ\)](#)
- [8 Documents / Resources](#)
  - [8.1 References](#)
- [9 Related Posts](#)

# BITMAIN

**BITMAIN S19e XP Hyd Bitcoin Miner Antminer**



## Product Specifications

<b>Model</b>	S19e XP Hyd.
<b>Sub Version</b>	Value
<b>Crypto algorithm/coins</b>	SHA256 BTC/BCH/BSV
<b>Typical hashrate, TH/s</b>	251
<b>Power on wall @35, Watt</b>	5522
<b>Power efficiency on wall @35, J/T</b>	22

## Detailed Characteristics

### Power Supply

- **Phase:** 3
- **Input voltage:** 380~415 Volt
- **Input frequency range:** 50~60 Hz
- **Input max current:** 12 Amp

### Hardware Configuration

- **Network connection mode:** RJ45 Ethernet 10/100M
- **Server size (length\*width\*height, w/o package):** 410\*170\*209 mm
- **Server size (length\*width\*height, with package):** 570\*316\*430 mm
- **Net weight:** 12.8 kg
- **Gross weight:** 14.1 kg

## Environment Requirements

- **Operating temperature:** 20~50°C
- **Coolant flow:** 8.0~10.0 L/min
- **Coolant pressure:** Working Coolant (2-2)
- **Coolant pH value:** 3.5
- **Diameter of Coolant pipe connector:** OD10 mm
- **Operation humidity(non-condensing):** 10~90% RH

## Product Usage Instructions

### Power Supply Connection:

Connect the power supply to the specified input voltage and frequency range as mentioned in the specifications.

### Hardware Setup:

Set up the server in the designated network connection mode using an RJ45 Ethernet connection. Ensure proper server size and weight considerations during installation.

### Environment Setup:

Maintain the operating temperature between 20°C to 50°C. Monitor coolant flow, pressure, and pH value as per the specified ranges. Use the recommended types of coolant and ensure proper humidity levels.

## Specification

Product Glance	Value	
Model	S19e XP Hyd.	
Sub	251T	240T
Version	10	
Crypto algorithm/coins	SHA256 BTC/BCH/BSV	
Typical hashrate, <b>TH/s</b> (1-1)	251	240
Power on wall @35°C(1-2), <b>Watt</b> (1-1)	5522	5280
Power efficiency on wall@35°C(1-2), <b>J/T</b> (1-1)	22	

 
 
Detailed Characteristics	Value
<b>Power supply</b>	
Phase	3
Input voltage, <b>Volt</b> (2-1)	380~415
Input frequency range, <b>Hz</b>	50~60
Input max current, <b>Amp</b>	12
<b>Hardware configuration</b>	
Network connection mode	RJ45 Ethernet 10/100M
Server size (length*width*height, w/o package), <b>mm</b>	410*170*209
Server size (length*width*height, with package), <b>mm</b>	570*316*430
Net weight, <b>kg</b>	12.8
Gross weight, <b>kg</b>	14.1
<b>Environment requirements</b>	
Inlet coolant temperature, <b>°C</b>	20~50
Coolant flow, <b>L/min</b>	8.0~10.0
Coolant pressure, <b>bar</b>	≤3.5
Working Coolant (2-2)	Antifreeze/ Pure water/ Deionized water
Coolant pH value	Antifreeze: 7.0~9.0 Pure water: 6.5~7.5 Deionized water 8.5~9.5
Diameter of Coolant pipe connector, <b>mm</b>	OD10
Storage temperature, <b>°C</b>	-20~70
Operation humidity(non-condensing), <b>RH</b>	10~90%

#### Notes:



1. The hashrate value, power on wall, and power efficiency on wall are all typical values. The actual hashrate value fluctuates by ±3%, and the actual power on wall and power efficiency on wall fluctuate by ±5%.
2. Inlet coolant temperature.
3. **Caution:** Wrong input voltage may cause server damaged.
4. For detailed working coolant use and maintenance instructions, please refer to “ANTSPACE HK3 Water Cooling Container & Dry-Wet Tower Product Manual”, Chapter 9, Article 3, Point 6, “Maintenance of Coolant”!

#### Performance Curve

##### 1. Hashrate vs. Inlet Coolant Temperature

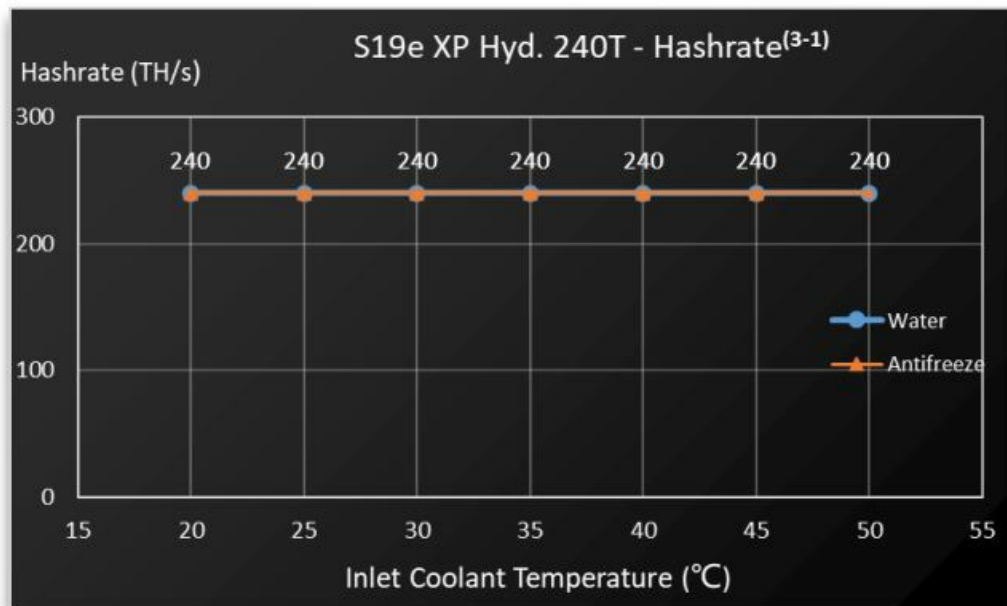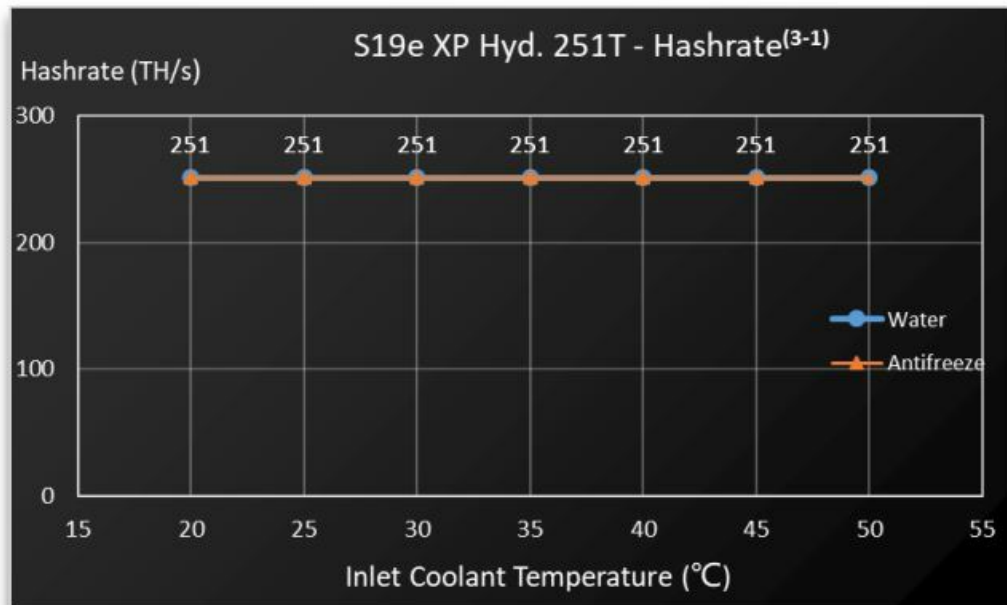

## 2. Power Efficiency vs. Inlet Coolant Temperature

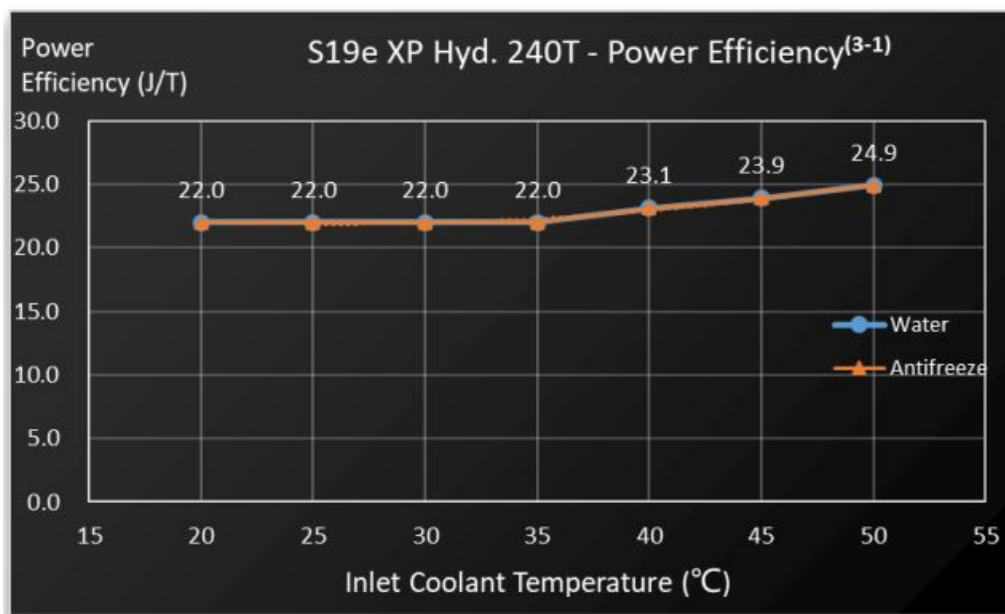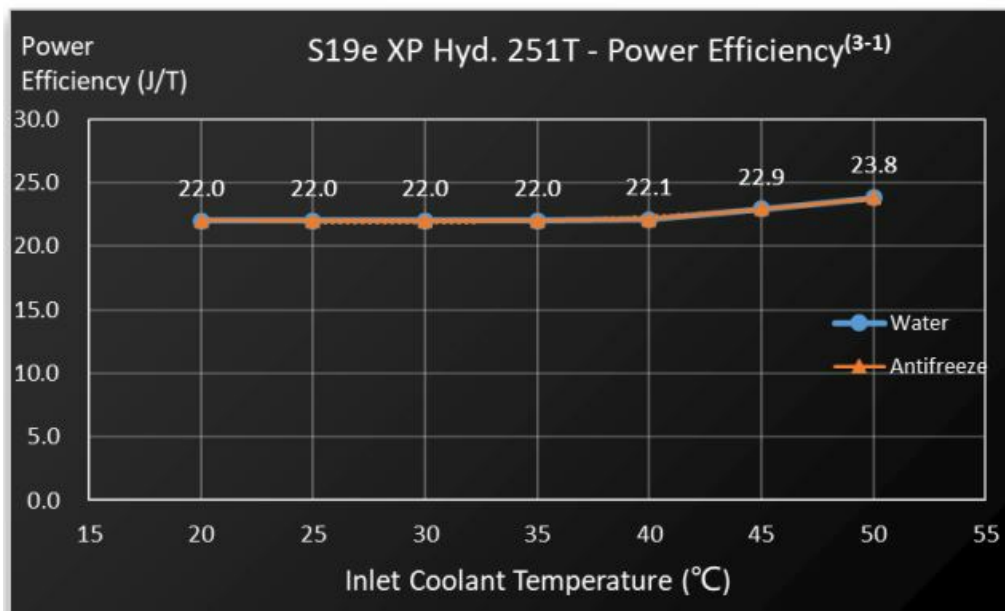  

3. The hashrate value, and power efficiency on wall are all typical values. The actual hashrate value fluctuates by 3%, and the actual power efficiency on wall fluctuate by 5%.

## Frequently Asked Questions (FAQ)

- **What is the typical hashrate of the S19e XP Hyd. model?**

The typical hashrate is 251 TH/s.

- **What is the input voltage range for the power supply?**

The input voltage range is between 380 to 415 Volts.

## Documents / Resources

 The image shows the front cover of the 'S19e XP Hyd' product manual. At the top, it features the 'ANTMINER' logo. Below that, the text 'S19e XP Hyd.' is prominently displayed, followed by 'Product Manual' in a smaller font. At the bottom, the 'BITMAIN' logo is visible. <p>ANTMINER</p> <p>S19e XP Hyd.</p> <p>Product Manual</p> <p>BITMAIN</p>	<p><a href="#">BITMAIN S19e XP Hyd Bitcoin Miner Antminer</a> [pdf] Owner's Manual</p> <p>S19e XP Hyd, S19e XP Hyd Bitcoin Miner Antminer, Bitcoin Miner Antminer, Miner Antminer, Antminer</p>
---	---

References

-  [BITMAIN](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.