



# BitWise Addressing Room Remote User Manual

[Home](#) » [BitWise](#) » BitWise Addressing Room Remote User Manual



## Addressing Room Remote User Manual

### Contents [ [hide](#) ]

- [1 Introduction](#)
- [2 Enter Addressing Mode](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

## Introduction

Each Room Remote must be assigned a unique address. This prevents Room Remotes in different rooms (or neighboring installations) from controlling unintended activities.

See RF Receiver Layout for more information regarding rooms and addresses.

## Enter Addressing Mode




Hold the OK and B buttons simultaneously until the red status LED comes on solid (approximately 3 seconds)

#### **Enter The New Address**



Enter a new three-digit address. Valid addresses range from 001 – 255.


#### **Store The New Address**

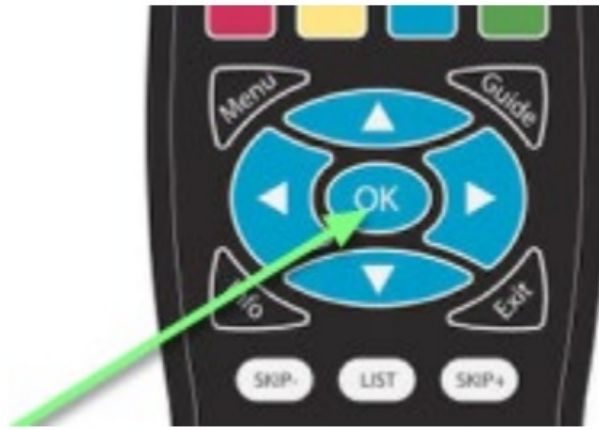

Press OK to store the new address. The red status LED will flash twice if successful. The LED will flash five times if an invalid address was entered or if the procedure times out.



## Documents / Resources

<p>Addressing a Room Remote</p> <p><b>Introduction</b></p> <p>Read the instructions carefully before using the remote control. The remote control is designed to be used with the Bitwise system. It is not recommended to use the remote control with other systems.</p> <p><b>Enter Addressing Mode</b></p> 	<p><a href="#">BitWise Addressing Room Remote</a> [pdf] User Manual</p> <p>Addressing Room Remote, Addressing, Room Remote, Remote</p>
--	--