

 


BLACK DECKER HM6000-B5 6L Digital Humidifier with Remote Control User Manual

[Home](#) » [Black Decker](#) » BLACK DECKER HM6000-B5 6L Digital Humidifier with Remote Control User Manual 

 


HM6000-B5 6L Digital Humidifier with Remote Control
User Manual

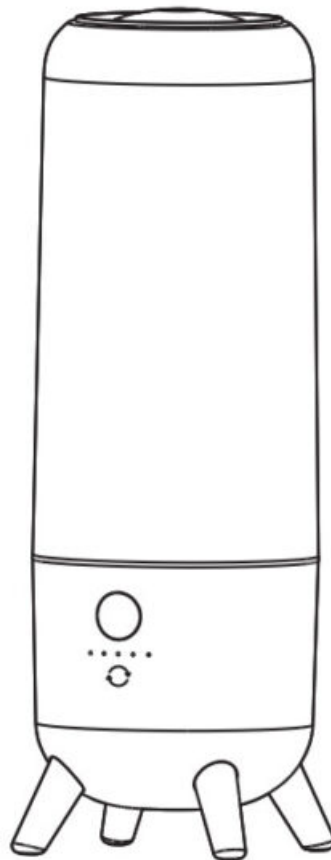

www.blackanddecker.ae

HM6000-B5

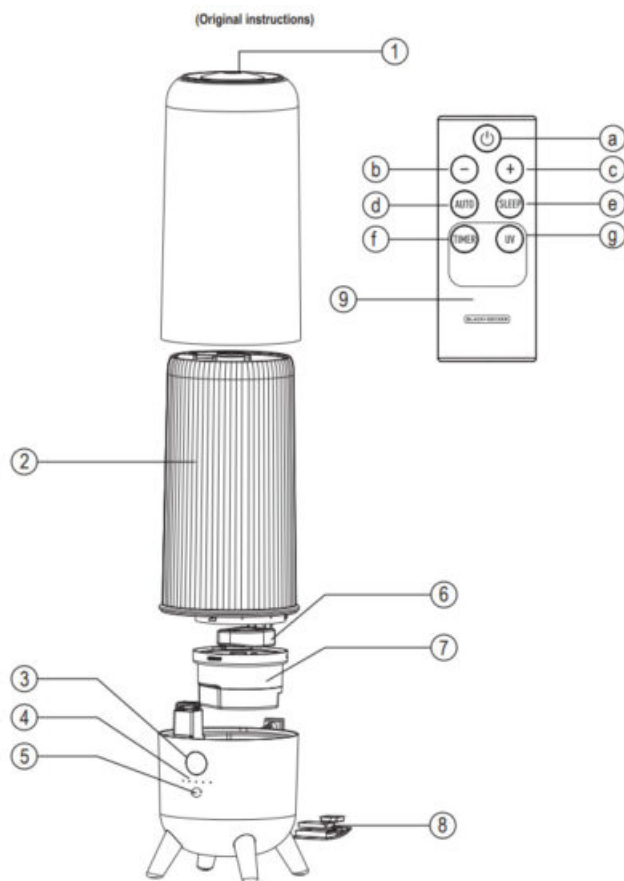

Note: The humidifier can only be operated with the help of the remote

Contents

- 1 [Intended use](#)
- 2 [Safety instructions](#)
- 3 [Using your appliance](#)
- 4 [Features](#)
- 5 [Installation](#)
- 6 [Introduction of display](#)
- 7 [Mains plug replacement](#)
- 8 [Cleaning and maintenance](#)
- 9 [Tips during cleaning](#)
- 10 [Troubleshooting](#)
- 11 [Protecting the environment](#)
- 12 [Technical Data](#)
- 13 [Warranty](#)
- 14 [WARRANTY REGISTRATION CARD](#)
- 15 [Documents / Resources](#)
 - 15.1 [References](#)
- 16 [Related Posts](#)

Intended use

Your BLACK+DECKER™ HM6000-B5 Humidifier has been designed to increase the level of humidity in rooms and alleviate dry skin, chapped lips, and other conditions that may occur in periods of low humidity.

This appliance is intended for indoor household use only.

Thank you for choosing BLACK+DECKER. We hope that you will enjoy using this product for many years.

For indoor domestic household use only.

This appliance is not to be used in:

- Staff kitchen areas in shops, offices, and other working environments;
- Farm Houses;
- By clients in hotels, motels, and other residential type environments;
- Bed and breakfast type environments or any other nonhousehold type environments.

Safety instructions

Warning! Read all safety warnings and all instructions. Failure to follow the warnings and instructions listed below may result in electric shock, fire and/or serious injury.

- Always route the power supply cord carefully to avoid a tripping hazard.
- The intended use is described in this manual. The use of any accessory or attachment or the performance of any operation with this appliance other than those recommended in this instruction manual may present a risk of personal injury.

Warning! When using mains-powered appliances, basic safety precautions, including the following, should always be followed to reduce the risk of fire, electric shock and personal injury, and material damage.

- Retain this manual for future reference.

Electrical safety

Before use, check that the mains voltage corresponds to the voltage on the rating plate.



This appliance is double insulated therefore no earth wire is required.

- To avoid the risk of electric shock, do not immerse the cord, plug or motor unit in water or other liquid.
- Check that the supply voltage shown on the rating plate of the appliance matches that of your electrical system. Any connection error will invalidate the guarantee.

Using your appliance

- Read all of this manual carefully before using the appliance.
- Always take care when using the appliance.
- Never pull the power supply cord to disconnect the plug from the socket.
- Keep the power supply cord away from heat, oil and sharp edges.
- Do not place the appliance on or near heat sources or in a heated oven.
- Do not use the appliance outdoors.
- Always protect the motor unit from water or excessive humidity.
- If the power supply cord is damaged during use, disconnect the appliance from the power supply immediately. Do not touch the power supply cord before disconnecting from the power supply.
- Disconnect the appliance from the power supply when not in use, before fitting or removing parts, and before cleaning.
- Never let the appliance operate unattended. Do not let the cord hang over the edge of a table, or counter, or touch hot surfaces.
- Fully uncoil then guide the power supply cord neatly so it cannot be caught accidentally or tripped over.
- The humidifier must not be located immediately below a socket outlet.
- To prevent overload and blown fuses, do not plug other appliances into the same outlet (receptacle)

- Do not place the humidifier on carpets, don't place the cable under carpets. Arrange the cord away from track areas so that it will not be tripped over.
- Do not use this appliance under direct sunlight or near any heating object.
- DO NOT place the humidifier under an electrical socket outlet or other product that may be affected by humidity.
- NEVER use this humidifier where it may come into contact with water i.e. bathroom, shower room, kitchen. Do not use this humidifier in the immediate surroundings of a bath, a shower, or a swimming pool.
- ONLY de-mineralized or normal drinking water should be used in this product.
- When the water tank is empty, the indicator light turns red. However, there may still be a little amount of water in the water tank to prevent dry humidification.

Warning! In order to avoid overheating, do not cover the humidifier.

- Always ensure that hands are dry before operating or adjusting any switch on the product or touching the plug and main supply connections.
- Do not use this humidifier with a programmer, timer, separate remote-control system or any other device that switches the humidifier on automatically, since a fire risk exists if the humidifier is covered or positioned incorrectly.
- To prevent a possible fire, do not block air intake or exhaust in any manner. Do not use it on soft surfaces, like a bed, where openings may become blocked.
- Don't use an extension cable.
- Always operate on a flat horizontal surface.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire, or damage to the appliance.
Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.
- The most common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning air vents and grilles.
- Always use the humidifier in an upright position.
- To disconnect the appliance, switch it "OFF" and then remove it.

Warning! To reduce the risk of water-based bacteria being discharged into the room, regular cleaning and disinfecting is strongly recommended.

- Always leave sufficient space around the humidifier for ventilation.
- Do not use any additives in the water tank.
- Turn off the appliance when the water tank is empty. Refill the water tank and turn on again. Fill the water tank less than the max capacity.
- The appliance should be cleaned from time to time.
Please empty the water tank if not been used for a long time.
- Adding perfume or aroma essential to the water tank is not allowed.

Safety of others

- Some parts of the product are small in size and may cause choking hazards if swallowed by children or any individuals who have a tendency to place inedible objects in their mouths.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental

capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- Do not allow children or any person unfamiliar with these instructions to use the appliance.
- Do not allow children or animals to come near the work area or to touch the appliance or power supply cord.
- Close supervision is necessary when the appliance is used near children.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved
- Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance

After use

- Remove the plug from the socket before leaving the appliance unattended and before changing, cleaning, or inspecting any parts of the appliance.
- When not in use, the appliance should be stored in a dry place. Children should not have access to stored appliances.

Inspection and repairs

- Switch off the appliance before cleaning, changing accessories, or approaching parts that move in use.
- Before use, check the appliance for damaged or defective parts. Check for breakage of parts, damage to switches, and any other conditions that may affect its operation.
- Do not use the appliance if any part is damaged or defective.
- Have any damaged or defective parts been repaired or replaced by an authorized repair agent?
- Before use, check the power supply cord for signs of damage, aging, and wear.
- Do not use the appliance if the power supply cord or mains plug is damaged or defective.
- If the power supply cord or mains plug is damaged or defective, an authorized repair agent must repair it to avoid a hazard. Do not cut the power supply cord and do not attempt to repair it yourself.
- Never attempt to remove or replace any parts other than those specified in this manual.

Features

1. Mist output	6. Float
2. Water tank assembly	7. Atomizer
3. Display	8. Aroma box
4. Indicators	9. Remote b. Reduce speed c. Increase speed d. AUTO e. Sleep mode f. Timer g. UV
5. On/Off	

Installation

Water tank


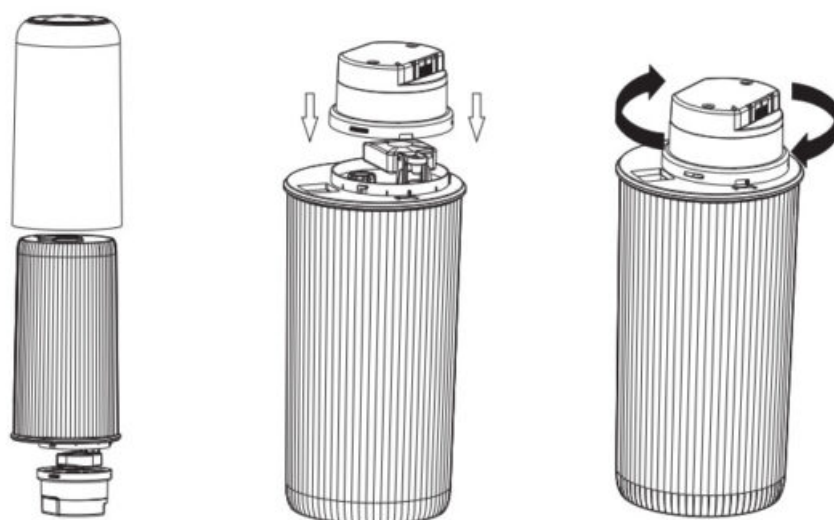


Fig. 1

Note: Assemble the Water tank assembly, Atomizer, and the float as shown in Fig 1. Assemble the lower cover of the water tank in place and then rotate it in the direction of the arrow to complete the assembly (Fig. 1).

Sponge and aroma box

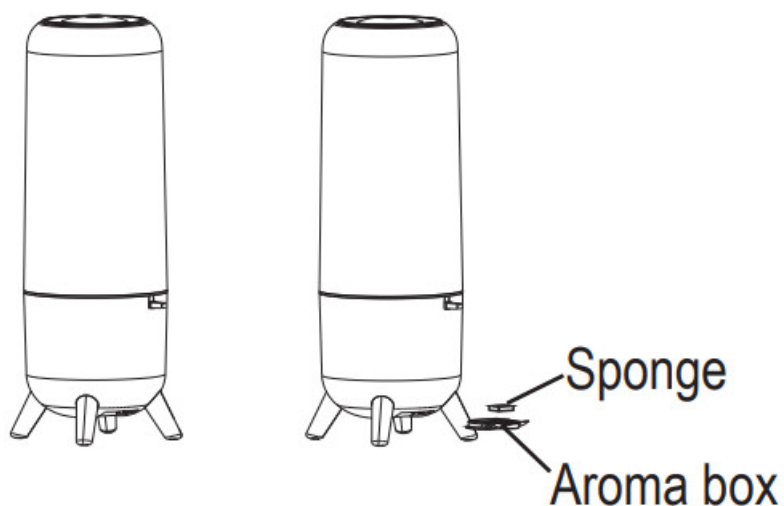

Add aroma: (Select aroma according to your needs) Add aroma to the aroma tray (This product does not come with essential oils). It is advised to use plant-based essential oils.

Use

1. Place the machine vertically in a suitable location.
2. After removing the transparent decorative cover of the water tank, use a container filled with water (such as a water cup) to fill a certain amount of water to the water tank.



Note:


1. Please add water into the water tank, do not pour water into the fog tube.
2. In the water tank, pour clean water between 6°C – 40°C. Do not add water to the water tank beyond the MAX level.
3. Connect the power supply, and buzzer sounds, indicating that the power is turned on; press the button at this time to start the machine, you can select the mode and function according to your needs with the help of remote control.
4. When there is a water shortage, the machine will automatically stop the fog, the red light will blink and the fan will delay by 15 seconds and the unit will shut down. If you need to continue using it, disconnect the power and refill the water tank.
5. Before moving the humidifier, please turn off the power and unplug the power plug, and move the whole machine together. Do not move the humidifier under working conditions.
6. To remove the remaining water from the water tank for cleaning purposes, first turn off the power and unplug the power supply. Then lift the water tank and then pour out the remaining water.

Introduction of remote control

- a. Power button: Press the power button to turn on the machine when the power is turned on. The default speed is “speed 1”. Press the power button again to power off.
- b. “-”: Reduce the amount of mist.
- c. “+”: Increase the amount of mist.
- d. Auto: The machine is set to the intelligent Auto mode.
- e. Sleep button: The machine is set to sleep mode.
- f. Timer: The machine is set to timer mode.
- g. UV: Activates the sterilization function when pressed. To turn it off, press the button again.

Tips: Use the remote control while facing the humidifier panel from a distance of less than 5m.

Introduction of display

Function icon	Function	Explanation
	Digital display	<ul style="list-style-type: none">1. The digital display number represents the ambient humidity value during normal use.2. Select the auto mode to choose the humidity level you want for your room. After selection, the display will show the real-time ambient humidity value after 3 seconds.3. The timer function lets you choose the hours you want the unit to work. After you have selected the desired hours that you want the timer to function, the display will show the ambient humidity value after 3 seconds.
TIMER	Timer function	When the timer function is pressed, the timer's time can be set from 1 hour → 2 hours → 3 hours → ... 12 hours → 00 (turn off timer). After the timer is selected, the display returns to display the ambient humidity value.
UV	UV	Turning on the UV function can effectively reduce the spray of mist bacteria.
AUTO	Auto mode	When the Auto mode is turned on, the indicator lights up, and the user can adjust the range value that needs constant humidity. The machine will automatically adjust the appropriate mist amount according to the humidity range value selected by the user and the current environmental humidity value.
Power on/off	Power on and off	Press the power button to turn on the machine when the power is turned on. The default speed is “speed 1”. Press the power button again to power off.
SLEEP	Sleep mode function	When the sleep function is turned on, the mist is in a low speed, the digital display is turned off, the other indicators are dimmed, and the quiet humidification state is entered.
NO WATER	Water shortage indicator	Indicates that the machine is short of water. You would require to add water for the indicator to turn off and the unit will start running again.

Remarks:

- 1. Once a function is selected, the display will be lit brightly.
After 5 seconds, the brightness of the digital display and the function indicator light will dim.
- 2. Once the machine is turned off, the atomizer stops working but the airflow will stop working after a few seconds to ensure the mist inside the fuselage is discharged.
- 3. For users who are sensitive to the noise of the machine, it is recommended to use sleep mode or place the machine at least 2-3 meters away.
- 4. If the humidifier is used in an environment with high humidity and low air circulation, it is normal to see

condensation on the water tank's cover.

Mains plug replacement

If a new mains plug needs to be fitted:

- Safely dispose of the old plug.
- Connect the brown lead to the live terminal of the new plug.
- Connect the blue lead to the neutral terminal.
- If the product is class I (earthed), connect the green /yellow lead to the earth terminal.

Warning! If your product is class II double insulated (only 2 wires in the cord set), no connection is to be made to the earth terminal.


Follow the fitting instructions supplied with good quality plugs.

Any replacement fuse must be of the same rating as the original fuse supplied with the product.

Cleaning and maintenance

1. Before cleaning, be sure to turn off the power supply and unplug the power plug.
2. If there is a scale on the inner wall of the tank, remove the tank from the equipment, open the tank, then wipe it with a towel or brush, and rinse it with clean water. Then pour out the water (as shown below).

Be careful:

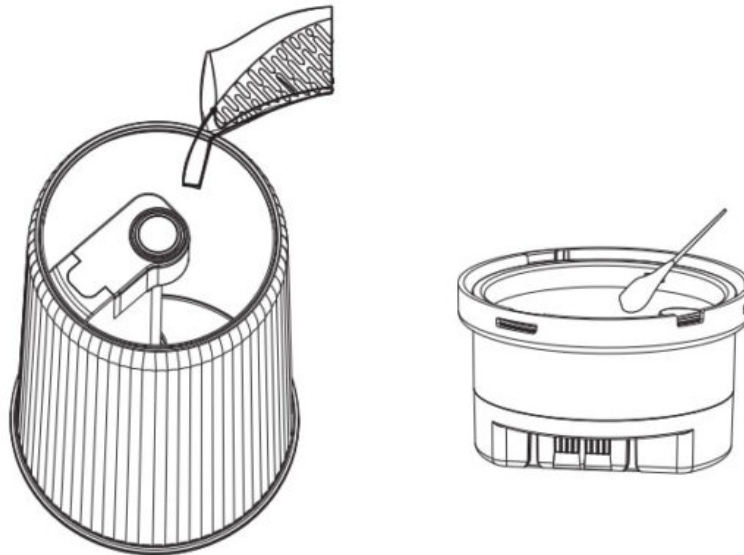

1. After pouring water into the water tank, it should be noted that there will be a small amount of water in the mist tube. The water can be poured out from the mist tube hole at the bottom of the water tank.
2. Please rotate to open the tank and then clean the tank.



Warning! Do not immerse the whole tank in water for cleaning, in order to prevent short circuits and other dangers after water entry.

3. Rinse the soft cloth in warm water below 40°C and wipe off the stains on the machine's surface. Do not use wire balls or nylon rags to avoid surface scratches and damage.
4. Do not use diluent, toluene, acid detergent, lamp oil, alcohol, or chemical wipe cloth to avoid discoloration,

deterioration, or silk print pattern damage, affecting the beauty.

5. When wiping the dirt on the power line, please use a dry soft cloth to wipe it.
6. When the machine is not used for a long time, after cleaning and drying, the parts must be packed into the packing box in the original packing order and stored in a dry place.

Tips during cleaning

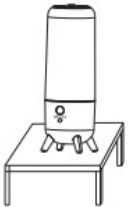 <ul style="list-style-type: none"> • The appliance must be placed upright on a flat and sturdy surface else it may turn over and fall and result in electric shock or fire. 	 <ul style="list-style-type: none"> • Do not plug on/off with wet hands.
<ul style="list-style-type: none"> • Please do not use another power rating except those marked on the rating label, or it may lead to electric shock or fire. 	<ul style="list-style-type: none"> • Please do not use a power socket that is not in good condition.
<ul style="list-style-type: none"> • When the appliance is working, do keep it away from the socket. 	<ul style="list-style-type: none"> • This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
<ul style="list-style-type: none"> • Do plug off before cleaning or not in use for a long time. 	<ul style="list-style-type: none"> • The appliance can be only disassembled, and repaired by a qualified technician. Otherwise, it may lead to electric shock or fire.
<ul style="list-style-type: none"> • This appliance is for household use only. 	<ul style="list-style-type: none"> • Any damage on wire or power cord, please send the appliance to factory or service center and have professional technician to amend it.

Troubleshooting

Problem	Analysis	Troubleshooting
Indicators do not light on. Mist does come out	The power cord is not plugged in properly.	Plug in the power cord firmly.
Smelly mist	Water in Water Tank or on the Base is dirty.	Clean the Base and Water Tank. Fill in clean water. Use clean water.
Red light is always on	Float off.	The float should be installed according to the instructions.

Protecting the environment



■ Separate collection. This product must not be disposed of with normal household waste.

Should you find one day that your BLACK+DECKER product needs replacement, or if it is of no further use to you, do not dispose of it with other household waste. Make this product available for a separate collection.

- BLACK+DECKER provides a facility for recycling BLACK+DECKER products once they have reached the end of their working life. This service is provided free of charge. To take advantage of this service please return your product to any authorized repair agent who will collect them on our behalf.
- You can check the location of your nearest authorized repair agent by contacting your local BLACK+DECKER office at the address indicated in this manual.

Alternatively, a list of authorized BLACK+DECKER repair agents and full details of our after-sales service and contact is available on the Internet at: www.2helpU.com.

Technical Data

HM6000-B5	
Input voltage	220 – 240 V
Power input	25 W
Frequency	50-60 Hz
Water tank capacity	6 L

Warranty

BLACK+DECKER is confident of the quality of its products and offers an outstanding warranty.

This warranty statement is in addition to and in no way prejudices your statutory rights.

If a BLACK+DECKER product becomes defective due to faulty materials, workmanship or lack of conformity, within 24 months from the date of purchase, BLACK+DECKER warranty to replace defective parts, repair products subjected to fair wear and tear or replace such products to ensure minimum inconvenience to the customer unless:

- The product has been used for trade, professional, or hire purposes;
- The product has been subjected to misuse or neglect;
- The product has sustained damage through foreign objects, substances, or accidents;
- Repairs have been attempted by persons other than authorized repair agents or BLACK+DECKER service staff.

To claim the warranty, you will need to submit proof of purchase to the seller or an authorized repair agent. You can check the location of your nearest authorized repair agent by contacting your local BLACK+DECKER office at the address indicated in this manual.

Alternatively, a list of authorized BLACK+DECKER repair agents and full details of our after-sales service and contacts are available on the Internet at: www.2helpU.com.

BLACK AND DECKER (OVERSEAS) GMBH (DUBAI BRANCH) PO Box 17164, Dubai, United Arab Emirates

BLACK+DECKER CUSTOMER SUPPORT

Working Hours: Sunday to Thursday from 09:00 a.m. to 6:00 p.m.

• United Arab Emirates: 800 032 0723 • Saudi Arabia: 800 8500 800 • Qatar: 00 800 100 557
 Kuwait: 965 220 691 00 • Oman: 800 744 67 • Bahrain: 8000 44 35 • Egypt: 0 800 000 9537 (landline only)

COUN TRY	NAME	ADDRESS	TELEPHONE NO.	EMAIL
BAHR AIN	Alfouz Services Co. WLL	P.O. Box 26562, Tubli, Man ama	+973.177835621178 79987	alfouz@batelco.co m.bh
BAHR AIN	Kewalram & Sons Co. WL L	P.O. Box 84, Manama, King dom of Bahrain	+973.172131101172 10617	kewalram02@bate lco.com.bh kewalram@batelc o.com.bh
EGYP T	Anastasia Egypt for Tradin g S.A.E. (Men trade)	P.O. Box 2443, 9, Mostafa Refaat Street, Sheraton Heli opolis 11361, Cairo	+202-22684159 Hotl ine19311	waelsalah@anasia .com nevien.elbes hbishy@anasia.co m
JORD AN	Mega Hardware – (Sami Bashiti & Partners C o.)	93 King Abdullah II St., P.O. Box 3005, Amman 119 53	+9626-5349098	info@mega-hairlw are.com www.mega-hardw are.com
KSA	Fawaz Ebrahim Zayani Tra ding Est.	P.O. Box 76026, Al Raka: 3 1952 Near Saudi Post, Al Janubiy ah Al Khobar, Dammam	+966-38140914	danchubby@gmai l.com
KSA	Fawaz Ebrahim Zayani Tra ding Est.	9019, Al Qndeel St., Behind Emad Petrol Station , Aziziah, Jeddah	+966.128140914! 58 1121778	danchubby@gmai l.com
KUW AIT	Al Omar Technical Co.	P.O. Box 4062, Safat 13041 , Kuwait	+965.248485951248 40039	alexotc@usa.net

LEBANON	Aces Service Centre (Est. F.A.Ketaneh SA)	P.O. Box 90-102, Nahr El Mot, Seaside Highway, Pharaon Building, Beirut	+9611-8989891262626	nissrine.hajj@aces.com.lb nassim.aziz@Aces.com.lb
LIBYA	Homework Co.	Sandal St. Amr Ibn Elias Road, Benghazi, Libya, P.O. Box 18182, Salman	+218-619094183 ext . 103	nissrine.hajj@aces.com.lb
LIBYA	But Al Haditha	General Customer Service Znata Al Jadida Road, Tripoli	+218-916611663 / +218-916260006	nagte4gmail.com elghol@technpower.com
LIBYA	But Al Haditha	Al Fuwayhat Road, Benghazi	+218-913752701	nagtety@gmail.com elghol@technpower.com
MAURITIUS	The Brandhouse Ltd.	Rogers Industrial Park 1, Ri che Terre, Mauritius	+230.206945012071700	sevice.centre@goupille.mu stephanie.bijou@gmail.com
OMAN	White Thread United Co. L .L.C. (Mustafa Sultan Electronics Co. L.L.C)	P.O. Box 3340, P.C. 112, Ruwi, Muscat, Sultanate of Oman	+968-24812184124818778	m-subbaraj@mustafasultan.com
PAKISTAN	Ammar Service & Spares	Office No. 6068, 6th Floor, Central Plaza Behind Gul Plaza Marston Road, Karachi	+9221-32775252	babji93@yahoo.com
QATAR	Al Muftah Service Centre	Al Wakrah Road, P.O. Box 875, Doha, Qatar	+974-44650880144650110	service@almuftah.com almultah@almuftah.com

TUNISIA	Societe Tunisienne De Maintenance (STM)	Rue De La Physique Nouvelle Zone Industrielle Ben Arous, 2013 Ben Arous , Tunisia	+216-79389687	importa@stqu.com
UAE	Black+Decker Regional Service Center	Light Industrial Unit Phase 4 Unit C9, Nad Hessa Dubai Silicon Oasis, Dubai, UAE	+9714.812740018127406	support@blackanddecker.ae
UAE	Light House Electrical	Sheikh Khalid Bin Ahmad Al Hamad Bldg. No: 20, Opp. Salam Etisalat, P.O. Box 120, Abu Dhabi	+9712-6726131	dewalt_lhe@hotmail.com
UAE	Light House Electrical	Corridor Property Management Bldg. Sanaiya Industrial Area, M10 Mussafah P.O. Box 120, Abu Dhabi	+9712-5548315	dewalt_lhe@hotmail.com
UAE	Zillion Equipment and Spare Pads Trading LLC	P.O. Box 10584, Ras Al Khaimah	+9717-2277095	zillionrak@gmail.com
UAE	Zillion Equipment and Spare Pads Trading LLC	P.O. Box 19740, Opp. Bin Sadal / Trim Redymix Sanaiya, Al Ain	+9713-7216690	zilhondrg@gmail.com
UAE	Zillion Equipment and Spare Pads Trading LLC	P.O. Box 65076, Industrial Area 131 Near to Tasheel, Sharjah, UAE	+9716.5423131	zillionshj@gmail.com

WARRANTY REGISTRATION CARD

YOUR NAME_____

YOUR ADDRESS_____

 
POSTCODE_____

DATE OF PURCHASE_____


DEALER'S NAME & ADDRESS_____

PRODUCT MODEL NO.
HM6000-B5

Documents / Resources

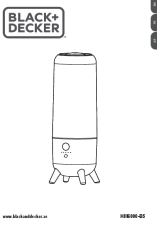	<p>BLACK DECKER HM6000-B5 6L Digital Humidifier with Remote Control [pdf] User Manual HM6000-B5, 6L Digital Humidifier with Remote Control, 6L Digital Humidifier, Digital Humidifier</p>
---	---

References

-  [Home - Kubus](#)
-  [2helpU](#)
-  [Power Tools | Garden Tools | Household Products | BLACK+DECKER](#)
-  [Mega Hardware](#)

Manuals+.