

BLAM L25 DB Subwoofer Speaker User Manual

Home » BLAM » BLAM L25 DB Subwoofer Speaker User Manual

BLAM L25 DB Subwoofer Speaker





Contents

- 1 DIMENSION
- **2 TECHNICAL SPECIFICATIONS**
- **3 THIELE-SMALL PARAMETERS**
- **4 SEALED**
- 5 Warning
- 6 Important recommendations
- 7 Key points
- **8 INTERNATIONAL**
- **GUARANTEE**
- 8.1 Condition of guarantee
- 9 CUSTOMER SUPPORT
- 10 Documents / Resources
 - 10.1 References
- 11 Related Posts

DIMENSION

- 250 mm (10") subwoofer
- Max. power 600 W / Nominal Power 300 W

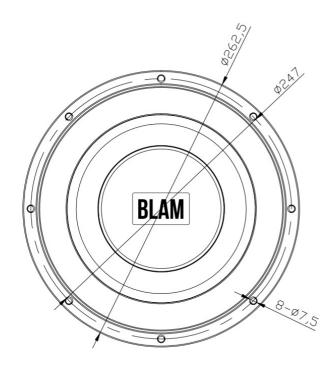

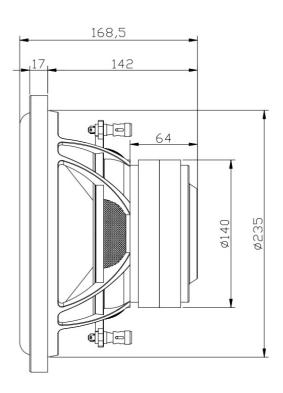

TECHNICAL SPECIFICATIONS


Component	Subwoofer	
Max power	600 W	
Nominal power	300 W	
Impedance	2 x 2 Q	
Freq. Response	45 Hz – 500 Hz	
Sensitivity (2,83V/1m)	92.3 dB	
Magnet	Ferrite Y30	
Magnet size Ø x h	2 x 140 x 20 mm	2 x 5.512"x 0.787"
Total driver displacement	1.1	0.039 cf
Weight of one component	5.5 kg	12.125 lb
Voice coil Ø	60 mm	2.362"
Voice coil height	30 mm	1.181"
Cone	Paper	

THIELE-SMALL PARAMETERS

effective Ø (d)	205 mm	
Sd	330.06 cm ²	
Xmax	13 mm	
Re	1.23 Q	
Fs	38.64 Hz	
Le	287.30 μH @ 1 kHz	
L2	875.76 μH @10 kHz	
Vas	19.68 L	
Mms	131.89 g	
Cms	0.000129 m/N	
BL	7.61 Tm	
Qts	0.63	
Qes	0.68	
Qms	8.78	

SEALED

Internal volume Vb	Qtc	F-3dB	Boost
15 L	0.960	47 Hz	1.0 dB at 77 Hz
25 L	0.844	45 Hz	0.4 dB at 81 Hz
45 L	0.757	44 Hz	0.1 dB at 130 Hz

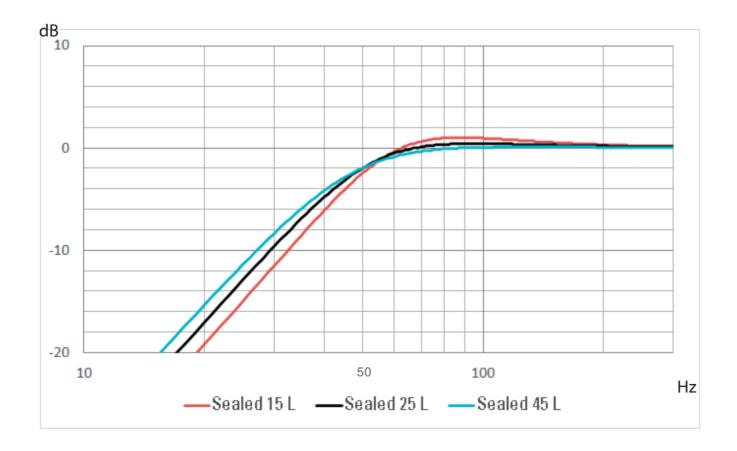

Thank you for choosing BLAM.

LIVE systems are designed to provide incredible performance. Because of their high efficiency and low impedance, they provide detailed, powerful sound when used with or without an amplifier. Transform your mundane drive into a musical journey....

To obtain the best results from this product, we recommend that you follow carefully all the information contained in this user's manual. If not correctly followed, any fault observed may not be covered by the guarantee.

Warning

Continuous listening at high sound level (above 110 dB) can durably damage your hearing. Listening above 130 dB can damage your hearing permanently.

Important recommendations

Before attempting any installation work, it is very important to check how much space is available to fit the speakers into the vehicle.

Key points

- Ensure the speaker is clean from debris and metallic particles that maybe attached (especially after drilling).
- Clean before mounting the speakers.
 Due to constant technological advances, BLAM reserves its right to modify specifications without notice.
 Images may not conform exactly to specific product.

INTERNATIONAL GUARANTEE

Condition of guarantee

All BLAM loudspeakers are covered by guarantee drawn up by the official BLAM distributor in your country. Your distributor can provide all details concerning the conditions of guarantee. Guarantee cover extends at least to that granted by the legal guarantee in force in the country where the original purchase invoice was issued.



CUSTOMER SUPPORT

balm-audio.com



Driven by passion.

Documents / Resources



BLAM L25 DB Subwoofer Speaker [pdf] User Manual L25 DB Subwoofer Speaker, L25 DB, Subwoofer Speaker, Speaker

References

- BLAM Accueil Blam Audio
- BLAM Accueil Blam Audio

Manuals+,