



BLAUPUNKT 375833 2KW Turbo Convector Heater and Timer Owner's Manual

[Home](#) » [Blaupunkt](#) » BLAUPUNKT 375833 2KW Turbo Convector Heater and Timer Owner's Manual 

Contents

- [1 BLAUPUNKT 375833 2KW Turbo Convector Heater and Timer](#)
- [2 IMPORTANT SAFETY INSTRUCTIONS](#)
- [3 OPERATION OF THE HEATER](#)
- [4 ASSEMBLY OF THE HEATER](#)
- [5 CARE AND MAINTENANCE](#)
- [6 ELECTRICAL INFORMATION](#)
- [7 WIRING INSTRUCTIONS](#)
- [8 TECHNICAL SPECIFICATION](#)
- [9 CUSTOMER SUPPORT](#)
- [10 GUARANTEE](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)



BLAUPUNKT 375833 2KW Turbo Convector Heater and Timer



IMPORTANT:

PLEASE READ ALL OF THE INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE REFERENCE.

IMPORTANT SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons.
- Check the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

CAUTION: Some parts of this appliance can become very hot and can cause burns. Particular attention has to be given where children and vulnerable people are present.

- Children younger than 3 years old should be kept away from the appliance unless continuously supervised.
- Children aged from 3 years and less than 8 years should only switch on/off the appliance, provided that it has been placed or installed in its intended operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure they do not play with the appliance.

- This appliance is not a toy.
- Children should not carry out cleaning or user maintenance without supervision.
- This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting products.
- Keep furniture, curtains and other flammable material at least one metre away from the appliance.
- Do not use this appliance unless the feet are correctly attached.
- Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.
- Do not immerse the appliance or plug in water or any other liquid.
- Do not operate the appliance with wet hands.
- Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.
- This appliance must not be located immediately below a socket-outlet.
- Always unplug the appliance when not in use.
- Do not leave the appliance unattended whilst connected to the mains power supply or when in use.
- Do not remove from the mains power supply by pulling on the cord; switch off and remove by the plug.
- Do not use this appliance for extended periods of time.
- Do not use this appliance for anything other than its intended use.
- For indoor use only.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.
- Do not block any air intake of the appliance; place in an open, well ventilated space.
- Do not attempt to move the appliance while it is in use.
- Do not put objects into any openings.
- In order to avoid a hazard due to inadvertent resetting of the thermal cut-out this appliance must not be supplied through an external switching device such as a timer or connected to a circuit that is regularly switched on and off by the utility.
- This appliance should be used on a stable, heat-resistant surface.
- Do not place this appliance on carpets with a very deep pile.
- Always unplug the appliance after use and before any cleaning or maintenance.
- Use of an extension cord with the appliance is not recommended.
- Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage the appliance.

CAUTION: Some parts of this appliance can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

HOT SURFACE: Do not touch the hot section or heating components of the appliance.

WARNING: In order to avoid overheating, do not cover the appliance.

 
CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out this appliance must not be supplied through an external switching device such

OPERATION OF THE HEATER

turned on after having not been used for a long period of time the heaters may emit some smell and fumes. This will disappear when the heater has been on a short while.

ASSEMBLY OF THE HEATER

Before using the heater, the feet (supplied separately in the to the base of the heater using the 4 self-tapping screws provided, taking care to ensure that they are located correctly in the bottom ends of the heater side moldings

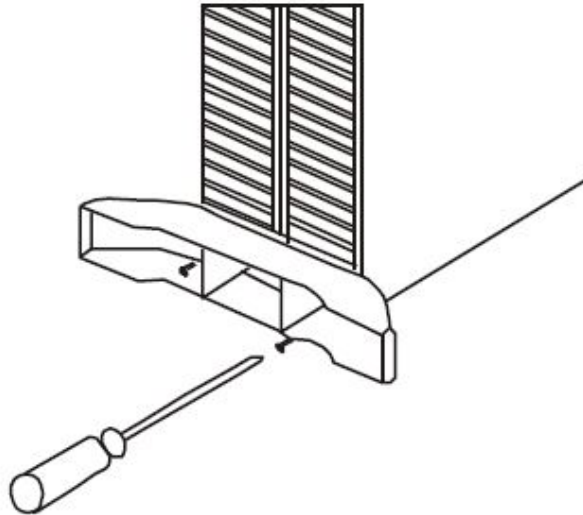

Convactor Heater with thermostat and timer

Choose a suitable location for the heater, taking into account the safety instructions above. Insert the plug of the heater into a suitable socket. Turn the thermostat dial fully in a clockwise direction to the maximum setting. Turn on the heating elements by means of the rocker switches on the side panel. When the heating elements are on the switches will illuminate. For maximum heat output both switches should be on. When the desired room temperature has been reached, the thermostat dial should be the element switches are seen to go out. After this the heater will keep the air tem-

Fan Operation: -This is operated by means of the switch with the fan symbol along side it. The fan will only operate with the thermostat in the "on" position and can be used when the heating elements are "on" to blow warm air into the room. In warm condi-

Timer Operation: – This model is also fitted with a 24hr timer which has 96 segments around its circumference, each segment being equivalent to 15 minutes of time. With the aid of this timer it is possible to preset the time and duration of the period(s) that it is desired the heater will operate, in any 24hr period.

Timer Operation

The centre of the timer has a 3 position slide switch. In the central position (denoted by the clock symbol) the timer will switch the heater. The position denoted by the "I", is a timer override position. The timer will continue to run but power will be fed continuously to the heater. This enables the heater to be on all the time if required. In the position denoted by the "O", the timer continues to run but no power is fed to the heater.

 
Setting the Timer

Ensure the slide switch on the timer is at the mid position next to the clock symbol. Rotate the outer ring of the timer in a clockwise direction until the current time is lined up with the arrow pointer, i.e. if the time the timer is being set is 8 p.m., rotate the outer ring until the number 20 is in line with the arrow pointer. Set the time the heater is required to run by pulling the segments around the outer ring forward appropriate to the running period(s) required.

When set, the heater will operate each day during the times programmed. Note, the heater must always be plugged into a power socket, the element switches must be in the on position and the thermostat must be suitably set to ensure the heater will come on. If the heater is required to run continuously the slide switch on the timer

should be set to the “I” position. If it is subsequently required to revert back to timer operation, the slide switch on the timer should be set to the central (clock) position.

Note: When using in timer mode, due consideration should be given to the fact that the heater may come on whilst unattended. Always ensure the heater is placed correctly according to the warnings.

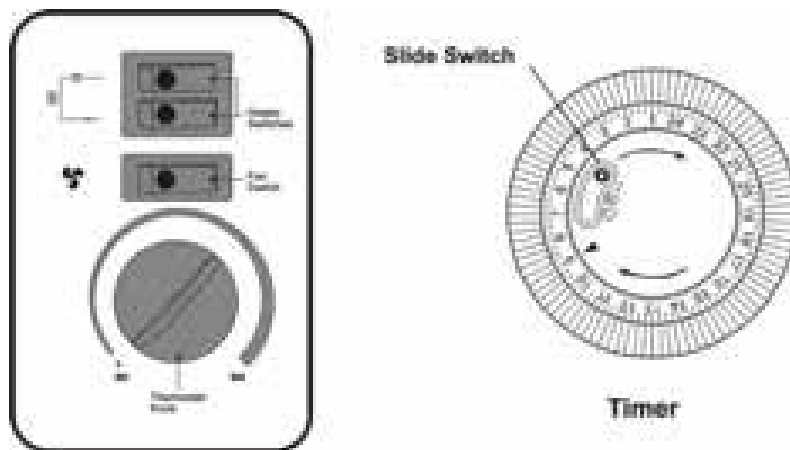

CLEANING THE HEATER

Always unplug the heater from the wall socket and allow it to cool down before cleaning. Do not use any detergents or abrasives and do not allow any water to enter the heater.

STORING THE HEATER

When the heater is not used for long periods of time it should be protected from dust and stored in a clean dry place.

CARE AND MAINTENANCE

Always unplug the convector heater from the mains power supply and allow it to cool sufficiently before performing any cleaning or maintenance. Wipe the exterior of the convector heater with a soft, damp cloth and allow to dry thoroughly. Do not use harsh or abrasive cleaning solvents or scourers, as these may damage the finish of the convector heater. Check regularly for any blockages on the vent, to prevent the thermal cut-out device from operating.

Do not immerse the convector heater in water or any other liquid.

ELECTRICAL INFORMATION

(Fixed Mains Plug Only)

The mains lead supplied with this product is fitted with a B51363/ A 13 amp plug. If it is not suitable for your supply sockets it must be replaced with an appropriate plug. If the plug becomes damaged and/or needs to be replaced please follow the wiring instructions on the next page. The plug removed must be disposed of immediately. It must not be plugged into a supply socket as this will be an electrical hazard. If the fuse needs to be replaced it must be of the same rating and ASTA approved to B51362. If the plug is changed, a fuse of the appropriate rating must be fitted in the plug, adapter or at the distribution board. If the fuse in a moulded plug is replaced, the fuse cover must be refitted before the application can be used.

WIRING INSTRUCTIONS

The supply cable will be either 2-core or 3-core. Follow the appropriate wiring instructions shown. In both cases ensure that the outer sheath of the cable is held firmly in place by the cable clamp.

 
ELECTRICAL INFORMATION (Power adapters only)

Never open the power adapter, you risk getting an electric shock. Only use the power adapter that is supplied with your product. You must always connect the power adapter to the product before connecting to the mains power

supply. The power adapter must be used indoors only, and must not be subjected to damp conditions. The power adapter does not have any user serviceable parts.


2-CORE PLUG

WARNING: Do not connect either wire to the earth terminal. This symbol indicates that this 2-core [g] appliance is Class II and does not require an earth connection. The wire coloured blue must be connected to the terminal marked with the letter N or coloured black. The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

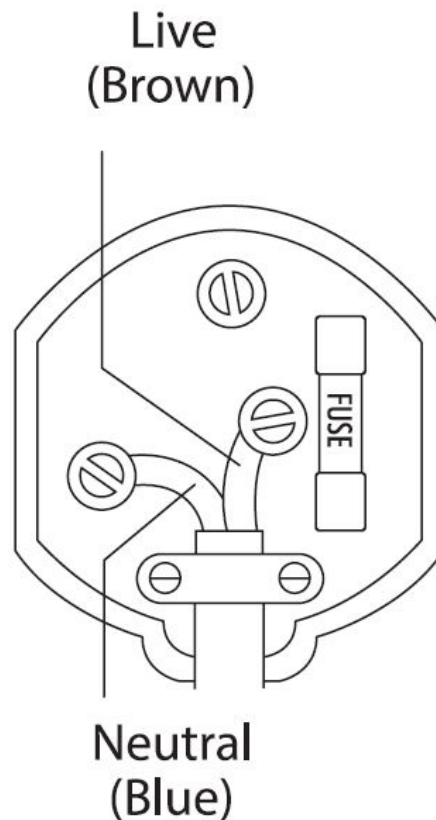

3-CORE PLUG

 WARNING: This appliance must be earthed. The wire coloured green and yellow must be connected to the terminal marked with the letter E, or by the earth symbol, or coloured green or green and yellow. The wire coloured blue must be connected to the terminal marked with the letter N or coloured black. The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

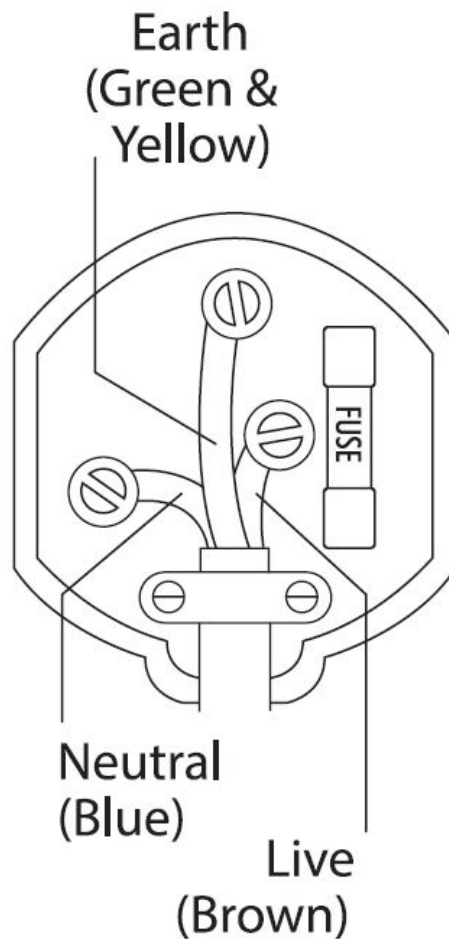

TECHNICAL SPECIFICATION

- **Model Number:** 375833
- **Voltage:** 220-240 V ~ 50 Hz
- **Total heat power:** 2000W

This appliance complies with the below listed EU Directives

- 2014/30/ EU Electromagnetic Compatibility Directive
- 2014/35/ EU Low Voltage Directive
- 2011 /65/ EU Restriction of Hazardous Substances

The complete declaration of conformity is available upon request for relevant enquiries

CUSTOMER SUPPORT

For all product support, please email:

blaupunkt@bmstores.co.uk

GUARANTEE

This product is guaranteed for twelve months from the date of original purchase. If any defect should occur due to faulty materials or workmanship, please return it to the store it was purchased from. You will need to have your receipt of purchase to hand . The guarantee is subject to the following provisions:


- It is only valid within the boundaries of the country of purchase.
- The product must be correctly installed and operated in accordance with the instructions contained in the User Manual.
- The product must be used solely for domestic purposes.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexperienced repair.
- The manufacturer disclaims any liability for incidental or consequential damages.
- The guarantee is in addition to, and does not diminish, your statutory or legal rights.

ERP Table

Item	Symbol	Value	Unit	Item	Unit
Heat Output				Type of heat input for electric storage local space heaters only (select one)	
Nominal heat output	P _{nom}	1.9	kW	Manual heat charge control, with integrated thermostat	No
Minimum heat output (indicative)	P _{mim}	0.0212	kW	Manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max,c}	1.9	kW	Electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				Fan assisted heat output	No
At nominal heat output	e _{lmax}	N/A	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	N/A	kW	Single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	N/A	kW	Two or more manual stages, no room temperature control	No

				With mechanic thermostat room temperature control	Yes
				With electronic room temperature	No
				Electronic room temperature control plus day timer	No
				Electronic room temperature control plus week timer	No
				Other control options (multiple selections possible)	
				Room temperature control, with presence detection	No
				Room temperature control, with window detection	No
				With distance control option	No
				With adaptive start control	No
				With working time limitation	No
				With black bulb sensor	No

Documents / Resources

 <p>BLAUPUNKT Owner's Manual</p> <p>Model Number 375833</p> <p>Enjoy it.</p> <p>2KW Turbo Convector Heater and Timer</p>	<p>BLAUPUNKT 375833 2KW Turbo Convector Heater and Timer [pdf] Owner's Manual 375833, 2KW Turbo Convector Heater and Timer, 375833 2KW Turbo Convector Heater and Ti mer, Heater and Timer, Timer</p>
--	---