



BLAUPUNKT Alarm Clock Radios Owner's Manual

[Home](#) » [Blaupunkt](#) » BLAUPUNKT Alarm Clock Radios Owner's Manual

BLAUPUNKT Alarm Clock Radios Owner's Manual



Alarm clock radio with indoor humidity and temperature

Important Notes

- safety and operating instruction should be retained for future reference.
- The apparatus should not be exposed to dripping or splashing or placed in a humid atmosphere such as a bathroom.
- Do not install the product in the following areas:
 - Places exposed to direct sunlight or close to radiators.
 - On top of other stereo equipment that radiate too much heat.
 - Blocking ventilation or in a dusty area.
 - Areas where there is constant vibration.
 - Humid or moist places.
- Do not place near candles or other naked flames.
- Operate the product only as instructed in this manual.
- Before turning on the power for the first time, make sure the power adaptor is properly connected.

For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. Refer any servicing to qualified personnel. Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside. Refer all servicing to qualified service personnel.

SAFETY INSTRUCTIONS

1. Read Instructions – All the safety and operating instructions must be read before the product is operated.
2. Retain Instructions – The safety and operating instructions should be kept with the product for future reference.
3. Heed warnings – All warnings on the product and in the operating instructions should be adhered to.
4. Follow instructions – All operating and users' instructions should be followed.
5. Installation – Install in accordance with the manufacturer's instructions.
6. Power sources – This product should be operated only from the type of power source indicated by the marking adjacent to the power cord entry. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.
7. Water and moisture – To reduce the risk of fire or electric shock, do not expose the product to rain, dripping, splashing or excessive moisture such as in a sauna or bathroom. Do not use this product near water, for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement or near a swimming pool (or similar).
8. Object and Liquid Entry – Never push objects of any kind into this product through openings, as they may touch dangerous voltage points or short-circuit parts that could result in a fire or electric shock. Never spill liquid of any kind on the product. Do not place any object containing liquid on top of the product.
9. Servicing – Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
10. Replacement parts – When replacement parts are required, ensure that the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
11. The highest environmental temperature suitable for this product is 35°C.
12. ESD hints – If the product maybe reset or not reset to operation of control due to electrostatic discharge, just switch off and reconnect again, or move the product to another location.
13. Battery
 - a. The batteries must not be exposed to excessive heat such as sunshine, fire or the like.
 - b. The batteries should be drawn to the environmental aspects of battery disposal.
 - c. Battery usage CAUTION-to prevent battery leakage which may result in body injuries, property damage, or damage to the apparatus:
 - Install all batteries correctly, + and - as marked on the apparatus.
 - Do not mix batteries (old and new or carbon and alkaline, etc.)
 - Remove batteries when the unit is not used for a long time.

ERP2 (Energy Related Products) note

This product with ecodesign complies with the stage 2 requirements of Commission Regulation (EC) NO. 1275/2008 implementing Directive 2009/125/EC regard to standby and off mode electric power consumption of electronic household and office equipment.

WARNING

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction

concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

1. Never use the device unsupervised! Switch off the device whenever you are not using it, even if this only for a short while.
2. The appliance is not intended to be operated by means of an external timer or separate remote control system.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
5. To prevent fire or shock hazard, do not expose this equipment to hot places, rain, moisture or dust.
6. Do not place this unit close to a strong magnetic field.
7. Do not place the unit on a amplifier or receiver.
8. Do not place this unit in a damp area as the moisture will affect the life of electric components.
9. If the system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens inside the player. If this occurs, the system will not operate properly. Please leave the system turned on for about an hour until the moisture evaporates.
10. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.

NOTICE



Conformity Hereby, Blaupunkt Competence Center 2N-Everpol Sp. z o.o., declares that this equipment is in compliance with the essential requirement and other relevant provisions of Directive 2014/53/EU. Declaration of conformity can be obtained from the product page at www.blaupunkt.com.

Responsible party: 2N-Everpol Sp. z o.o, Pulawska 403A, 02-801 Warsaw, Poland, Phone: +48 22 331 99 59, E-mail: info@everpol.pl



Your products is designed a manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2012/19/EU. Please inform yourself about the local separate collection system for electrical and electronic products. Please cat according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environment and human health.


Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and poly ethylene (bags, protective foam sheet). Your system consists of material which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment. Recording and playback of material might require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

Contents [[hide](#)

- [1 Control locations](#)
- [2 Installation](#)
- [3 Troubleshooting](#)
- [4 Care of your product](#)
- [5 Specification](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)

Control locations

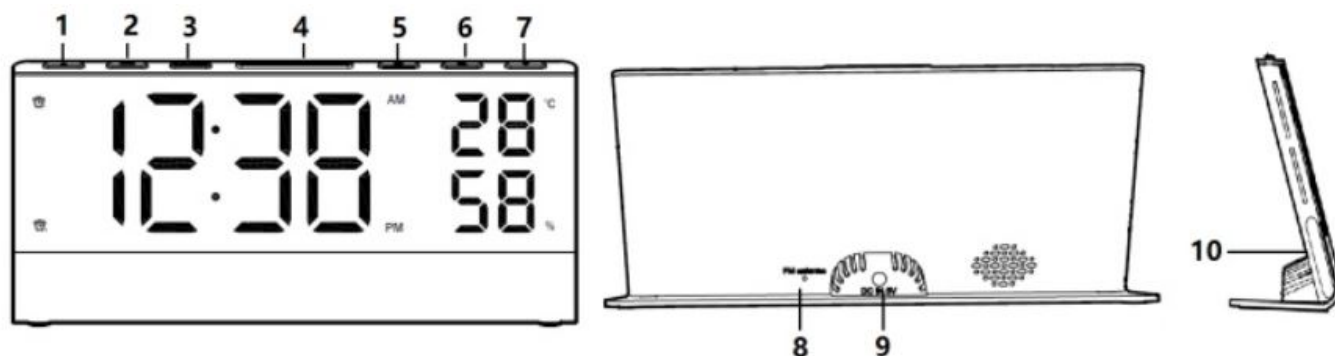

1. down button,
2. radio button,
3. alarm 1-2/on-off button,
4. snooze/dim button,
5. set button,
6. volume button,
7. up button,
8. FM antenna,
9. DC 5V jack,
10. backup cell battery compartment.

Installation

Plug the AC/DC adaptor to an AC household outlet, and then plug the DC jack to the back of the unit. Your clock radio is ready to work for you.

Back up battery installation

Your clock radio requires one CR2032 lithium battery (not included) to provide backup power to the clock in the event of a temporary power interruption. 1. Pull out the cell battery cover on side of unit by your fingers; install one fresh CR2032 lithium battery into the battery bracket according to engraved +/- polarity. 2. Push back the battery bracket into the compartment together the installed battery. If AC power interrupted, the LED display will go off and both the radio and the alarm will not function. The backup battery will keep the time and all settings of your unit. Make sure a fresh CR2032 lithium battery is used. A fresh CR2032 battery could backup your clock continuously for around 3 days.

Setting time, 12/24HR time and the snooze duration

1. Press set once, the hour digits flash. Press up or down button to set the current hour (hold to advance rapidly).
2. Press set again, the minute digits flash. Press up or down button to set minutes. (hold to advance rapidly).
3. Press set again, the display shows "24H" and flashes. Press up or down button to select "12H" or "24H" time format.
4. Press set again, the display shows "05" and flashes. Press up or down button to select your snooze time from 5 to 60 minutes.
5. Press set again or if no key is pressed in approx. 10 seconds to exit the setting mode. Note: when 12-hour time format is selected, the PM/AM LED will appear at the display to indicate the time

Setting the alarms

1. Press alarm 1-2 button once, the alarm1 clock icon and the hour digits flash. Press up or down button to set the alarm 1 hour. (hold to advance rapidly).
2. Press alarm 1-2 button again to adjust minutes. Press up or down button to set the alarm 1 minutes. (hold to advance rapidly).
3. Press alarm 1-2 button again, LED displays "OFF" (alarm off). To select wake to sound sources, press up or down button to select :
rd = wake-by-radio
bu = wake-by-buzzer
OFF = alarm off
4. Press alarm 1-2 button again, the alarm2 clock icon and the hour digits flash. Press up or downbutton to set the alarm 2 hour. Repeat step 1- 3 to set alarm 2.
5. Press alarm 1-2 button again or no button is pressed in around 10 seconds to exit alarm setting mode. When wake-by-radio or wake-by-buzzer is selected, the related alarm is turned on, the alarm 1 or 2 clock icon will show on the left side of the display. Note: Alarm function only can be operated at AC mode only.

Stop and reset the alarm to the coming next day

When alarm 1 or 2 is sounding, the related alarm1 or 2 clock icon flashes. Press the radio or alarm1-2 button once to stop the alarm and reset it to come on the following day. After that, alarm1 or 2 clock icon stays on the display.

Snooze operation (default snooze duration is 5 minutes)

When alarm is sounding, press snooze/dim button once, the alarm will be silenced and come on again after the set snooze duration. Note: If your second alarm activates while the first alarm is sounding or it is in the snooze mode, the second alarm overrides the first alarm (the first alarm is reset to come on the next day).

Using the HI-LO dimmer

Press snooze/dim button to adjust the brightness (HI/ LO/OFF) of the LED display. This can only be done when the radio is off or the unit is not sounding.

Set up the FM antenna

Extend the FM wire antenna fully and vary the direction for the best FM reception. Do not strip, alter or attach to other antennas. Listen to the radio

1. To turn on the radio, press radio button once, the display shows "ON" and then shows the radio frequency readings in MHz.
2. Press up or down button to tune the radio to a desired station. Press and hold up or down button to scan for the next clear station.
3. To adjust the volume, press volume button once, the display shows "V07", press up or down button to adjust volume from V01 (minimum) to V15 (maximum)
4. Press snooze/dim button to turn off the radio.

Remark: Keep your radio away from fluorescent lamps or other electronic devices, which may cause interference to the radio.

Using the preset memory

This clock radio features 20 preset memory of FM stations. These allow you to preset your favorite stations and access them quickly.

1. Turn on the radio and select a radio station you like to memorize.
2. Press and hold set button until "01" flashes. Press up or down button to select the preset station number which you desire to save, press set button once again to confirm and save the current station.
3. Repeat step 1-2 to save other preset station.
4. To access a preset station at any time, simply press the set button once at any time while the radio is on.
5. To edit a preset station, select another station and then repeat step 1 -2. This overrides the original settings.

Using the sleep timer

In radio mode, short press the radio button repeatedly to switch the sleep time between minute of 5/15/30/45/60/75/90/off. Choosing your desired sleep time, the unit will start to count-down the playing time, and the radio sound will off automatically when the sleeping time is being; press the radio button twice can check the remaining sleeping time.

Indoor humidity and temperature: the unit can detect and show the indoor humidity in percentage, and temperature in Celsius degree information on the right side of display. Please note the information probably have some deviation depends on ambient condition. This is not malfunction.

Troubleshooting

If your clock displays irrelevant time or does not function properly, which maybe caused by electro-static discharge or other interference, unplug the DC jack to disconnect the AC power (and remove the backup battery). The clock radio will be reset to default settings and you need to set it again.

Care of your product

1. Place your clock radio on a stable surface, away from sources of direct sunlight or excessive heat or moisture.
2. Protect your furniture when placing your units on a natural wood and lacquered finish by using a cloth or

protective material between it and the furniture.

3. Clean your unit with a soft cloth moistened only with mild soap and water. Stronger agents such as Benzene, thinner or similar materials can damage the surface of the unit. Make sure the unit is unplugged before cleaning.
4. If the unit is not to be used for a prolonged period, such as a month or longer, remove the batteries to prevent possible corrosion. Should the battery compartment become corroded or dirty, clean the compartment thoroughly and replace the batteries.

Specification

Alarm duration 1 hour

Snooze duration 5 to 60 minutes

Sleep timer selections 5, 15, 30, 45, 60, 75, 90 minutes to OFF

Volume V01 (minimum) to V15 (mimum)

Preset Memories of radio 20

Default settings:

Time format 12/24 hour

Time 0:00

Alarm 1 and 2 6:00

Volume V07 (Level 7)

Snooze duration 05 (5 minutes)

(above spec may revise with prior notice)

Power adaptor information		
Information published	Value and precision	Unit
Manufacturer's name or trade mark Commercial registration number Address	Dongguan City Shijie Hua Xu Electronics Factory,914419007946843518 Room 103,No.200,Technology East Road,Shijie Town,DongGuan	
Model identifier	HX06-0501000-AG	
Input voltage	100-240	V
Input AC frequency	50/60	Hz
Output voltage	DC5	V
Output current	1.0	A
Output power	6.0	W
Average active efficiency	≥ 73.62	%
Efficiency at low load (10 %)	73%	%
No-load power consumption	≤ 0.1	W

Competence Center
2N-Everpol Sp.zo.o
ul.Pulawska 4034
02-801 Warsaw, Poladn
phone:+48 223319959
e-mail:info@everpol.pl
www.blaupunkt.com

W przypadku pytan lub problemow
prosimy o kontakt z naszym serwisem.
in case of questions or problems please contact our service.
Tel.00 48 22 331 99 53

All rights reserved. All brand name are registreted trademarks of theie respective owners. Specifications are subject to change without prior notice.



Documents / Resources

	<p>BLAUPUNKT Alarm Clock Radios [pdf] Owner's Manual Alarm Clock Radios, CR10ALU</p>
---	--

References

- [● blaupunkt.com](https://www.blaupunkt.com)