



BLAUPUNKT BP2012 Ceiling Fan User Manual

[Home](#) » [Blaupunkt](#) » BLAUPUNKT BP2012 Ceiling Fan User Manual 

BLAUPUNKT BP2012 Ceiling Fan User Manual



Enjoy it.

READ INSTRUCTIONS CAREFULLY FOR SAFE INSTALLATION AND FAN OPERATION. IF UNSURE CONSULT A QUALIFIED ELECTRICIAN.

THANK YOU FOR YOUR PURCHASE

Thank you for purchasing this quality product. To ensure correct function and safety, please read and save all instructions before using the product

Contents

- 1 SAFETY RULES
- 2 BEFORE INSTALLATION
- 3 MAKE THE ELECTRIC CONNECTIONS
- 4 USING YOUR CEILING FAN
- 5 AFTER INSTRUCTION
- 6 CARE AND CLEANING
- 7 GUARANTEE DOCUMENT
- 8 DECLARATION OF CONFORMITY
- 9 Documents / Resources

SAFETY RULES

1. To avoid possible electric shock, turn off the electricity at the main fuse box or circuit panel before you begin the fan installation or before servicing the fan or installing accessories.
2. Read all instructions and safety information carefully before installing your fan and save these instructions.
3. Make sure all electrical connections comply with local codes or ordinances and the National Electrical Code. If you are unfamiliar with electric wiring, please use a qualified and licensed electrician.
4. Make sure you have a location selected for your fan that allow clear space for the blades to rotate, and at least seven (7) feet of clearance between the floor and the fan blade tips. The fan should be mounted at least thirty (30) inches from walls or other upright structures.
5. **WARNING:** The outlet box and ceiling support joist used must be securely mounted, and capable of supporting at least 100 pounds. To reduce the risk of fire, electric shock or personal injury, mount to the outlet box marked acceptable for fan supported and use mounting screws provided with the outlet box. The box must be supported directly by the building structure.
6. **WARNING:** To reduce the risk of fire, electric shock or personal injury, mount to outlet box marked “acceptable for fan support” and use mounting screws provided with the outlet box most outlet boxes commonly used for the support of lighting fixtures are not acceptable for fan support and may need to be replaced. Consult a qualified electrician if in doubt.
7. After installation is complete, check that all connections are absolutely secure.
8. After making electrical connections, spliced conductors should be turned upward and pushed carefully up into outlet box. The wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box.
9. **WARNING:** To reduce the risk of electrical shock and fire, do not use this fan with any solid-state fan speed control device, or rheostat.
10. Do not separate the reverse switch until the fan has come to a complete stop.
11. Do not insert anything into the fan blades while they are rotating.
12. **WARNING:** To reduce the risk of personal injury, do not bend the blade brackets (also referred to as “flanges”) during assembly or after installation. Do not insert objects in the path of the blades.
13. To avoid personal injury or damage to the fan and other items, be cautious when working around or cleaning the fan.
14. Do not use water or detergent when cleaning the fan or fan blades. A dry dust cloth or lightly dampened cloth will be suitable for most cleaning.
15. The fan is suitable for indoor use only.


NOTE: The important safety precautions and instructions appearing in the manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense and caution are necessary factors in the installation and operation of this fan.

NOTE: This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities are different or are impaired, or lack of experience or knowledge, unless such persons are supervised or trained to operate the appliance by a person responsible for their safety.

NOTE: Children should be supervised to ensure that they do not use appliances as a toy.

BEFORE INSTALLATION

Unpack your fan and check the contents. You should have the following:

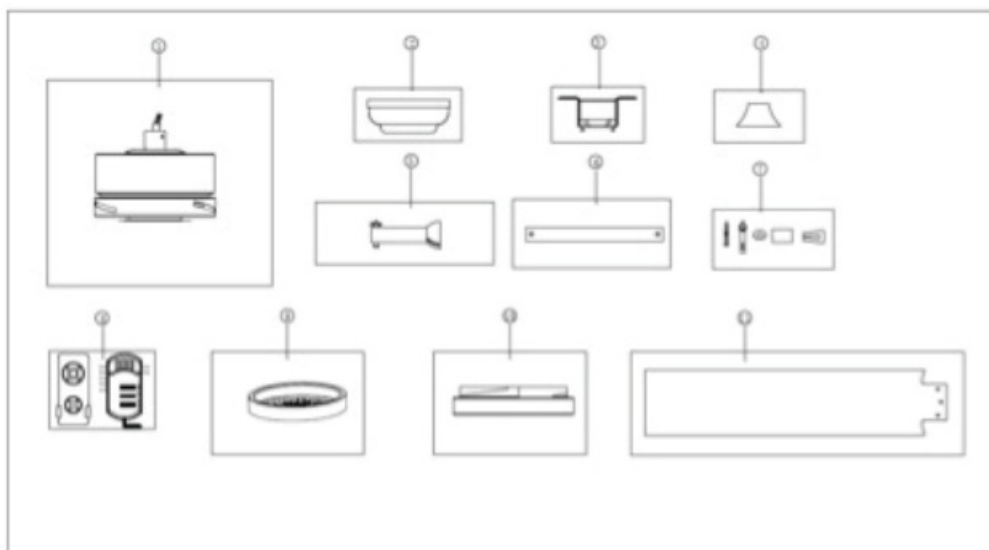

1. Fan motor assembly
2. Canopy
3. Hanger bracket
4. Coupling cover
5. Downrod & hanger ball
6. Optional downrod

7. Hardware bag (Wood screws , Expansion screws, Plastic anchor, Balance tapes)
8. Remote control set
9. Light Kit
11. Glass shade
12. Blades


INSTALLING THE FAN

Tools Required: Phillips screwdriver, Pair of pliers, straight slot screwdriver, adjustable wrench, step ladder, and wire cutters.


INSTALLING THE MOUNTING BRACKET

The ceiling fan must be installed in a location so that the blades are 12"(300 mm) spacing from the tip of the blade to the nearest objects or walls. When hanging the Fan REMEMBER to turn off the power. Follow the instruction below to hang your fan properly:

1. For concrete ceiling, drill two holes in the ceiling and secure the mounting bracket to the ceiling with two $\Phi 0.32"$ (8mm) (distance between the two holes should be appropriate) expansion screws, flat washers, nuts provided and tighten with a spanner.

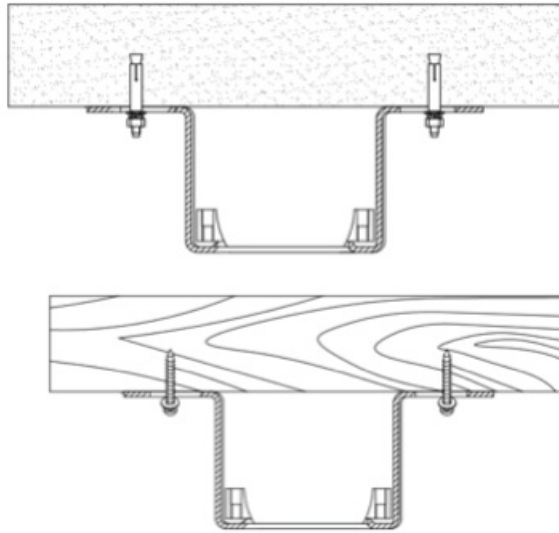

2. For wood ceiling, Secure the mounting bracket to the ceiling is capable of carrying a load of at least 100lbs (45kgs) with two long mounting screws and washers provided. Be sure at least 0.12" (30 mm) of the screw is threaded into the support.
3. Refer to the Fig. in right for mounting when the ceiling is angled max. 15 degree angle.

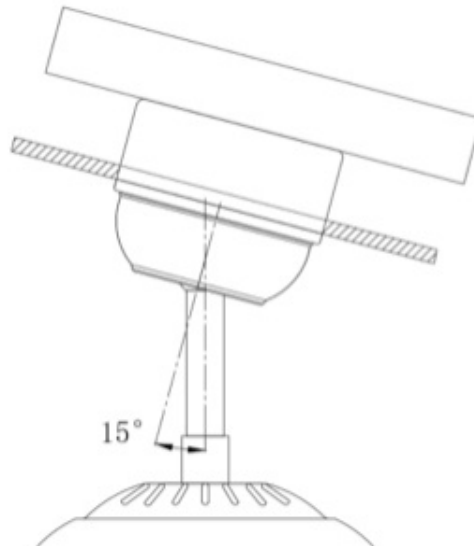

NOTE: Hanger after the installation must be able to withstand the weight of 100lbs (45 kgs) or more.

INSTALLING THE DOWNROD


When hanging the Fan REMEMBER to turn off the power. Follow the steps below to hang your fan properly:

1. Remove the bolt, lock pin and set screws from the top of the housing assembly
2. Route wires exiting from the top of the fan motor through the bolt & pin cover, canopy and then through the ball/downrod.
3. Align the holes at the bottom of the downrod with the holes in the coupling on top of the top housing.
4. Carefully insert the Bolt through the holes in the Coupling and downrod. Be careful not to jam the Bolt against the wiring inside the downrod. Insert the locking pin through the hole near the end of the Bolt until it snaps into its locked position.
5. Tighten two set screws on top of the fan housing firmly

Changing the Downrod (Optional)


NOTE: Your fan comes with a 25cm downrod attached to the hanger ball. In addition, a 10cm downrod has been provided to be used in case the ceiling is lower. In this case, perform the following steps for correct installation:

1. Remove the hanger ball from downrod by loosening the setscrew at the top of the downrod which holds the hanger ball to the downrod.
2. Slide the hanger ball down the downrod and remove the support pin.
3. Insert the support pin in the holes at the top of the 10cm downrod and slide the hanger ball up the 10cm downrod. Make sure the support pin is properly seated in the grooves in the top of the hanger ball.
4. Tighten the set screws firmly

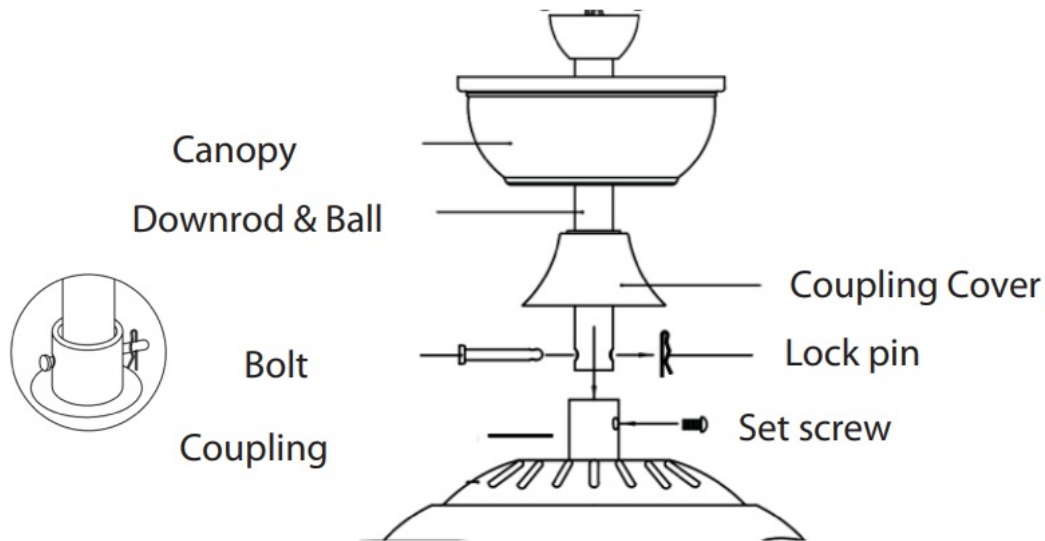

INSTALLING THE BLADES


Insert blade into the slot on flywheel. Install blade with screws and washers that are pre-assembled. Aligning each of the holes and tighten all screws securely. Repeat this process for remaining blades.

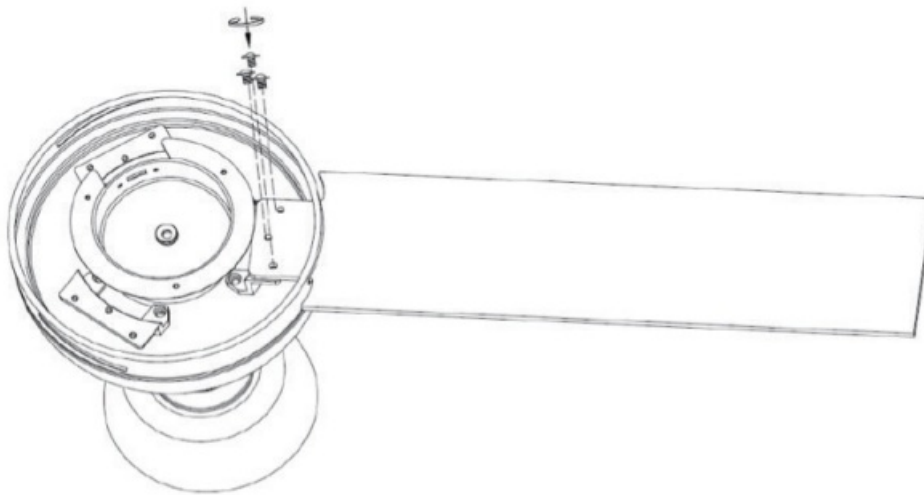

INSTALLING THE LIGHT KIT

Note: Before starting installation, disconnect the power by turning off the circuit breaker or removing the fuse at fuse box.


1. Loosen 2 screws and remove 1 screw from the base plate
2. Connecting the wire plug from LED light source to the wire plug from fan motor assembly.
3. Install the light pan to the base plate by using the screws that are loosened and removed previously. Tighten all screws securely.
4. Install the glass shade by turning clockwise in position. Make sure the glass is locked in place.

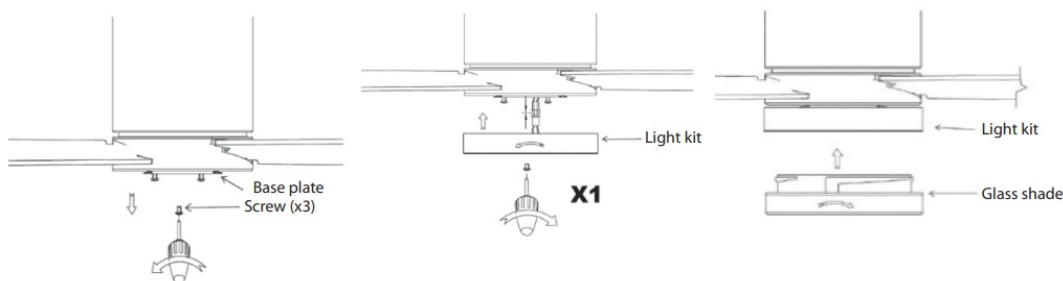

INSTALLING THE FAN TO MOUNTING BRACKET ON CEILING

WARNING: To avoid possible electrical shock, be sure electricity is turned off at the main fuse box before wiring.


1. Install ball end of downrod into mounting bracket opening. Align (engage) slot on ball with tab on mounting bracket. Warning: Failure to align slot on ball with tab may result in serious injury.
2. Slide the canopy up to ceiling and align the keyhole slots on the canopy with the preassembled screws on the hanger bracket. Twist clockwise until it locks. Tighten the two screws securely.

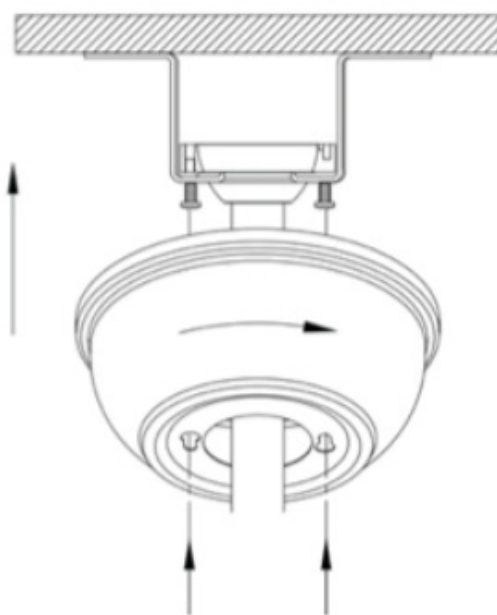

MAKE THE ELECTRIC CONNECTIONS

WARNING: To avoid possible electrical shock, be sure electricity is turned off at the main fuse box before wiring.


1. Insert the receiver into the mounting bracket with the fl at side of the receiver facing the ceiling.
2. Motor to Receiver Electrical Connections: Connect the brown wire from the fan to output brown wire from the receiver. Connect the white wire from the fan to the output white wire from the receiver. Connect the Blue wire from the fan to the output blue wire from the receiver. Secure wire connections with the wire nuts provided.
3. Grounding wire connection: Connect the grounding wire from the ceiling to green/yellow wire from mounting bracket and downrod. Secure wire connection with wire nuts provided.
4. Receiver to House supply wires Electrical Connections: Connect the brown (live) wire from the ceiling to the brown wire from the receiver. Connect the blue(neutral) wire from the ceiling to the blue wire from the Receiver. Secure the wire connections with the wire nuts provided.

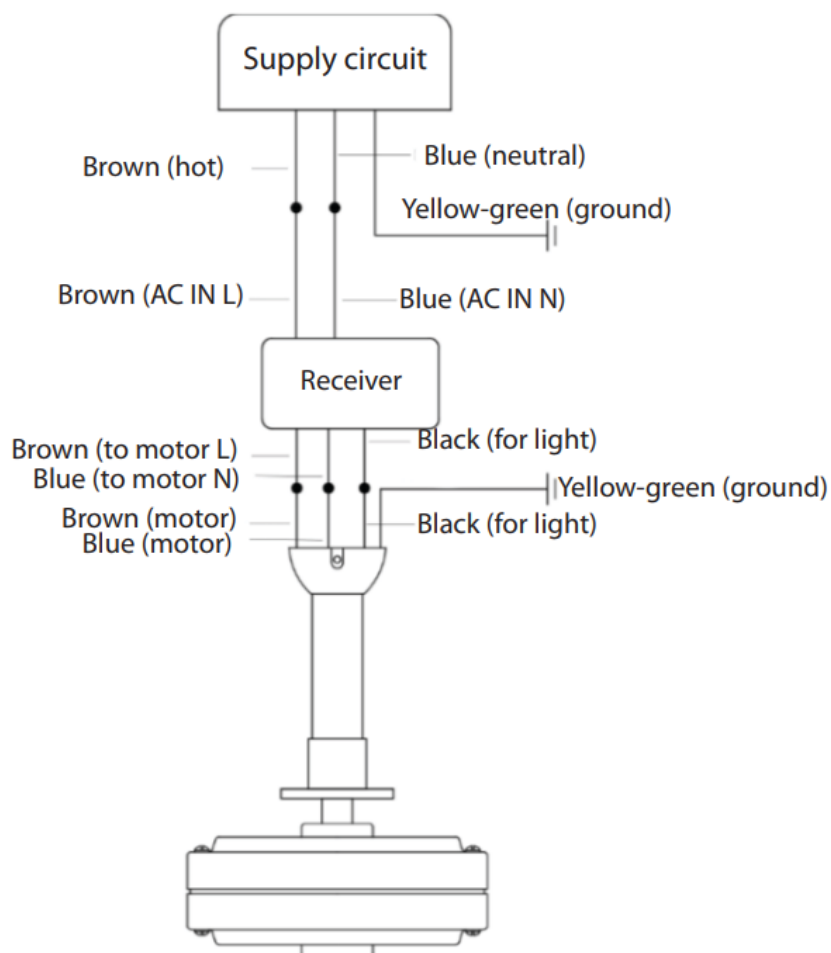

USING YOUR CEILING FAN

REMOTE CONTROL

Button Operation Instructions

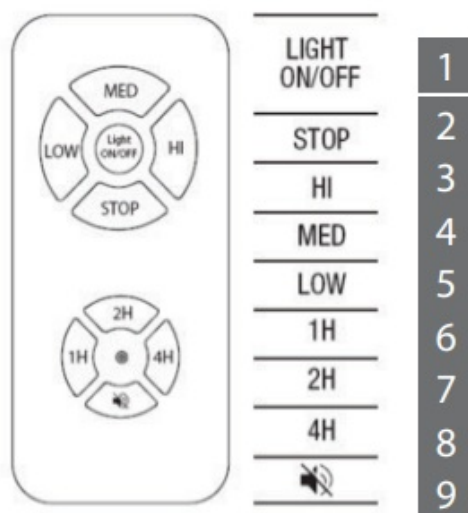

1. LIGHT ON/OFF – Turn on / Turn off light Change color temperature
2. STOP – Turn off fan
3. HI – High speed (Speed 3)
4. MED – Medium speed (Speed 2)
5. LOW – Low Speed (Speed 1)

6. 1H – Timer 1h
7. 2H – Timer 2h
8. 4H – Timer 4h
9. Mute sound control

Battery for emitter: 2 x 1.5V AAA


Installation of transmitter wall

Mount holder with two screws.



Reverse function

Slide the forward/reverse switch on the base plate to get desired airflow direction. Please refer to the below image for the location of the forward/reverse switch.

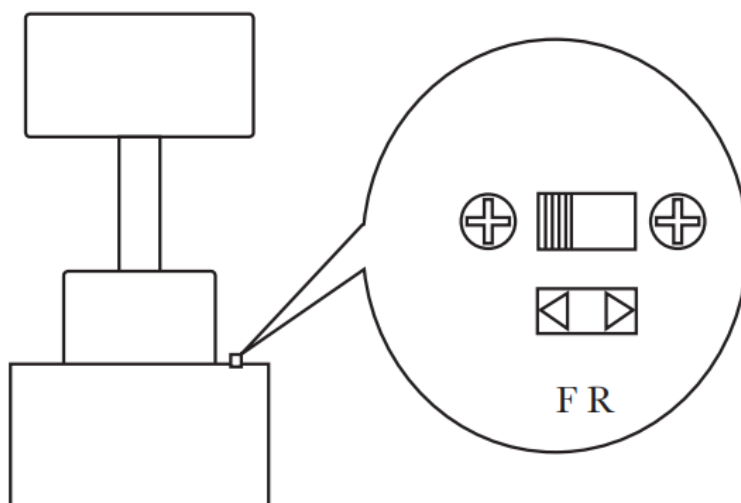

Slide the forward/reverse switch on the top of the motor assembly to get desired airflow direction.


AFTER INSTRUCTION

WOBBLE

The fan blades have been adjusted in the factory to minimize any wobble

NOTE: CEILING FANS TEND TO MOVE DURING OPERATION DUE TO THE FACT THAT THEY ARE MOUNTED ON A RUBBER CROMMET. IF THE FAN WAS MOUNTED RIGIDLY TO THE CEILING, IT WOULD CAUSE EXCESS VIBRATION. MOVEMENT OF A FEW CENTIMETERS IS QUITE ACCEPTABLE AND DOES NOT SUGGEST ANY PROBLEM TO REDUCE THE FAN WOBBLE: PLEASE CHECK THAT ALL SCREWS WHICH SECURED THE MOUNTING RACKET AND DOWNROD ARE SECURE.

BALANCING A WOBBLING CEILING FAN:

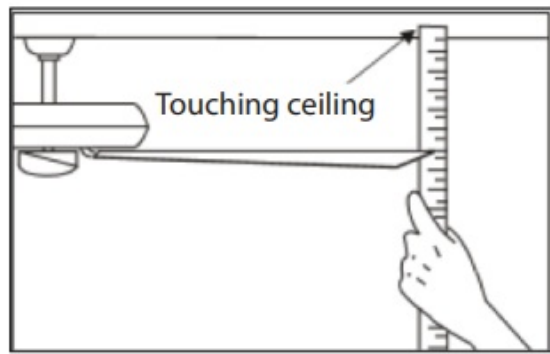

For your convenience, a Balancing Kit is included; please follow this procedure when balancing the fan:

1. Check that all blade and blade arm screws are secure.
2. Most fan wobbling problems are caused when blade levels are unequal. Check this level by selecting a point on the ceiling above the tip of one of the blades. Measure this distance. Rotate the fan until the next blade is positioned for measurement. Repeat for each blade. The distance deviation should be equal within $1/8"$ (0.32cm).
3. Use the enclosed Blade Balancing Kit if the blade wobble is still noticeable.
4. If the blade wobble is still noticeable, interchanging two adjacent (side by side) blades can redistribute the weight and possibly result in smoother operation.

WARNING: TO REDUCE THE RISK OF PERSONAL INJURY, DO NOT BEND THE BLADE ARM WHILE INSTALLING, BALANCING THE BLADES, OR CLEANING THE FAN. DO NOT INSERT FOREIGN OBJECTS BETWEEN ROTATING FAN BLADES.

NOISE

When it is quiet (especially at night) you may hear occasional small noises. This is normal. Please allow a 24-hour "breaking-in" period, most noises associated with a new fan disappear during the time.

CARE AND CLEANING

1. Periodic cleaning of your ceiling fan is the only maintenance required. Use a soft brush or lint free cloth to avoid scratching the paint finish. Please make sure to turn off electricity power before you clean your fan
2. Do not use water when cleaning your ceiling fan. It could damage the motor or the blades and create the possibility of an electrical shock.
3. Motor has permanently lubricated ball bearing. No need to oil

NOTE: MAKE SURE THE POWER IS OFF AT THE ELECTRICAL PANEL BOX BEFORE YOU ATTEMPT ANY CLEANING OR REPAIRS.

GUARANTEE DOCUMENT

Thank you for purchasing this BLAUPUNKT product, this device has been checked in all its components meticulously, so we guarantee the correct operation, but for this to be the case we need that YOU read the instruction book carefully, as this will contribute to the best performance of this article.

R.S.A guarantees to the buyer of this product, a total guarantee of TWO YEARS, governed by the established conditions whose regulation is found in Royal Legislative Decree 1/2007 of 16 December, which approves the revised text of the General Law for the Defense of Consumers and Users, (articles 114 to 127) R.S.A is committed to repairs are completely free, labor and spare parts, including.

The Technical Assistance Service will resolve any repairs that may be required by this apparatus.

Carefully review the INSTRUCTION BOOK included, on the use, maintenance and conservation of the device. Any anomaly that could occur due to the non-observance of such instructions will not be protected for the guarantee.

The date of sale of the device, for the purposes of warranty period, will be that which appears on the purchase invoice.

Guarantee operation: As regards all those compliance defects detected by the technical assistance, which are manifested within six months of the delivery of the goods, it is assumed that they already existed on that date, the intervention will be completely free, (unless this hypothesis is incompatible with the nature or nature of the conformity defect).

During the following eighteen months, it must be the user who demonstrates. That the lack of conformity It was coming at the time of delivery.

MANUFACTURED CHINA FOR BLAUPUNKT


DECLARATION OF CONFORMITY

Manufacturer Name:	RAMSONS, S.A.
Address:	C/ Lino nº 1
Post Code:	41006 SEVILLA

We declare under our responsibility that the product:

Product Description:	CEILING FAN
Model:	BP2011
Brand:	BLAUPUNKT

It complies with the European Union legislation in compliance with the 2004/108 / EU guidelines

The standards apply:	EN 55014-1: 2006+A1:+A2: EN 55014-2: 1997+A1:+A2: EN 61000-3-2:2006+A1:+A2: EN 61000-3-3:2013
Name:	Vivek Sadhwani
Position :	manager
Date:	28 de March 2022
Signature:	

Ramsons, S.A,
Lino nº 1
41006 SEVILLA
Tfn. 954 933 404
Fax. 954 660 533
USER

DATE OF SALE

Seller's signature and stamp

IMPORTANT: To make the guarantee effective, the SELLER must fill out, sign and stamp this Certificate.

To receive assistance under the conditions set forth in this certificate, please submit to the Technical Service Authorized, this document next to the Purchase Invoice

INFORMATION ON RECYCLING

Disposal of the old appliance, the European Directive 2002/96/EC on waste equipment Electrical and Electronic (WEEE), establishes that old appliances can not be thrown municipal waste without normal classification. Appliances have to be collected separately with the to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.



The symbol “container with wheels” crossed out on the product reminds you of obligation, that when you dispose of the device must be collected separately.

Consumers should contact the local or retail authority to obtain information about the correct disposal of your old device.



Documents / Resources

	<p>BLAUPUNKT BP2012 Ceiling Fan [pdf] User Manual BP2012 Ceiling Fan, BP2012, Ceiling Fan, Fan</p>
---	--