



BLAUPUNKT BPA-HX320 4Ch Class AB Amplifier User Manual

[Home](#) » [Blaupunkt](#) » BLAUPUNKT BPA-HX320 4Ch Class AB Amplifier User Manual 

Contents

- [1 BLAUPUNKT BPA-HX320 4Ch Class AB Amplifier](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)
- [3 Related Posts](#)

BLAUPUNKT

BLAUPUNKT BPA-HX320 4Ch Class AB Amplifier



PLEASE READ CAREFULLY BEFORE INSTALLING OR OPERATING THIS UNIT



WARNING

Make sure you choose a suitable place to mount the unit. The position should be completely dry with a good circulation of air, and from a mechanical point of view very stable.

Specifications

Amplifier section

Power output 40 (watts)

Power output 20 (watts)

Power output BTL (watts)

 
 
 
 
THD

 
 
 
 
frequency response (+2d)

 
signal to noise ratio

sensitivity

recommended fuse type dimensions 80W x 4CH 120W x 4CH 240W x2CH 50.1% 20Hz~20KHz 290dB 0.2~6V
30Ax2 375mm x 207mm x 50mm

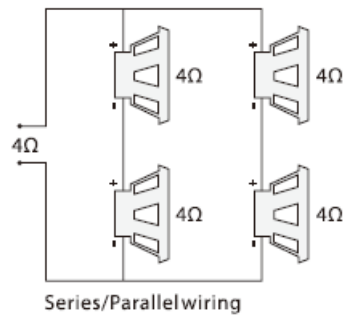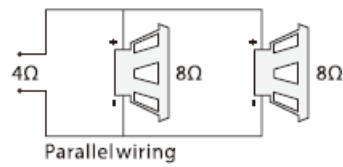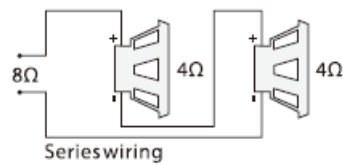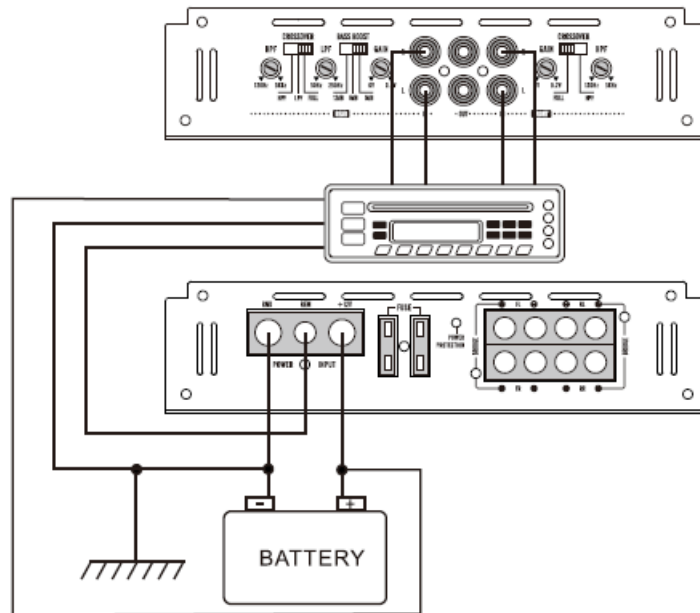

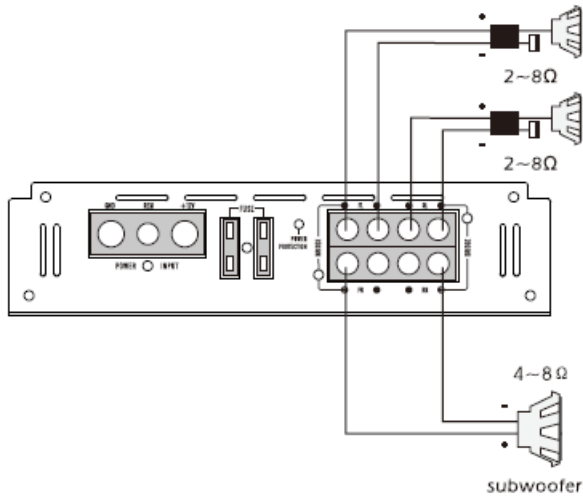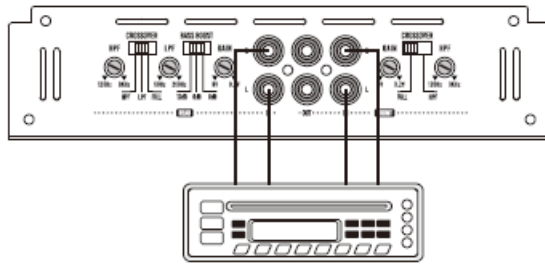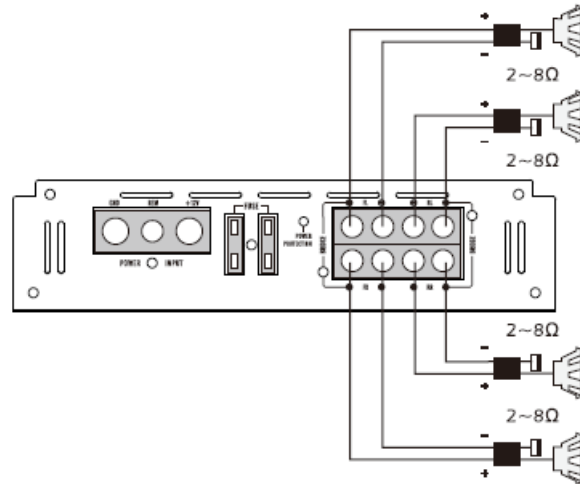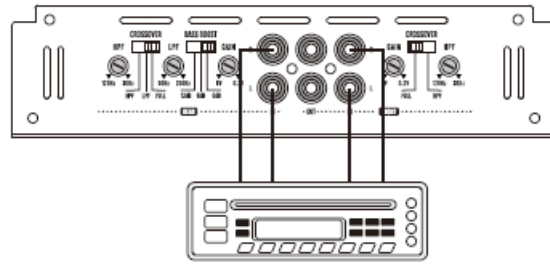

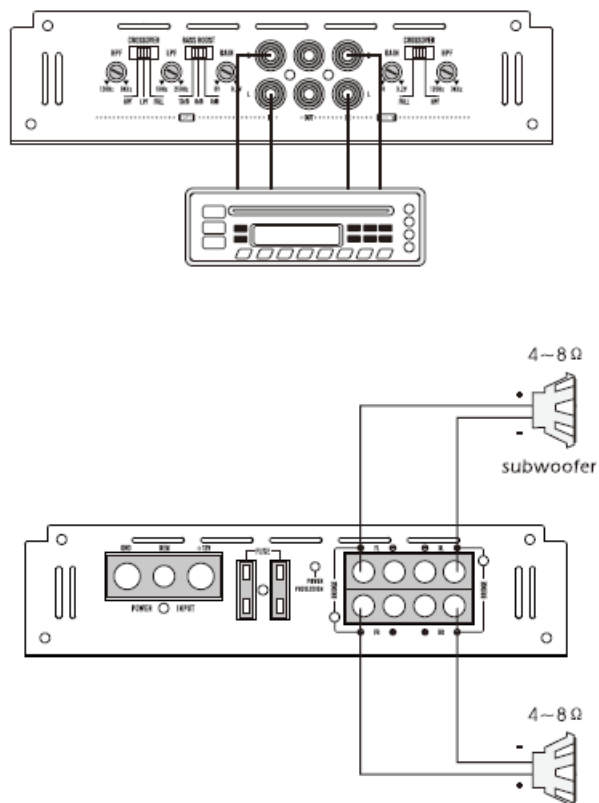

Documents / Resources

	BLAUPUNKT BPA-HX320 4Ch Class AB Amplifier [pdf] User Manual BPA-HX320 4Ch Class AB Amplifier, BPA-HX320, 4Ch Class AB Amplifier, AB Amplifier, Amplifier
---	---

References

- [User Manual](#)