



BLAUPUNKT BS60BK LED Bluetooth Bookshelf Speaker Owner's Manual

[Home](#) » [Blaupunkt](#) » BLAUPUNKT BS60BK LED Bluetooth Bookshelf Speaker Owner's Manual 



BS60WH LED/BS60BK LED
Owner's Manual



Enjoy it.

Bluetooth Bookshelf speaker with HDMI ARC/Optical

Contents

- 1 Important Safety Instructions
- 2 Control panel
- 3 Bluetooth operation
- 4 Trouble shooting
- 5 Specifications
- 6 Documents / Resources
 - 6.1 References

Important Safety Instructions



RISK OF ELECTRIC SHOCK DO NOT OPEN

Caution:

To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.

Explanation of Graphical Symbols:



The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.



The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product. To achieve the utmost in enjoyment and performance, and in order to become familiar with its features, please read this manual carefully before attempting to operate this product. This will assure you years of trouble free performance and listening pleasure.

Important Notes

- This safety and operating instruction should be retained for future reference.
- The apparatus should not be exposed to dripping or splashing or placed in a humid atmosphere such as a bathroom.
- Do not install the product in the following areas:
 - Places exposed to direct sunlight or close to radiators.
 - On top of other stereo equipment that radiate too much heat.
 - Blocking ventilation or in a dusty area.
 - Areas where there is constant vibration.
 - Humid or moist places.
- Do not place near candles or other naked flames.
- Operate the product only as instructed in this manual.
- Before turning on the power for the first time, make sure the power adaptor is properly connected.
- Plug-in the USB stick directly or use an USB-extension cable which is not longer than 25 cm.

For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. Refer any servicing to qualified personnel.
Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside. Refer all servicing to qualified service personnel.

SAFETY INSTRUCTIONS

1. Read Instructions – All the safety and operating instructions must be read before the product is operated.
2. Retain Instructions – The safety and operating instructions should be kept with the product for future reference.
3. Heed warnings – All warnings on the product and in the operating instructions should be adhered to.
4. Follow instructions – All operating and users' instructions should be followed.
5. Installation – Install in accordance with the manufacturer's instructions.
6. Power sources – This product should be operated only from the type of power source indicated by the marking adjacent to the power cord entry. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.
7. Grounding or polarization – the product is not required to be grounded. Ensure that the plug is fully inserted into the wall outlet or extension cord receptacle to prevent blade or pin exposure. Some versions of the product are equipped with a power cord fitted with a polarized alternating line plug (a plug having one blade wider than the other). This plug will fit onto the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet.

Do not defeat the safety purpose of the polarized plug. When using an extension power-supply cord or a power-supply cord other than that supplied with the appliance, it should be fitted with the appropriate molded plugs and carry safety approval appropriate to the country of use.

8. Power cord protection-Power-supply cords should be routed so that they are not likely to be walked on, kinked or pinched by items placed on or against them, paying particular attention to cords from plugs, receptacles and the point where they exit from the product.
9. Overloading – Do not overload wall outlets, extension cords, or multiple sockets, as this can result in a risk of fire or electric shock.
10. Ventilation -The product must be properly ventilated. Do not place the product on a bed, sofa, or other similar surface.
Do not cover the product with any items such as tablecloths, newspapers, etc.
11. Heat-The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products, including amplifiers that produce heat. No naked flame sources, such as lighted candles, should be placed on the apparatus.
12. Water and moisture – To reduce the risk of fire or electric shock, do not expose the product to rain, dripping, splashing or excessive moisture such as in a sauna or bathroom. Do not use this product near water, for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement or near a swimming pool (or similar).
13. Object and Liquid Entry – Never push objects of any kind into this product through openings, as they may touch dangerous voltage points or short-circuit parts that could result in a fire or electric shock. Never spill liquid of any kind on the product. Do not place any object containing liquid on top of the product.
14. Cleaning – Unplug the product from the wall outlet before cleaning. Dust in the woofer may be cleaned with a dry cloth. If you wish to use an aerosol cleaning spray, do not spray directly on the cabinet; spray onto the cloth. Be careful not to damage the drive units.

15. Attachments – Do not use attachments not recommended by the product manufacturer, as they may cause hazards.
16. Accessories – Do not place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.
17. Moving the product – A product and cart combination should be moved with care. Quick stops, excessive force and uneven surfaces may cause the product and cart combination to overturn.
18. Unused periods – The power cord of the appliance should be unplugged from the outlet during lightning storms or when the apparatus is left unused for a long period of time.
19. Servicing – Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
20. Please remove the power plug from the main power source or wall power source when not in use. When plugged in to a power source, the system is in standby mode, so the power is not entirely cut off.
21. Replacement parts – When replacement parts are required, ensure that the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
22. Mains fuses – For continued protection against fire hazard, use fuses only of the correct type and rating. The correct fuse specification for each voltage range is marked on the product.
23. Do not turn up the volume while listening to a section with very low level inputs or no audio signals. If you do, the speaker may be damaged when a peak level section is suddenly played.
24. The only means of completely disconnecting the product from the power supply is by removing the power cord from the wall outlet or the product. The wall outlet or the power cord entry to the product must remain freely accessible at all times while the product is in use.
25. Try to install the product near a wall socket or extension cord and shall be easily accessible.
26. The highest environmental temperature suitable for this product is 35°C.
27. ESD hints – If the product maybe reset or not reset to operation of control due to electrostatic discharge, just switch off and reconnect again, or move the product to another location.
28. Battery
 - a. The batteries must not be exposed to excessive heat such as sunshine, fire or the like.
 - b. The batteries should be drawn to the environmental aspects of battery disposal.
 - C. Battery usage CAUTION-to prevent battery leakage which may result in body injuries, property damage, or damage to the apparatus:
 - . Install all batteries correctly, + and – as marked on the apparatus.
 - . Do not mix batteries (old and new or carbon and alkaline, etc.)
 - . Remove batteries when the unit is not used for a long time.

ERP2 (Energy Related Products) note

This product with ecodesign complies with the stage 2 requirements of Commission Regulation (EC) NO. 1275/2008 implementing Directive 2009/125/EC regard to standby and off mode electric power consumption of electronic household and office equipment. After 30 minutes without any audio input, the device will automatically switch into standby mode. Follow up the instruction manual to resume the operation.

Important note:

This device is equipped with an energy saving mode: if no signal is given during 30 minutes the device will switch

automatically into standby mode in order to save energy (ERP 2 standard). Please note that low volume setting in the audio source may be recognized as “no audio signal”: this will affect the capability of signal detection from the device and can also originate an automatic switch into standby mode. If this happens please reactivate the audio signal transmission or increase the volume setting on the audio source player (MP3 player, etc.), in order to resume playback. Please contact the local service center if the problem remains.

WARNING

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

1. Never use the device unsupervised! Switch off the device whenever you are not using it, even if this only for a short while.
2. The appliance is not intended to be operated by means of an external timer or separate remote control system.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
5. The unit should not be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.
6. The apparatus must not be exposed to dripping or splashing and that objects filled with liquids, such as vases, must not be placed on the apparatus.
7. To prevent fire or shock hazard, do not expose this equipment to hot places, rain, moisture or dust.
8. Do not locate this unit near any water sources e.g. taps, bathtubs, washing machines or swimming pools. Ensure that you place the unit on a dry, stable surface.
9. Do not place this unit close to a strong magnetic field.
10. Do not place the unit on a amplifier or receiver.
11. Do not place this unit in a damp area as the moisture will affect the life of electric components.
12. If the system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens inside the player. If this occurs, the system will not operate properly. Please leave the system turned on for about an hour until the moisture evaporates.
13. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.
14. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.
15. Depending on the electromagnetic waves used by a television broadcast, if a TV is turned on near this unit while it is also on, lines might appear on the TV screen. Neither this unit nor the TV is malfunctioning. If you see such lines, keep this unit well away from the TV set.
16. The mains plug is used as the disconnect device, the disconnect device must remain readily operable.
17. To prevent possible hearing damage, do not listen at high volume levels for long periods.

NOTICE



Hereby, Blaupunkt Competence Center 2N-Everpol Sp. z o.o., declares that this equipment is in compliance with the essential requirement and other relevant provisions of Directive 2014/53/EU. Declaration of conformity can be obtained from the product page at www.blaupunkt.com.

Responsible party: 2N-Everpol Sp. z o.o, Puławska 403A, 02-801 Warsaw, Poland, Phone: +48 22 688 08 00, E-

mail: info@everpol.pl



Your products is designed a manufactured with high quality materials and components, which can be recycled and reused.



If there is a crossed-out bin symbol on your device, it means that the product is covered by the provisions of European Directive 2012/19/EU. Based on this, please follow local regulations and familiarize yourself with the requirements for your local electrical and electronic waste collection system and, in the case of this product, comply with them.

DO NOT DISPOSAL THIS PRODUCT WITH YOUR HOUSEHOLD WASTE!

THIS PRODUCT CONTAINS HAZARDOUS SUBSTANCES, MIXTURES AND COMPONENTS WHICH, IF UNAUTHORIZED, CAN BE A SOURCE OF POTENTIAL EFFECTS ON THE NATURAL ENVIRONMENT AND HUMAN HEALTH!

Correct disposal of the used product will prevent negative effects on the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be dispose with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and poly ethylene (bags, protective foam sheet). Your system consists of material which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

 
Recording and playback of material might require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.



The Bluetooth wordmark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by us is under license. Other trademarks and trade names are those of their respective owners.

Many thanks to buy our model, please read and reference this manual carefully before operate the unit. Please keep the manual for future operation reference.

Control panel

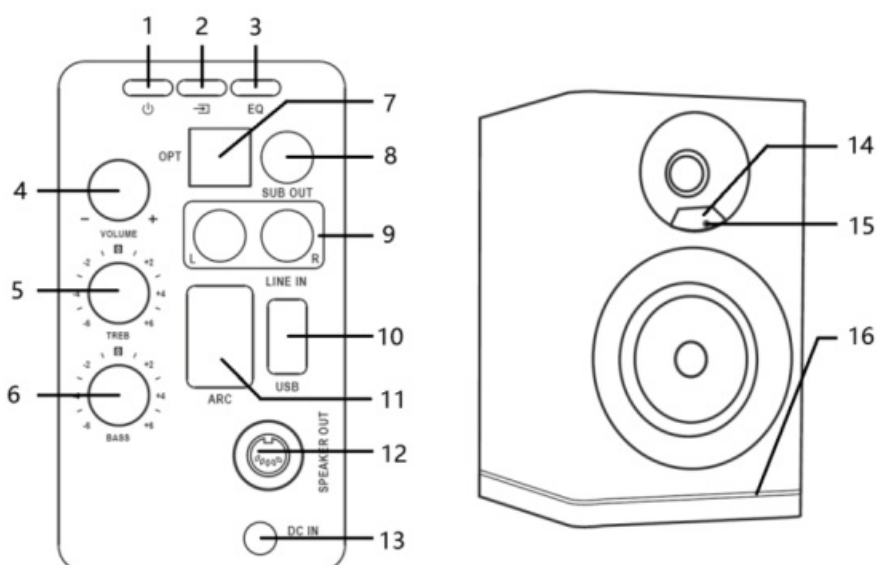

1. Power button: short press it to power on the unit after connect with power adaptor; long press 3 seconds to

standby off the unit; Short press it repeatedly to switch the LED light color.

2.Mode button: short press it repeatedly to switch the play mode between Bluetooth/Optical/HDMI ARC/USB/Line in.

3.EQ button: short press it repeatedly to switch preset equalizer in movie/music/dialog mode.

4. Main volume knob: rotate it to increase or decrease the volume level.

5-6. Treble/bass control knob: rotate it to adjust the treble/bass output.

7.Optical input jack.

8. Subwoofer out jack: connect with active subwoofer.

9. RCA line in jack.

10. USB port.

11. HDMI ARC input port.

12. Speaker out terminal: connect to satellite speaker as stereo.

13. DC input power jack.

14-15: IR sensor for remote controller and signal LED window.

RED color: in standby mode.

Blue color: In Bluetooth mode.

White color: in optical mode.

 
Pink color: in USB playback mode.

Yellow color: in line in mode.

Light blue: in HDMI ARC mode.

16. Colorful LED light bar.

Remote controller:

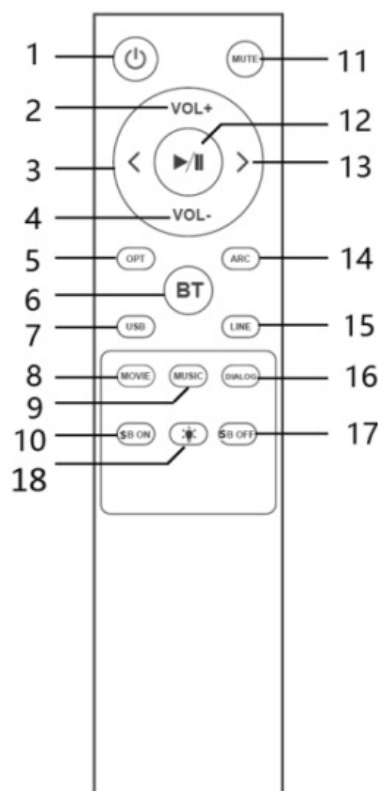

1-Power button: press it to standby on/off the unit.

2,4-Volume+/- button: press it to adjust the output volume.

3,13- Previous/next button: press it to switch previous/next track in Bluetooth or USB mode. Press and hold it to fast-forward or fast-rewind current track in USB mode.

5,6,7,14,15-Optical/Bluetooth/USB/HDMI ARC/LINE IN button: press it skip to relevant play mode directly.

8,9, 16-Movie/music/dialog button: press it skip to relevant preset equalizer.

10,17-Super bass on/off button: press it to turn on or off super bass function.

 
11-Mute button: press it to silence the speaker, press again to resume the output.

12-Play/pause: press it to play or pause the sound output in Bluetooth or USB mode.

18-LED light button: press it to switch LED light mode (total: 7 types and off).

Remote control battery installation

Open up the battery door and insert 2 x AAA dry battery (included) into the compartment; please make sure the polarity of battery will aim and correspond to the positive and negative silkscreen-printed symbol in the compartment. Then close the battery door.

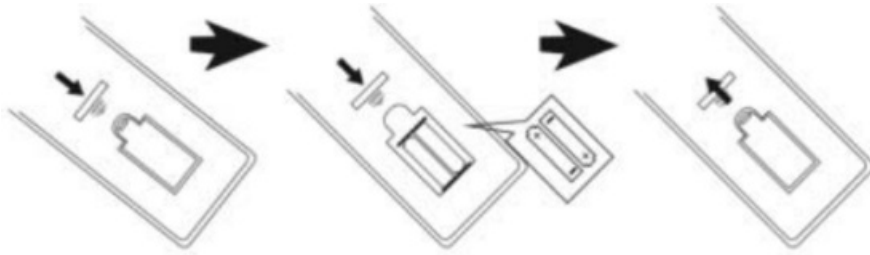


Notes:

- The best working distance of remote control is within 5 meters without any obstacle in between. Please aim to the remote control sensor located on the front of unit during operation.
- The sensitivity of remote control will become weak when the battery power is exhausted. Please replace it with a fresh one for operation.
- Please take out the battery in case of non-operation in a long time.
- Please dispose the battery in an environment friendly way. Please reference the local government requirement for the detail.

Speaker grill: there is a built-in magnetic button inside of the grill, just touch the speaker front panel by the grill can attach and mount on.

Main and satellite speaker connection: Before power on the unit, please kindly connect the unit first. Using the supplied 5pin audio cable connect the speaker out and speaker in terminal on rear panel between main and satellite speaker. Then the speaker will get stereo output.

 Power setting and power on/off: Plug in the supplied AC/DC power adaptor to an AC household outlet in order to get power source, and plug the DC connector of power adaptor to power jack on the rear panel of main unit. Then the unit will enter to standby mode, and ready work for you. Short press the power button from rear panel of main unit or remote controller can power on the speaker. Long press (3 seconds) the power button from rear panel, or short press power button from remote controller can standby off the unit.

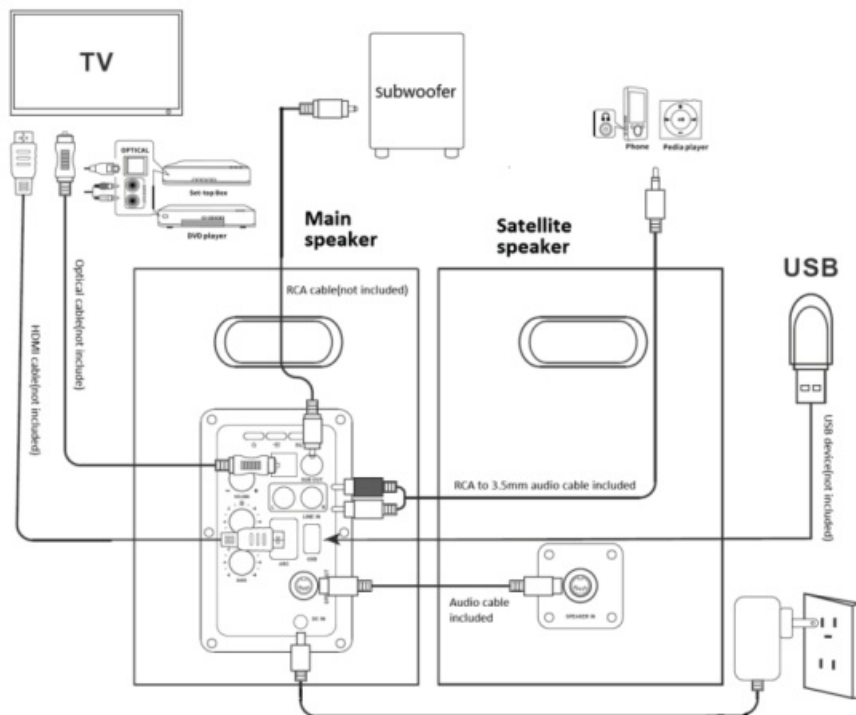

Speaker connect with outsourcing devices like TV, TV set-top, DVD, Blue-ray DVD player, MP3 player etc.

The speaker has included digital (optical & HDMI(ARC)) and analogue (Line in) inputs for different source. You can reference below instruction and above drawing for the connection depends on what input jack has on your

device.

Remove the protective cap of the OPTICAL socket, and then using an OPTICAL cable (not included) to connect between the TV's OPTICAL OUT jack and the OPTICAL input jack of speaker.

Using the same method and reference above drawing to connect other device like TV set-top box, DVD player, Blue-ray DVD player, MP3 player etc.

Important notes:

1. If there is no sound come out of the speaker in optical/ HDMI mode. Make sure the audio setting of your source player (e.g. DVD player, game player, TV) is set to "PCM stereo" or "stereo 2.0" with digital output. Please reference your TV or player manual for this operation.
2. HDMI(ARC): The speaker supports HDMI with Audio Return Channel (ARC). If your TV has HDMI ARC compliant (reference your TV user manual for details), you can hear the TV audio through your speaker by using a single HDMI cable (not included). The HDMI ARC connector on the TV may be labelled differently, please pay attention to check your TV's manual.
3. When you select and buy HDMI cable for connection, please make sure the HDMI cable can support HDMI V1.3 and above, and it is 19-cores matching cable.
4. In case of no sound or intermittent output, please double check above notes, and make sure there will have correct and proper connection between Bookshelf speaker and other device.
5. The output sound of optical and HDMI mode may louder than Line in etc. which is normal, because the digital audio signal input and output level is different on audio source player (like DVD player, TV etc).
6. In case finished above connection and setting, you can start to operate the Bookshelf speaker according to this manual, and entertainment.

Bluetooth operation

This product includes Bluetooth function which can wireless playback the music from other Bluetooth device (like smart phone, tablet, TV etc).

1. Power on the unit, press mode button repeatedly on rear panel or Bluetooth button from remote controller to enter Bluetooth mode. The blue color LED will flare on the signal LED window which means the unit is ready to pair.
2. Enable the Bluetooth function on your device, and search the available device (please reference your device manual for operation), then check the available Bluetooth device on the list. Select "BP BS60" for pairing, and the blue color signal LED will become stable after paired successful.
3. Select and play the music from your Bluetooth device, adjust the volume level properly, then the sound will come out from the speaker.
4. In Bluetooth mode, you can do operation like previous/next track selection, play/pause, mute etc. by pressing relevant button from remote controller.

Notices:

- a. All Bluetooth devices are not guaranteed for pairing successfully due to different design and brand.
 - b. The best working distance of Bluetooth is within 10 meters without any obstacle in between.
 - c. The unit only can pair and work with one Bluetooth device in one time.
 - d. In case of an incoming phone call during Bluetooth playback; the music will stop temporary, and resume to playback after end the phone call.
- Bluetooth connect with TV: In case of your TV device has Bluetooth function, the Bookshelf speaker can wireless playback with your TV as well. You have to turn on the Bluetooth function on your TV screen and searching "BP

BS60" for connection. Please reference your TV's manual for the details.

USB playback operation

The product includes USB playback function which can decode and playback the music from a USB storage device. Before start the operation, please copy the MP3 format music into the device; and insert the device into the unit first, Then the unit will detect and play the inside MP3 music automatically.

In USB playback mode, you can get track selection/play/pause/preset EQ adjustment function etc. by press relevant button from remote controller.

Notes:

- a. Connect the USB stick by a USB extension cable for playback is not recommended which may produce noise or intermittent sound due to audio data loss during transfer.
- b. Decode and playback all MP3/WAV/WMA format music is not guaranteed.
- c. The max supported storage device is up to 32GB.
- d. Some different device and brand may take a little long time to playback; please kindly note this is not malfunction.

Trouble shooting

1. The speaker cannot turn on.
 - a. Please check if the power connection is correct.
2. No sound output.
 - a. Please try to adjust the volume knob, mute button and check the play source.
 - b. please contact service center for support if the issue remained.
3. Sound distortion.
 - a. Please try to adjust and play the music at a lower volume level.
 - b. Check the status of treble/bass setting.
 - c. Please try to decrease the volume level on outsourcing player like TV etc.
4. The sound is sounding intermittently in Bluetooth mode.
 - a. Please try to move the Bluetooth device closer to speaker.
 - b. Please try to repair the speaker with Bluetooth device.
5. There is no sound output in optical or HDMI(ARC) mode.
 - a. Please check if there was connected properly between speaker and device.
 - b. Please make sure that your TV has HDMI (ARC) compliant, and appropriate port was connected. Please set up the TV to HDMI ARC(CEC).
 - c. Set up audio output mode of TV to PCM format.

Specifications

General

Power requirements: DC IN 24V/1.5A

Power consumption (on mode): xxx Watt working mode

Standby power consumption :< 0.5 Watt

Output power RMS: 2 x 30W

Total harmonic distortion: <1% (1 kHz, 1W)

Audio input sensitivity: 550 mV

Frequency response: 45 Hz – 20 KHz; S/R:>= 85dB

USB support music: MP3/WAV/WMA (not guarantee)

USB support device: up to 32GB max.

Unit dimensions: 170 x 251 x 153 mm (WxHxD)

Inputs: 1 x optical, 1 x RCA Line in, 1 x HDMI ARC (V1.4), 1 x USB

Speakers

Tweeter:1.25"/8Ω

Woofers impedance: 4"/4 Ω

Bluetooth

Bluetooth version: V5.3

Work range: approx. 10 meters

Transmission frequency: 2.402~2.480GHz

Protocols: 2DP/AVCTP/AVDTP/AVRCP/GAVDP/HFP/HID/OPP/RFCOMM/SPP A2DP/AVRCP

(Notes: the product spec may change without prior notice).

Accessories

Remote Controller x 1pcs

Remote control battery x 1 pair

Instruction Manual x 1pcs

Warranty card x 1 pcs

Audio cable (3.5mm stereo to RCA) x 1pcs

5 Pin audio cable x 1pcs

AC/DC Power adaptor x 1pcs

Power adaptor information		
Information published	Value and precision	Unit
Manufacturer's name or trade mark Commercial registration number Address	SHEN ZHEN FIT- POWER TECHNOLOGY CO.,LTD. 201, No. 7, Rifu Road, East District, baishixia Community, Fuyong Street, Bao'an District, SHEN ZHEN CITY Guangdong Province 518103	
Model identifier	TPO4-210150E	
Input voltage	100.240	V
Input AC frequency	50/60	Hz
Output voltage	DC21	V
Output current	1.5	A
Output power	31.5	W
Average active efficiency	≥ 89.23	%
Efficiency at low load (10 96)	82.6%	%
No-load power consumption	≤ 0.09	W



Competence Center
2N-Everpol Sp. z o.o.
ul. Puławska 403A 02-801 Warsaw, Poland
phone: +48 22 688 08 00
e-mail: info@everpol.pl
www.blaupunkt.com

In case of questions or problems please contact our service.

 
Tel. 00 48 22 688 08 33 E-mail: info@blaupunkt-audio.pl

All rights reserved. All brand names are registered trademarks of their respective owners. Specifications are subject to change without prior notice.

This product has been manufactured and sold under the responsibility of 2N-Everpol Sp. z o.o.. BLAUPUNKT,

BLAUPUNKT logo, and the 100 YEARS BLAUPUNKT logo are trademarks used under license by 2N-Everpol Sp. z o.o. – further information at brand.blaupunkt.com. All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.

Documents / Resources

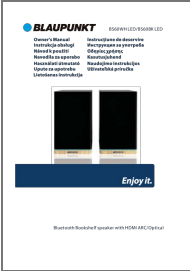

[BLAUPUNKT BS60BK LED Bluetooth Bookshelf Speaker](#) [pdf] Owner's Manual
BS60-IM.pdf, BS60BK LED_EN_IM.cdr, BS60BK LED Bluetooth Bookshelf Speaker, BS60BK L
ED, Bluetooth Bookshelf Speaker, Bookshelf Speaker, Speaker

References

- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.