



## BLAUPUNKT CMD201 Filter Coffee Maker Owner's Manual

[Home](#) » [Blaupunkt](#) » BLAUPUNKT CMD201 Filter Coffee Maker Owner's Manual 

BLAUPUNKT CMD201 Filter Coffee Maker Owner's Manual



## Contents

- [1 Safety Instructions](#)
- [2 Product Overview](#)
- [3 BEFORE THE FIRST USE](#)
- [4 COFFEE AND TEA MAKER OPERATION](#)
- [5 CLEANING AND MAINTENANCE](#)
- [6 Technical data](#)
- [7 CE Device is compliant with EU directives](#)
- [8 Competence Center](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

## Safety Instructions


### Important notes

- To achieve the utmost in enjoyment and performance, and in order to become familiar with its features, please read this manual carefully before attempting to operate this product.
- Before using this device read the instruction manual and follow the instructions inside. The manufacturer is not liable for any damages caused by the misuse of this device due to inappropriate handling. Please keep this manual for future reference.
- This device is for domestic use only. Do not use for any other purposes.
- The device should only be connected to an earthed socket with values corresponding to the values on the rating label.
- It is necessary to check, if total current consumption of all devices plugged into the wall outlet does not exceed the fuse in the circuit.
- If you are using an extension cord, make sure that the total power consumption of the equipment plugged into the extension cord does not exceed the extension cord power rating. Extension cords should be arranged in such a way as to avoid tripping hazards.
- Make sure the cable is grounded, 3-cores with a socket and an earth cable.
- Do not let cord hang over edge of counter, or touch any hot surface.
- The device is not designed to be controlled via an external timer, separate remote control, or other equipment that can turn the device on automatically.
- Before maintenance work always disconnect the unit from the power supply.
- When unplugging the power cord from electrical outlet, hold it by the plug only and remove the plug carefully. Never pull the cable as it may cause damage to the plug or power cord.
- Damage to the power cord or plug can lead to an electrocution hazard.
- Never leave the product connected to the power source without supervision.
- Never put the power cable, the plug or the whole device into the water or any other liquids.
- The device should be cleaned regularly complying with the recommendations described in the section on cleaning and maintenance.
- Do not place the device near sources of heat, flame, an electric heating element or a hot oven. Do not place on any other device.
- This equipment can be used by children aged 8 years and over as long as supervision is provided. People with reduced physical or mental capabilities, as well as people with no previous experience of using this equipment

must be supervised and made aware of the risks. The instruction manual should be used as a reference for the safe use of this equipment. Children should not play with the equipment.

- Children without ensured supervision should not be allowed to perform the cleaning and maintenance of equipment.
- Additional precautions should be taken when using this device in the presence of children or pets. Do not allow children to play with the device.
- Never use the product close to combustibles.
- Never expose the product to atmospheric conditions such as direct sun light or rain, etc... Never use the product in humid conditions (like bathroom or camping house).
- The power cable should be periodically checked for damage.
- If the power cable is damaged the product should be taken to a professional service location to be fixed or replaced to prevent any hazards from arising.
- Never use the product with a damaged power cable or if it was dropped or damaged in any other way or if it does not work properly. Do not try to repair the defected product by yourself as it can lead to electric shock. Always return the damaged device to a professional service in order to repair it.
- All the repairs should only be performed by authorized service professionals. Any attempted unauthorized repairs performed can be a hazard to the user.
- Only Original accessories should be used, as well as accessories recommended by the manufacturer. Using accessories which are not recommended by the manufacturer may result in damage of the device and may render the device unsafe for use.
- Always disconnect the appliance from the power supply before filling the tank with water.
- Never use the appliance when the water tank is not filled up.
- Fill the tank only with clean and cold water. Do not exceed the maximum tank capacity.
- Do not use the flavored or sweetened coffee powder in the coffee maker.
- The water tank should not be opened during use.
- Keep your hands away from steam, hot water or coffee stream, as this can cause burns or other injuries.
- Before cleaning the appliance, disconnect it from the power supply and allow it to cool down.

## **Product Overview**

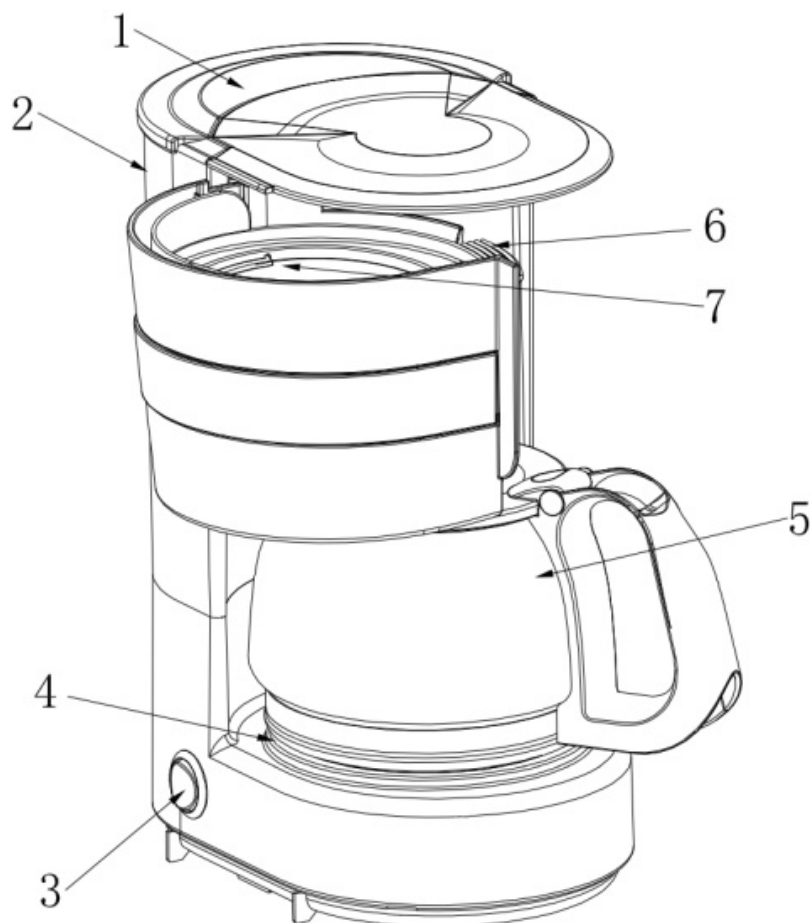

1. Water tank lid
2. Water tank
3. Switch
4. Hotplate
5. Jug
6. Pull-out coffee-/tea-filter trolley
7. Reusable coffee/tea filter

## **BEFORE THE FIRST USE**

1. Remove all papers, cartons, and foils protecting the appliance and its parts.
2. Fill the water tank to the max. level, run the coffee and tea maker without adding coffee or tea to the filter, then empty. Once more water has been poured in, the coffee and tea maker will be ready for use.

## **COFFEE AND TEA MAKER OPERATION**

1. Slide the trolley onto the filter. Pour the coffee or tea into a paper filter or a reusable filter. It is recommended to use 7g of coffee/tea per cup.
2. Slide the filter trolley into the appliance body. Make sure it is firmly fitted in. Place the jug on the hob.
3. Refill the water tank. All the water will be used for coffee preparation unless the coffee and tea maker is switched off during operation.
4. Start the coffee brewing process with the switch.
5. When brewing coffee, you can remove the jug, and the valve will close the brew outlet from the filter. Do not

remove the jug for more than 20 seconds, as this can make the brew overflow from the filter tank.

6. After the coffee is brewed, the hob will remain active for 40 minutes to maintain the temperature of the prepared brew. To turn off the coffee and tea maker, press the power switch to position 0.

## CLEANING AND MAINTENANCE

Disconnect the coffee and tea maker from the power supply before cleaning. Never immerse the coffee and tea maker in water or wash it under running water. Wipe the body with a slightly dampened cloth.

The jug can be washed under running water with a soft brush and washing-up liquid. It is not recommended to clean the jug in a dishwasher- glass can be matted by strong detergents. The coffee and tea maker should be descaled on a regular basis. Depending on the hardness of the water, descaling should be carried out once every 4-8 weeks. To descale the appliance, pour the descaler solution into the water tank. Start the coffee and tea maker. After pouring out the solution, rinse the coffee and tea maker with water in three brewing cycles.

## Technical data

- **Power Supply:** 230V-50/60Hz
- **Power:** 600W
- **Filters:** standard paper filters 1 x 2

## CE Device is compliant with EU directives



- Low voltage directive (LVD)
- Electromagnetic compatibility (EMC)

## Device marked CE mark on rating label



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2012/19/EU. Please inform yourself about the local separate collection system for electrical and electronic products. Used appliance should be delivered to the dedicated collecting points due to hazardous components, which may affect the environment. Do not dispose this appliance in the common waste bin.

## Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and poly ethylene (bags, protective foam sheet). Your system consists of material which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



Your products is designed a manufactured with high quality materials and components, which can be recycled and reused.

## Competence Center

2N-Everpol Sp. z o.o. ul. Pulawska 403A 02-801 Warsaw, Poland

**phone:** +48 22 331 99 59

**e-mail:** [info@everpol.pl](mailto:info@everpol.pl)

[www.blaupunkt.com](http://www.blaupunkt.com)


In case of questions or problems please contact our service. **Tel. 0048223319954**

**E-mail:** [sda@blaupunkt.pl](mailto:sda@blaupunkt.pl)

All rights reserved. All brand names are registered trademarks of their respective owners. Specifications are subject to change without prior notice.



## Documents / Resources

	<p><a href="#">BLAUPUNKT CMD201 Filter Coffee Maker</a> [pdf] Owner's Manual CMD201, Filter Coffee Maker</p>
--	--