

[Skip to content](#)

## **Manuals+**

User Manuals Simplified.



# **BLAUPUNKT CR65BT Clock Radio with Bluetooth Owner's Manual**

[Home](#) » [Blaupunkt](#) » BLAUPUNKT CR65BT Clock Radio with Bluetooth Owner's Manual



CR65BT

Owner's Manual



**Enjoy it.**  
**Clock radio with Bluetooth**

## **Important Notes**

- safety and operating instruction should be retained for future reference.
- The apparatus should not be exposed to dripping or splashing or placed in a humid atmosphere such as a bathroom.
- Do not install the product in the following areas:
  - Places exposed to direct sunlight or close to radiators.
  - On top of other stereo equipment that radiates too much heat.
  - Blocking ventilation or in a dusty area.
  - Areas where there is constant vibration.
  - Humid or moist places.
- Do not place near candles or other naked flames.
- Operate the product only as instructed in this manual.
- Before turning on the power for the first time, make sure the power adaptor is properly connected.

For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. Refer any servicing to qualified personnel.

Do not attempt to remove any screws, or open the casing of the unit; there are no user-serviceable parts inside. Refer all servicing to qualified service personnel.

**Contents** [hide](#)

[1 SAFETY INSTRUCTIONS](#)

[2 Control locations](#)

[3 Power on a clock radio](#)

[4 Backup battery installation](#)

[5 Radio operation](#)

## SAFETY INSTRUCTIONS

1. Read Instructions – All the safety and operating instructions must be read before the product is operated.
2. Retain Instructions – The safety and operating instructions should be kept with the product for future reference.
3. Heed warnings – All warnings on the product and in the operating instructions should be adhered to.
4. Follow instructions – All operating and users' instructions should be followed.
5. Installation – Install in accordance with the manufacturer's instructions.
6. Power sources – This product should be operated only from the type of power source indicated by the marking adjacent to the power cord entry. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.
7. Water and moisture – To reduce the risk of fire or electric shock, do not expose the product to rain, dripping, splashing, or excessive moisture such as in a sauna or bathroom. Do not use this product near water, for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement or near a swimming pool (or similar).
8. Object and Liquid Entry – Never push objects of any kind into this product through openings, as they may touch dangerous voltage points or short-circuit parts that could result in a fire or electric shock. Never spill liquid of any kind on the product. Do not place any object containing liquid on top of the product.
9. Servicing – Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
10. Replacement parts – When replacement parts are required, ensure that the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
11. The highest environmental temperature suitable for this product is 35°C.
12. ESD hints – If the product may be reset or not reset to the operation of control due to electrostatic discharge, just switch off and reconnect again, or move the product to another location.
13. Battery
  - a. The batteries must not be exposed to excessive heat such as sunshine, fire or the like.
  - b. The batteries should be drawn to the environmental aspects of battery disposal.
  - c. Battery usage CAUTION-to prevents battery leakage which may result in bodily injuries, property damage, or damage to the apparatus:
  - Install all batteries correctly, + and – as marked on the apparatus.
  - Do not mix batteries (old and new or carbon and alkaline, etc.)
  - Remove batteries when the unit is not used for a long time.

### ERP2 (Energy Related Products) note

This product with ecodesign complies with the Stage 2 requirements of Commission Regulation (EC) NO. 1275/2008 implementing Directive 2009/125/EC regard to standby and off mode electric power consumption of electronic household and office equipment.

### WARNING

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

1. Never use the device unsupervised! Switch off the device whenever you are not using it, even if this is only for a short while.
2. The appliance is not intended to be operated by means of an external timer or separate remote control system.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
4. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
5. To prevent fire or shock hazards, do not expose this equipment to hot places, rain, moisture, or dust.
6. Do not place this unit close to a strong magnetic field.
7. Do not place the unit on an amplifier or receiver.
8. Do not place this unit in a damp area as the moisture will affect the life of electric components.
9. If the system is brought directly from a cold to a warm location or is placed in a very damp room, moisture may

condense on the lens inside the player. If this occurs, the system will not operate properly. Please leave the system turned on for about an hour until the moisture evaporates.

10. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry, or slightly damp cloth.

## NOTICE



### Conformity

Hereby, Blaupunkt Competence Center 2N-Everpol Sp. z o.o., declares that this equipment is in compliance with the essential requirement and other relevant provisions of Directive 2014/53/EU. Declaration of conformity can be obtained from the product page at [www.blaupunkt.com](http://www.blaupunkt.com).

Responsible party: 2N-Everpol Sp. z o.o, Puławska 403A, 02-801 Warsaw, Poland, Phone: +48 22 331 99 59, E-mail: [info@everpol.pl](mailto:info@everpol.pl)



Your products is designed a manufactured with high-quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2012/19/EU. Please inform yourself about the local separate collection system for electrical and electronic products. Please cat according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

## Environmental information


All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam(buffer), and polyethylene (bags, protective foam sheet). Your system consists of material that can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries, and old equipment. Recording and playback of material might require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.



The Bluetooth® wordmark and logos are registered trademarks owned by Bluetooth SIG, and. and any use of such marks by us is under license. Other trademarks and trade names are those of their respective owners.

Many thanks to select our model, please read and reference this manual carefully before operation. Please keep the manual for future operation reference.

## Control locations

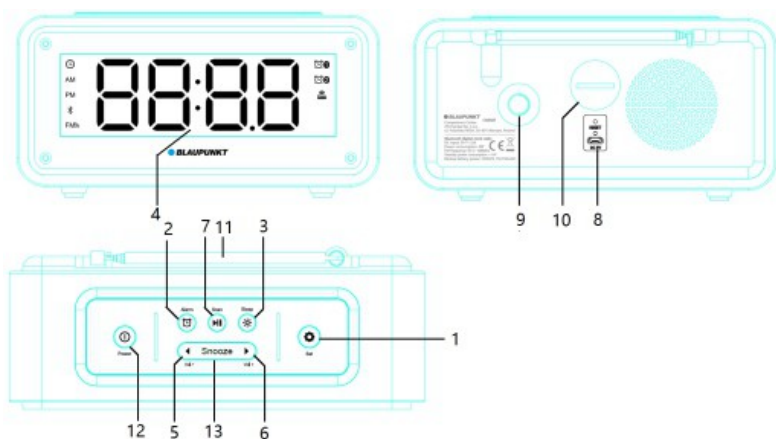

- 1- Set button;
- 2- Alarm button;
- 2- Dimmer/sleep button;
- 4- Display;
- 5- Volume – /Previous button;
- 6- Volume + /Next button;

- 7- Play/pause button;
- 8- DC IN jack;
- 9- Bass reflex;
- 10- Backup battery compartment;
- 11- Antenna;
- 12- Power/mode button;
- 13- Snooze button;

## Power on a clock radio

Insert the AC/DC adaptor to any 230V AC household outlet. Then insert the DC jack to the backside of the unit. The display will light up and be ready to work. Long press(2seconds) power button to power off(display off )/on the radio, short press it to switch play mode between FM/Bluetooth/clock.

## Backup battery installation

The radio requires a 1 x CR2025 type battery(not included) to provide backup power for setting memory in the event of a temporary power interruption. Place the unit face down on a flat and soft surface; use a coin to turn the battery cover under anticlockwise direction at the back of the unit; insert one new cell CR2025 battery into the battery compartment by observing the “ +” polarity facing upward; Replace the battery cover and turn to the clockwise direction to lock it. The time and all settings will be kept in case of AC power is interrupted, but the backup battery is available.

Please kindly disposal the power-exhausted battery in environmental friendly way accord to your local government requirements. Make sure a fresh CR2025 battery is used, and a fresh battery could backup the clock continuously for around 3weeks.

**Display brightness adjustment/Dimmer:** short press the dimmer button repeatedly to switch and select the display brightness between high/low/off levels.

**Clock time setting:** short press power button repeatedly to enter clock time interface, short press the set button to select 12/24 hours format. Long press(2 seconds) the set button to start the time setting procedure, and the hour digits will flare on display. Press the Previous/next button to adjust the desired hour, press and hold it to accelerate the adjustment in high speed. Short press play/pause button to confirm and skip to the minute setting. Press the Previous/next button to adjust it, then press the play/pause button to finish it.

**Alarm setting:** short press power button repeatedly to enter clock time interface, long press (2 seconds) alarm1 button to start alarm setting procedure, and the hour digits will flare on display, Press previous/next button to adjust the desired hour, press and hold it to accelerate the adjustment in high speed. Short press play/pause button to confirm and skip to the minute setting. By using the same method to finish the rest setting for alarm1's minute/alarm source/alarm volume(between 15~30 level) selection and press play/pause button to finish it. Then the unit skip to the alarm2 setting directly, which is same operation as alarm1. Short press the alarm button repeatedly to turn on the alarm1, alarm2 or both on display. A relevant alarm icon will show on the right top corner of display, which means the alarm is working now.

**The alarm on/off:** you need turn on the alarm after finishing the alarm setting. Press the alarm button repeatedly can turn on or off alarm1 and alarm2. Please make sure the relevant alarm icon LED will light on display after your selection.

**Alarming and snooze:** when unit is sounding due to the alarm time is being, press the power button to cancel the voice, and will wake up again at the same time of next day; if you short press the snooze button, there will activate the snooze function. The alarm will silence temporarily and wake up again after 9 minutes. Long press(2seconds) snooze button can check the remained snooze time on display; Short press the power button can cancel the snooze function. Note:

1. The unit will exist the clock or alarm setting mode when no key is pressed in approximately 5 seconds.
2. If your second alarm activates while the first alarm is sounding or it is in snooze mode, the second alarm overrides the

- first alarm (the first alarm will reset to come on the next day).
3. The alarm only works when the DC/AC power adaptor is connected. Please double-check the alarm setting in case of the power is interrupted.
  4. The alarm voice duration time is 1 hour. FM radio and buzz is available to select as an alarm source.

## Radio operation

Before listening to the radio, please fully extend the antenna and move the unit next to the window in order to get better FM reception. Short press power button repeatedly enter to radio mode; press and hold volume +/ volume – to adjust the output volume level.

**All-in-one scan(auto scan and save as preset station):** long press(2 seconds) the play/pause button to scan and save the available station automatically, max supported up to 60 preset stations. Short press the previous/next button to select and switch the preset station. The short press play/pause button can mute the sound, press it again to resume the output.

**Manual memory station:** Short press the set button first, press the previous or next button repeatedly and immediately to tune the available station by step and step under 0.1MHz. In case you tuned the favorite station, short press the set button immediately again, then the current station will be saved automatically. The preset station number will be sequenced accord low to high radio frequency automatically.

Repeat the above operation to manually save other stations.

**Remove noise or weak preset station:** long-press the set button(2 seconds) can remove the current playing preset station, and the next preset will forward and replace it.

## Bluetooth operation

This product includes a Bluetooth function that can wireless playback the music from another Bluetooth device (like a smartphone, tablet,s etc).

1. Short press the power button repeatedly enters to Bluetooth mode. The Bluetooth symbol will flare on display which means the unit is ready to pair.
2. Enable the Bluetooth function on your device, and search the available device (please reference your device manual for operation), then check the available Bluetooth device on the list. Select “ BP CR65” for pairing, and the Bluetooth symbol will be stable on display after being paired successfully.
3. Select and play the music from your Bluetooth device, press and hold the volume +/- button to adjust the volume level on the radio side, and adjust the volume level on your Bluetooth device; then the sound will wireless play and come out from the speaker.
4. Press the previous/next button can select last and next track; press the play/pause button can play or pause the playback; Long press (2seconds) the play/pause button can quit the current Bluetooth device connection, but ready to pair the device.

## Notices:

1. All Bluetooth devices are not guaranteed for pairing successfully due to different designs and brands.
2. The best working distance of Bluetooth is within 10 meters without any obstacle in between.
3. The unit only can pair and work with one Bluetooth device in one time.
4. In case of an incoming phone call during Bluetooth playback; the music will stop temporarily, and resume to playback after the ending of the phone call.

**Sleep:** in audio mode(FM radio or Bluetooth), long press (2seconds) the sleep button repeatedly to switch the sleep time between 5/10/15/30/60/off. Select your desired sleep time and keep it for a while to activate the sleep function. The unit will off and switch to standby mode automatically in case of the sleep time is being. Press and hold the sleep button can check the remained sleep time on display.

## Troubleshooting

1. The speaker cannot turn on.
  - a. Please check if the power connection is correct.
2. No sound output.
  - a. Please try to adjust the volume knob, and check the play source.
  - b. please contact the service center for support if the issue remained.
3. Background noise on FM station.
  - a.try to move the unit in another place for better reception.
  - b. scan and switch to other stations for listening.
4. Intermittent sound output in Bluetooth mode

- a. Please try to move your Bluetooth device more close to the radio.
  - b. Please reference the manual for re-pairing.
5. The sound output is too small in Bluetooth mode.
  - a. Please check the volume level your Bluetooth device and radio both.

## Specification

Power source: DC IN 5V/1.2A  
 FM frequency: 87.5~108.0MHz  
 Bluetooth version: V5.0  
 Backup battery power: CR2025, 3V/150mAH(not included)  
 Power consumption: 5W  
 Standby power consumption: <1W  
 Alarm duration:  
 1 hour  
 Snooze duration: 9minutes  
 Default settings:-  
 Time: 24HR format  
 Alarm 1 and 2 7:00 am (OFF)  
 (The above spec may update without priority notice.)

## Power adaptor information

Information published	Value and precision	Unit
Manufacturer's name or trademark	Shenzhen Fushigang Technology Co., Ltd Building 8,	
Commercial registration number	Shiguan Industrial Park, Shangcun Community,	
Address	Gongming Street, Guangming District, Shenzhen, Guangdong, China, Guangdong, China	
Model identifier	AS0601A-0501200EUL	
Input voltage	100-240	V
Input AC frequency	50/60	Hz
Output voltage	DC 5	V
Output current	1 )	A
Output power	6.0	W
Average active efficiency	≥75	
Efficiency at low load (10%)	68%	%
No-load power consumption	50.	W



## Competence Center

2N-Everpol Sp. z o.o.  
 ul. Pulawska 403A 02-801  
 Warsaw, Poland  
 phone: +48 22 331 99 59  
 e-mail: [info@everpol.pl](mailto:info@everpol.pl)  
[www.blaupunkt.com](http://www.blaupunkt.com)

All rights reserved.

All brand names are registered trademarks of their respective owners.

Specifications are subject to change without prior notice.

## Documents / Resources



[BLAUPUNKT CR65BT Clock Radio with Bluetooth](#) [pdf] Owner's Manual  
CR65BT, Clock Radio with Bluetooth, CR65BT Clock Radio with Bluetooth, Radio with Bluetooth

**[Manuals+](#)**,

- [home](#)
- [privacy](#)