



BLAUPUNKT ECLIPSE Wireless Powered Speaker User Guide

[Home](#) » [Blaupunkt](#) » BLAUPUNKT ECLIPSE Wireless Powered Speaker User Guide 

BLAUPUNKT ECLIPSE WIRELESS POWERED SPEAKER



PLEASE KEEP THIS INSTRUCTION GUIDE FOR
FUTURE REFERENCE!

Enjoy it.

Thank you for your purchase of our new Blaupunkt Powered Speaker. We hope you are satisfied with your product. Please make sure to read this instruction manual carefully before using your speaker.

Understanding Your Speaker


Please look at the chart below to familiarize yourself with the control of your new speaker.

Contents

- [1 Appearance & Functions](#)
- [2 Specifications](#)
- [3 Precautions](#)
- [4 Battery information](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Appearance & Functions

1. Mode
2. Volume Down/Previous Song
3. Power On/Off
4. TWS Pairing
5. Volume Up/Next Song
6. Play/Pause/Answer Phone Call/Reject Phone Call/Make Phone Call
7. Mic
8. DC 5V Input
9. TF Card Input
10. USB/DC 5V 300 mA Output
11. External Audio Input

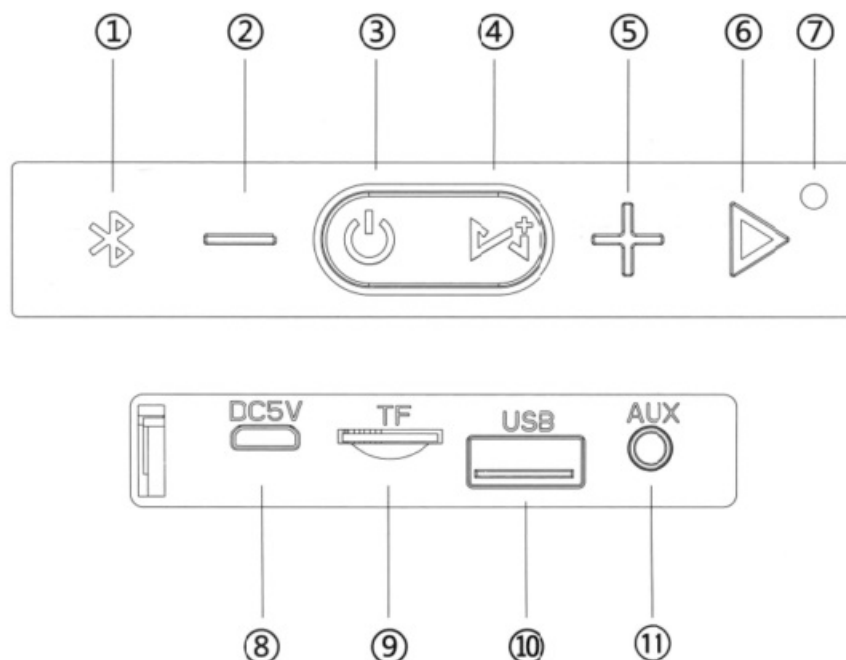

Bluetooth Connection

Press the Mode button until you enter the Bluetooth Mode. The blue LED will flash quickly. On your device search for the device name "BLAUPUNKT" When your device is paired, the Blue LED will flash slowly, and you will hear a connection prompt

Playing Bluetooth Audio

Once your device is connected properly, using your device or using the speaker press the PLAY button to activate and pause your music. Press the Previous Song and Next Song buttons to move from song to song.

Volume Up/Down

When playing music press and HOLD the Volume Up button to increase the volume or press and HOLD the Volume Down button to decrease the volume.

Mute/Pause

When playing music, quickly press the Play/Pause button to pause and mute your speaker

Power On/Off

Press and HOLD the Power On/Off button in order to power the speaker off and on.

Hands Free Calling

Once the Bluetooth is connected to your mobile phone, your speaker can act as a speaker to your mobile phone. If you receive a call press the "Answer Phone Call Button" to answer the call, and press it again to disconnect the call. Pressing the Make phone call button quickly twice will dial the last dialed number on your mobile phone.

OC/SV Charging

When charging your speaker, the white LED flashes. Once your speaker is fully charged, the light will stay solid.

AUX Input

After inserting a 3.5mm stereo connector into the External Audio input connection, your speaker will automatically enter the AUX mode. Press and Hold the Volume Up/ Down buttons to adjust the volume, Press the Play/Pause button to mute the sound on your speaker.

TF/USB

After inserting a USB or TF card into the inputs your speaker will automatically enter the TF USB Mode. Press and Hold the Volume Up/Down buttons to adjust the volume, Press the Play/Pause button to mute the sound on your speaker.

Mode

Press the Mode button to switch between, Bluetooth, USB, TF and Aux modes.

TWS Pairing

Switch on two Blaupunkt Eclipse speakers simultaneously. Press the TWS Pairing button on both speakers to enter the Pairing mode and link them together. Once the units are paired, connect a Bluetooth device, AUX, USB or TF card on one speaker and the other speaker will also play the same music.

Specifications

Bluetooth Technology: 4.2 Low Power Consumption

Bluetooth Distance: 33 Feet

RMS Power: 15W * 1, 5W * 2(25W RMS)

Impedance: 4ohms

Frequency Response: 20-20kHz

Noise Signal Ratio 70Db

Battery: 7.4V 4000mAh

DC/5V: Input DC 5V/2000mA

Playing Time 6-8 Hours (2-3 Hours at Max Volume)

Charging Time 6-7 Hours

Precautions

1. Avoid Placing the device in wet areas
2. Regularly charge your speakers at normal intervals
3. Do not touch your speaker using hard objects
4. Do not use a damp cloth to wipe the device
5. Your speaker can only be charged when it is powered on.

Battery information

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two to three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times, but it will eventually wear out.

Do not leave a fully charged battery connected to a charger, overcharging may shorten its lifetime. If left unused, a

fully charged battery will lose its charge over time. Never use any charger that is damaged.

Leaving the device in hot or cold places will reduce the capacity and lifetime of the battery. Optimal temperature for the battery is between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Always dispose of batteries according to local regulations. Please recycle. Do not dispose as household waste.

RBRC Recycle Icon

Battery Caution: Do not disassemble, short circuit, or expose to fire or high temperature. Properly connect specified devices. Recycle battery according to local, state and national regulations.

** Bluetooth range varies based on environment and surroundings



■ This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment by ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

FCC Information

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation.

Federal Communications Commission (FCC) Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Warning: Changes or modification to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

Tested to comply with FCC standard. For Home or Office Use.

Warning: This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or in conjunction with any other antenna or transmitter.

Worldwide Accessories Inc. Limited Warranty and Service

Thank you for purchasing a Blaupunkt Powered Speaker! Your speaker comes with a one-year limited warranty on the speaker, and a 90-day limited warranty on the battery.

Worldwide Accessories Inc. will repair or replace this product if, due to defective parts or workmanship, it does not perform as specified. This warranty covers only repair or replacement of the product itself. This warranty is extended to the original consumer only. In no event does this warranty extend to instances where the product is damaged through uses for which it was not intended, misuse, mishandling, removal and/or reinstallation, neglect, accident or tampering. In no event shall Worldwide Accessories Inc.

be liable for any indirect, incidental or consequential damages, or lost of profits arising out of or related to this

product, or the performance or breach thereof, even if Worldwide Accessories Inc. has been advised of the possibility thereof. Worldwide Accessories Inc. liability to customer, if any, shall in no event exceed the total of the purchase price of the item. Some states do not permit the exclusion or limitation of incidental or consequential damages; therefore, sections of the above limitations or exclusions may not apply to you. If it is determined that your speaker is not covered by this warranty for any reason, then the purchaser will be responsible for any parts, labor, and shipping charges. Worldwide Accessories Inc. reserves the right to change the design or update our products without notice. This warranty is in lieu of any other warranty, expressed or implied, including, but not limited to, any warranty of merchantability or fitness for any particular purpose. Any representations or promises inconsistent, or in addition to this warranty are unauthorized and shall not be binding on Worldwide Accessories Inc.

Return Instructions


If your speaker malfunctions during the warranty period of one calendar year (90 days for battery), contact our customer service department at [800-438-1136](tel:800-438-1136) to obtain troubleshooting information. If troubleshooting assistance fails to remedy the problem, you will receive a return authorization # and instructions for sending your unit to our Service Center. Your return authorization number must be clearly visible and placed on the outside of box when the unit is returned. Enclose a copy of your original proof of purchase showing the original purchase date, along with detailed information describing the exact nature of your problem. Be sure to include your complete name, address, email address, daytime and evening contact numbers. In addition, please send a check or money order made payable to "Worldwide Accessories Inc." for return freight amount (given to you by our service agents). All of the above must be included with your return, or your package will not be eligible for service under our warranty.

The customer is responsible for packing the speaker in its original carton or equivalent, and for insuring, and shipping the unit to our service center. Please make sure to pack all accessories included with your speaker so that we can properly identify any issues. All freight cost to return the unit to Worldwide Accessories Inc., are the responsibility of the customer. If your speaker is under warranty, then Worldwide Accessories Inc. will at its sole discretion, exchange or repair the speaker without charge for parts and labor. The customer is responsible for return freight and should include a check or money order payable to "Worldwide Accessories Inc." with your return for the return freight amount. Any shipments received without a Return Authorization number will be refused. For more details please contact our customer service department.

Manufactured By: Worldwide Accessories Inc.

New York, NY USA – (800) 438 – 1136 support@innovtrends.com

Documents / Resources

| | |
|---|--|
|  | <p>BLAUPUNKT ECLIPSE Wireless Powered Speaker [pdf] User Guide ECLIPSE Wireless Powered Speaker, ECLIPSE, Wireless Powered Speaker, Powered Speaker, Speaker</p> |
|---|--|

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.