



# BLAUPUNKT MOKSHA BTW TWS Active Noise Cancellation Instruction Manual

[Home](#) » [Blaupunkt](#) » **BLAUPUNKT MOKSHA BTW TWS Active Noise Cancellation Instruction Manual** 

## Contents

- [1 BLAUPUNKT MOKSHA BTW TWS Active Noise Cancellation](#)
- [2 Safety Rules](#)
- [3 In the Box](#)
- [4 Product Overview](#)
- [5 Find Your Fit](#)
- [6 Specification](#)
- [7 Power ON/OFF](#)
- [8 Pairing](#)
- [9 Multi Functions](#)
- [10 Factory reset](#)
- [11 WARNING](#)
- [12 Warranty Information 1 Year](#)
- [13 Documents / Resources](#)
- [14 Related Posts](#)



**BLAUPUNKT MOKSHA BTW TWS Active Noise Cancellation**



Thank you for purchasing your new MOKSHA ANC true wireless earbuds.

We recommend that you spend some time reading this instruction manual in order to fully understand all the operational features it offers.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.

## **Safety Rules**

1. Charge the earbuds and the charging case at least once every 6 months.
2. Do not store the product in extreme temperature (below 0°C or above 45°C)
3. Do not use chemicals or detergents to clean the product.
4. Do not drop or knock the product on hard surfaces.
5. Do not scrape the surface of product with sharp objects.
6. Do not try to take the product apart.

## **In the Box**

 
Wireless Earbuds

Portable Charging Case

Type-C Charging Cable User manual

Ear-Tips (S/M/L)

## Product Overview

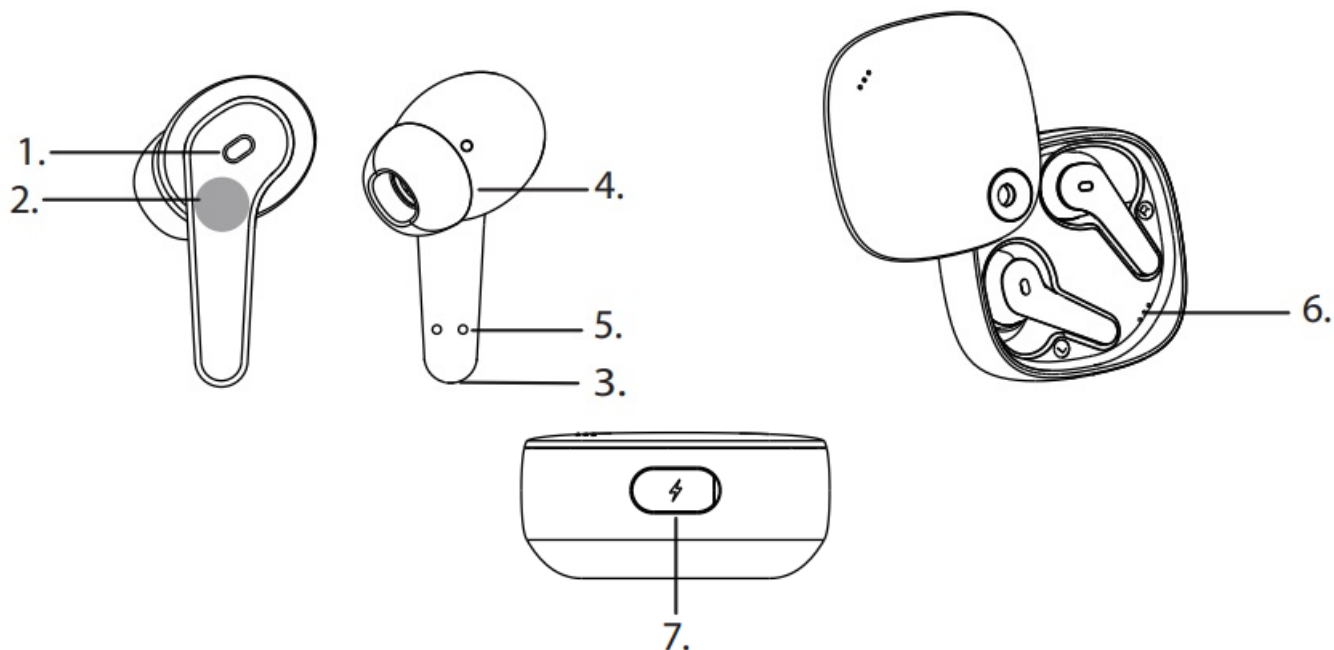

1. LED indicator/Microphone
2. Touch Area
3. Microphone
4. Silicone Ear-tips
5. Earphones Charging Contacts
6. Charging case LED
7. USB-C Charging Port

## Find Your Fit

1. Choose the size of silicone ear-tips that you feel the most comfortable with.
2. Gently insert the earbuds into ears and adjust to an appropriate angle for comfortable fit.

**Tips:** Choosing the right ear-Tips will give you a better sound quality and noise reduction experience.



## Specification

Speaker Driver	φ10mm
ANC level	27± 3dB
IPX Ra ng	IPX5
BT Version	5.2
BT profile support	HSP/HFP/A2DP/AVCTP
Bluetooth range	10 m / 33
Frequency response	20 Hz – 20 kHz
Charging me	Approx 1.5 Hours
Earbuds weight	5g each
Case weight	40g

## Power ON/OFF

### Power ON

1. Open the charging case, take out the earbuds, they will power on automatically.
2. Long press left and right earbuds for 3 seconds, the earbuds will power on.

### Power OFF

 
1. Put the earbuds into the charging case, the earbuds will power off automatically.
2. Long press left and right earbuds for 6 seconds, the earbuds will power off.

**Remark:** Earbuds power off when they stay out of range for over 2 minutes.

## Charging

1. Fully charge both the earbuds and the charging case before the first use.
2. To prevent damage, use the provided USB-C cable.
3. Fully dry off the earbuds and the USB port before charging.
4. Charging takes around 1.5 hours.
5. When fully charged, 3 white LED lights will stay on.

## EARBUDS

Blue LED on  Charging

Blue LED off  Fully Charged


## CHARGING CASE

 White LED flashing  Charging

Three White LED on Fully  Charged

## Pairing

1. When using Blaupunkt Moksha True Wireless Earbuds the first time. Take the earbuds out the charging case one earbuds indicator light flash white and blue another indicator off the “pairing mode” is on.
2. Turn on Bluetooth on your device.
3. Search and select “Blaupunkt MokshaST”.
4. When connected, the earbuds indicators light off.

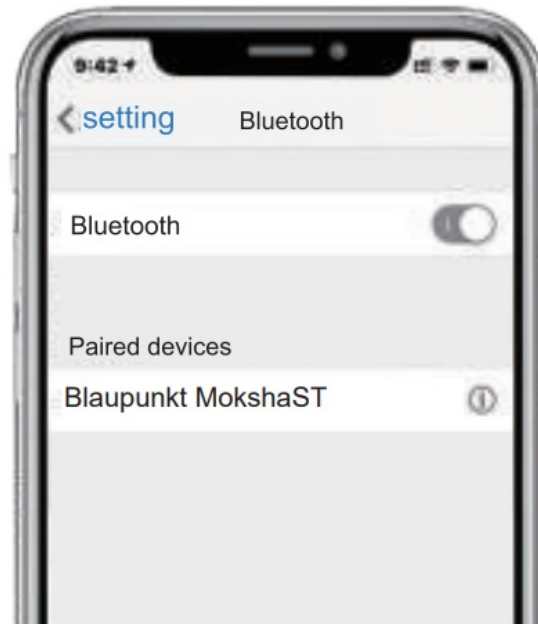

## Multi Functions

Function	Left earbud	Right earbud
Play/Pause	Double tap	Double tap
Next song		Triple tap
Previous song	Triple tap	
Volume up		Single tap
Volume down	Single tap	
Answer a call	Single tap	Single tap
End a call	Double tap	Double tap
Reject a call	Long press for 2s	Long press for 2s
Active Siri/ Google Assistant	Tap 4 times	Tap 4 times
Noise cancelling /Ambient sound /Ambient sound off	Long press for 2s	Long press for 2s

## Factory reset

1. Take out the earbuds from the charging case.
2. Turn off both earbuds.
3. Long press both the earbuds for about 8 seconds.
4. In both earbuds, white & blue light flash alternatively, indicating that the reset is complete
5. Place both the earbus inside the charging case and repeat the pairing process.

## WARNING

1. Listening to earbuds at high volume levels, particularly over extended periods of time, may damage your hearing.
2. Supervise children when using equipment. This product is not a toy.
3. The small parts included with this product can be a choking hazard. This product is not intended for use by small children and should be kept away from children under 3 years of age.

## Warranty Information 1 Year

If you have issue with our MOKSHA ANC TWS product please contact our service center Service Centre.  
Authorized Service Center Blaupunkt Speakers

**Address:** Envent World Wide Pvt Ltd.

Khasra. No- 15/15(4-16), Village Samalkha, Tehsil Vasant Vihar, New Delhi- 110037 **E-Mail:**

[wecare@blaupunktaudio.in](mailto:wecare@blaupunktaudio.in) Tel. 18008434333

Please prepare & submit the following information during the telephone or e-mail notification to facilitate the process:


- Serial Number

- Date of purchase
- A copy of proof of purchase in case of warranty

**Note-** Important Information

Please use the original packaging or other suitable packaging to protect the unit in transit.

**Documents / Resources**

	<a href="#">BLAUPUNKT MOKSHA BTW TWS Active Noise Cancellation</a> [pdf] Instruction Manual MOKSHA BTW TWS Active Noise Cancellation, MOKSHA BTW TWS, MOKSHA, BTW TWS, Active Noise Cancellation
---	---

Manuals+.