



Blewandy 12 Way Blade Fuse Box User Manual

[Home](#) » [Blewandys](#) » **Blewandys 12 Way Blade Fuse Box User Manual**





6/12 Way Fuse Box User Manual

Contents

- 1 Wiring Diagram
2 Material:
3 Technical
Specification:
4 Documents /
Resources
4.1 References

Wiring Diagram

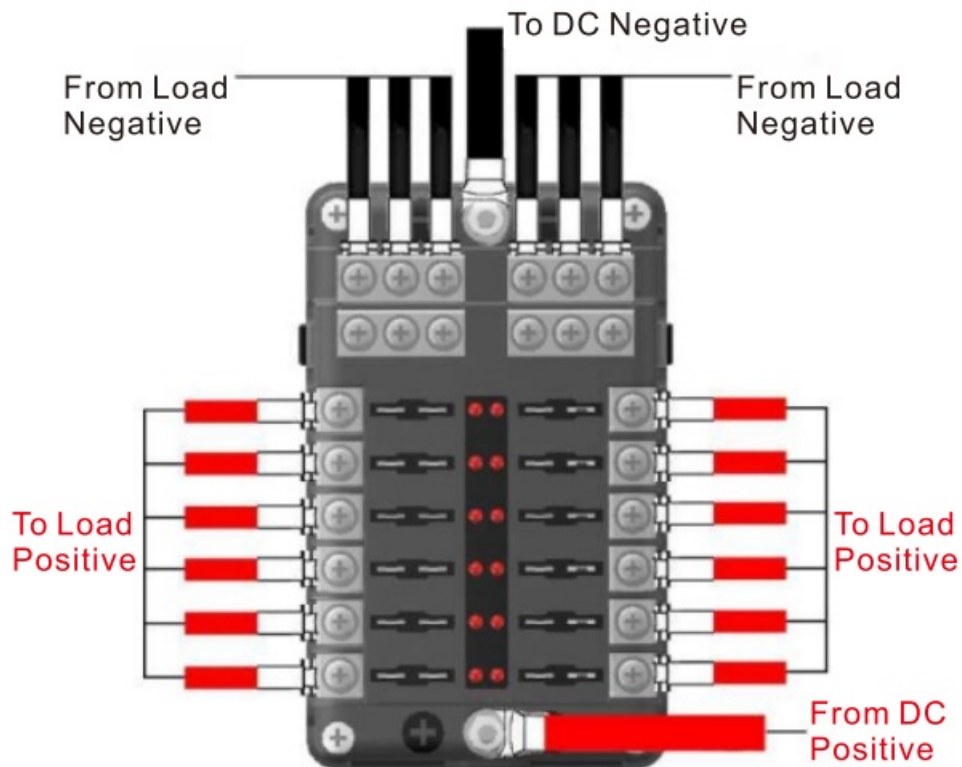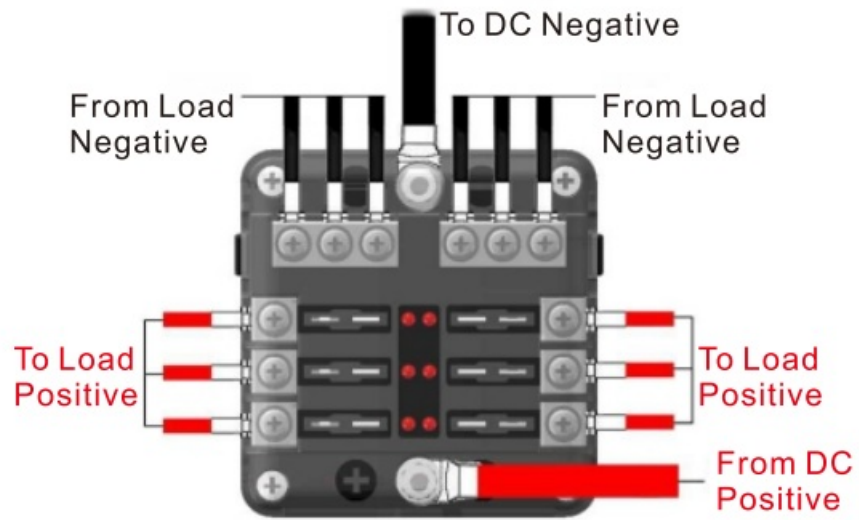

Material:

Base PBT
 Cover: PC
 Terminal Nickel plated copper
 Screw: Stainless steel
 Label: Ppx70

Technical Specification:

Mam Line:
 terminal rating: M5 threaded studs (100A 32V DC .max)
 wire size: #4-6AWG
 Single Line:

terminal rating: M4 threaded studs (30A 32V DC .max)
wire size: #12- 16AWG



warm Tips:

1. Install the fuse box in a dry, well-ventilated and easy-to-maintain place.
2. Choose the suitable fuse according to the electrical current requirements.
3. Do not directly power on without a fuse installed.
4. Regularly check the condition of the fuse. If it is found to be blown or discolored, replace in time.
5. This product contains small parts, please keep it away from children.

Service Email: Blewandy@outlook.com

If you have any questions with our products, please feel free to contact us.



Blewandy

Documents / Resources

	Blewandy 12 Way Blade Fuse Box [pdf] User Manual 12 Way Blade Fuse Box, Blade Fuse Box, Fuse Box, Box
---	--

References

- [User Manual](#)