



Sync Module Core User Manual

Contents [[hide](#)]

- [1 IMPORTANT PRODUCT INFORMATION](#)
- [2 SAFELY CONNECTING YOUR VIDEO DOORBELL TO YOUR HOME'S ELECTRICAL WIRING](#)
- [3 PRODUCT SPECIFICATIONS](#)
- [4 RECYCLING YOUR DEVICE PROPERLY](#)
- [5 TERMS AND POLICIES](#)
- [6 LIMITED WARRANTY](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)

IMPORTANT PRODUCT INFORMATION

[Triangle with !] SAFETY INFORMATION

READ ALL SAFETY INFORMATION BEFORE USING THE DEVICE. FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS COULD RESULT IN FIRE, ELECTRIC SHOCK, OR OTHER INJURY OR DAMAGE.

Use only accessories supplied with your device, or specifically marketed for use with your device, to power your device. Use of third-party accessories may impact your device's performance. In limited circumstances, use of third-party accessories may void

your device's limited warranty. In addition, use of incompatible third-party accessories may cause damage to your device or the third-party accessory. Read all safety instructions for any accessories before using with your device.

WARNING: Small parts contained in your device and its accessories may present a choking hazard to small children.

Video Doorbell

WARNING: Electrical shock hazard. Disconnect power to installation area at your circuit breaker or fuse box before beginning installation. Always use caution when handling electrical wiring.

Installation by a qualified electrician may be required in your area. Refer to your local laws and building codes before performing electrical work; permits and/or professional installation may be required by law.

Please consult a qualified electrician in your area if you are unsure or uncomfortable in performing the installation.

Do not install when it is raining.

CAUTION: Risk of fire. Do not install near combustible or flammable surfaces.

CAUTION: When mounting this device in elevated locations, use precautions to ensure that the device does not fall and harm bystanders.

Your device can withstand outdoor use and contact with water under certain conditions. However, your device is not intended for underwater use and may experience temporary effects from exposure to water. Do not intentionally immerse your device in water. Do not spill any food, oil, lotion, or other abrasive substances on your device. Do not expose your device to pressurized water, high velocity water, or extremely humid conditions (such as a steam room). Do not expose your device or batteries to salt water or other conductive liquids. To protect against electric shock, do not place cord, plug, or device in water or other liquids. If your device gets wet from immersion in water or high pressure water, carefully disconnect all cables without getting your hands wet and wait for them to dry completely before powering it on again. Do not attempt to dry your device or batteries (if applicable) with an external heat source, such as a microwave oven or a hair dryer. To avoid risk of electric shock, do not touch your device or batteries or any wires

connected to your device during a lightning storm while your device is powered. If your device or batteries appears to be damaged, discontinue use immediately.

Protect your device from direct sunlight.

Sync Module Core

Your device is shipped with an AC adapter. Your device should only be powered using the AC adapter included with the device. If the adapter or cable appears damaged, discontinue use immediately. Install your power adapter into an easily accessible socket-outlet located near the equipment that will be plugged into or powered by the adapter.

Do not expose your device or adaptor to liquids. If your device or adaptor gets wet, carefully unplug all cables without getting your hands wet and wait for the device and adaptor to dry completely before plugging them in again. Do not attempt to dry your device or adaptor with an external heat source, such as a microwave oven or a hairdryer. If the device or adaptor appear damaged, discontinue use immediately. Use only accessories supplied with the device to power your device.

Install your power adaptor into an easily accessible socket-outlet located near the equipment that will be plugged into or powered by the adaptor.

Don't expose your device to steam, extreme heat or cold. Use your device in a location where temperatures remain within the device's operating temperature range set forth in this guide. Your device may get warm during normal use.

[TRIANGLE WITH !] BATTERY SAFETY

Video Doorbell

The lithium batteries accompanying this device cannot be recharged. Do not open, disassemble, bend, deform, puncture, or shred the battery. Do not modify, attempt to insert foreign objects into the battery or immerse or expose to water or other liquids. Do not expose the battery to fire, explosion, high temperature or other hazard. Fires involving lithium batteries can usually be controlled with flooding with water, except in confined spaces where a smothering agent should be used.

If dropped and you suspect damage, take steps to prevent any ingestion or direct contact of fluids and any other materials from the battery with skin or clothes. If a battery leaks, remove all batteries and recycle or dispose of them in accordance with battery manufacturer's recommendations. If fluid or other material from the battery comes into

contact with skin or clothes, flush skin or clothes with water immediately. An open battery should never be exposed to water, as fire or explosion may result from exposure to water.

Insert the batteries in the proper direction as indicated by positive (+) and negative (-) markings in battery compartment. Always replace with non-rechargeable AA 1.5V lithium batteries (lithium metal batteries) like those provided with and specified for this product.

Do not mix used and new batteries or batteries of different types (for example, lithium and alkaline batteries). Always remove old, weak, or worn-out batteries promptly and recycle or dispose of them in accordance with applicable laws and regulations.

SAFELY CONNECTING YOUR VIDEO DOORBELL TO YOUR HOME'S ELECTRICAL WIRING

If you install the Video Doorbell where a doorbell is already in use and you connect the Video Doorbell to your home's doorbell electrical wiring, you must turn off the existing doorbell's power source at your home's circuit breaker or fuse and test that the power is off BEFORE removing the existing doorbell, installing the Video Doorbell, or touching electrical wires. Failure to turn off circuit breaker or fuse so could result in FIRE, ELECTRIC SHOCK, or OTHER INJURY or DAMAGE.

More than one disconnect switch may be required to turn off the equipment before servicing.

To test whether you have successfully de-energized your existing doorbell's power source, press your doorbell several times to confirm that the power is off.

If the electrical wiring in your home does not resemble any of the diagrams or instructions provided with Video Doorbell, if you encounter damaged or unsafe wiring, or if you are unsure or uncomfortable in performing this installation or handling electrical wiring, please consult a qualified electrician in your area.

Protection Against Water

Video Doorbell

To reduce the risk of damage to your device, follow these instructions:

- Do not intentionally immerse your device in water or expose it to seawater, salt water, chlorinated water or other liquids (such as beverages).
- Do not spill any food, oil, lotion or abrasive substances on your device.

- Do not expose your device to pressurised water, high-velocity water or extremely humid conditions (such as a steam room).

If your device is dropped or otherwise damaged, the waterproofing of the device may be compromised.

For more information concerning care instructions and the waterproofing of your device, please see www.amazon.com/devicesupport.

PRODUCT SPECIFICATIONS

Video Doorbell

Model Number: BDM01300U

Electrical Rating:

3x AA (LR91) 1.5 V lithium metal battery

8-24 VAC, 50/60 Hz, 40 VA

Operating Temperature Range: -20°C to 45°C

Sync Module Core

Model Number: BSM01600U

Electrical Rating: 5V = 1A

Operating Temperature Range: 32°F to 104°F (0°C to 40°C)

FOR CUSTOMERS IN EUROPE AND THE UNITED KINGDOM

Conformity Statement

Hereby, Amazon.com Services LLC declares that the radio equipment type BDM01300U, BSM01600U is in compliance with Directive 2014/53/EU and UK Radio Equipment Regulations 2017 (S.I. 2017/1206), including currently valid amendment(s). The full texts of the declarations of conformity and other applicable statements of compliance for this product are available at the following internet address:

<https://blinkforhome.com/safety-and-compliance>

Model Number: BDM01300U

Wireless Feature: WiFi

Wireless Feature: SRD

Model Number: BSM01600U

Wireless Feature: WiFi

Wireless Feature: SRD

Electromagnetic Field Exposure

In order to protect human health, this device meets the thresholds for exposure of the general public to electromagnetic fields according to Council Recommendation 1999/519/EC.

This device should be installed and operated with at least 20 cm between the radiator and your body.

RECYCLING YOUR DEVICE PROPERLY

In some areas, the disposal of certain electronic devices is regulated. Make sure you dispose of, or recycle, your device in accordance with your local laws and regulations. For information about recycling your device, go to www.amazon.com/devicesupport.

Additional Safety and Compliance Information

For additional safety, compliance, recycling and other important information regarding your device, please refer to the Legal and Compliance section of the About Blink menu in the Settings in your app or on the Blink website at <https://blinkforhome.com/safety-andcompliance>

TERMS AND POLICIES

Before using the Blink device ("Device"), please read the terms and policies for the Device located in your Blink Home Monitor App in About Blink > Legal Notices (collectively, the "Agreement"). By using your Device, you agree to be bound by the Agreement. In the same sections, you can find the Privacy Policy which is not part of the Agreement.

BY PURCHASING OR USING THE PRODUCT, YOU AGREE TO BE BOUND BY THE TERMS OF THE AGREEMENTS.

LIMITED WARRANTY

If you purchased your Blink devices excluding accessories (the "Device") from

[Amazon.co.uk](https://www.amazon.co.uk), [Amazon.de](https://www.amazon.de), [Amazon.fr](https://www.amazon.fr), [Amazon.it](https://www.amazon.it), [Amazon.es](https://www.amazon.es), [Amazon.nl](https://www.amazon.nl), [Amazon.be](https://www.amazon.be)

or from authorized resellers located in Europe, the warranty for the Device is provided by Amazon EU S.à r.l., 38, avenue John F. Kennedy, L-1855 Luxembourg. The provider of this Warranty is sometimes referred to herein as “we “.

When you purchase a new or Certified Refurbished Device (which, for clarity, excludes Devices sold as “Used” & Used Devices sold as Warehouse Deals), we warrant the Device against defects in materials and workmanship under ordinary consumer use for two years from the date of original retail purchase. During this warranty period, if a defect arises in the Device, and you follow the instructions for returning the Device, we will at our option, to the extent permitted by law, either (i) repair the Device using either new or refurbished parts, (ii) replace the Device with a new or refurbished Device that is equivalent to the Device to be replaced, or (iii) refund to you all or part of the purchase price of the Device. This limited warranty applies, to the extent permitted by law, to any repair, replacement part or replacement device for the remainder of the original warranty period or for ninety days, whichever period is longer. All replaced parts and Devices for which a refund is given shall become our property. This limited warranty applies only to hardware components of the Device that are not subject to a) accident, misuse, neglect, fire, alteration or b) damage from any third-party repair, third-party parts, or other external causes.

Instructions. For specific instructions about how to obtain warranty service for your Device, please contact Customer Service using the contact information provided below in ‘Contact Information’. In general, you will need to deliver your Device in either its original packaging or in equally protective packaging to the address specified by Customer Service. Before you deliver your Device for warranty service, it is your responsibility to remove any removable storage media and back up any data, software, or other materials you may have stored or preserved on your Device. It is possible that such storage media, data, software or other materials will be destroyed, lost or reformatted during service, and we will not be responsible for any such damage or loss.

Limitations. TO THE EXTENT PERMITTED BY LAW, THE WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES AND REMEDIES, AND WE SPECIFICALLY DISCLAIM ALL STATUTORY OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND AGAINST

HIDDEN OR LATENT DEFECTS. IF WE CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY AND TO REPAIR, OR REPLACEMENT SERVICE.

SOME JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG A STATUTORY OR IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. WE ARE NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR UNDER ANY OTHER LEGAL THEORY. IN SOME JURISDICTIONS THE FOREGOING LIMITATION DOES NOT APPLY TO DEATH OR PERSONAL INJURY CLAIMS, OR ANY STATUTORY LIABILITY FOR INTENTIONAL AND GROSSLY NEGLIGENT ACTS AND/OR OMISSIONS, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. THIS "LIMITATIONS" SECTION DOES NOT APPLY TO CUSTOMERS IN THE EUROPEAN UNION AND THE UNITED KINGDOM.

This limited warranty gives you specific rights. You may have additional rights under applicable law, and this limited warranty does not affect such rights.

Contact Information. For help with your Device, please contact Customer Service.

If you are a consumer, this Two-Year Limited Warranty is provided in addition to, and without prejudice to, your consumer rights.

For further information on consumer rights in relation to faulty goods please visit

<https://www.amazon.co.uk/gp/help/customer/display.html?nodeId=201310960>



Documents / Resources



[Blink BSM01600U Sync Module Core \[pdf\]](#) User Manual

BSM01600U Sync Module Core, BSM01600U, Sync Module Core, Module Core, Core

References

- [User Manual](#)

🔍 blink, BSM01600U, BSM01600U Sync Module Core, core, Module Core, Sync Module

📁 blink Core

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.