



 
 
BLNAN LS-CL-G3-24W-Dim-WY RGB Ceiling Light with Remote User Manual

[Home](#) » [BLNAN](#) » BLNAN LS-CL-G3-24W-Dim-WY RGB Ceiling Light with Remote User Manual 

BLNAN®

RGB CEILING LIGHT WITH REMOTE User Manual

Product Type: LS-CL-G3-24W-Dim-WYRGB

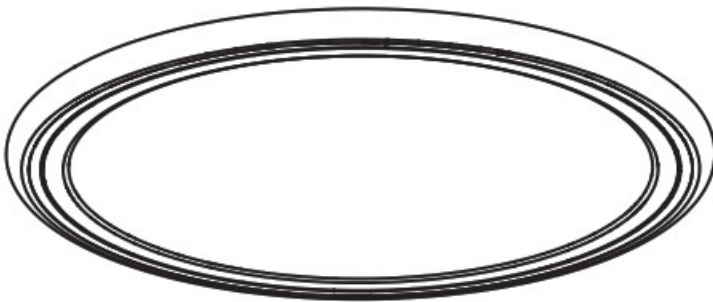




RGB



 Dimming

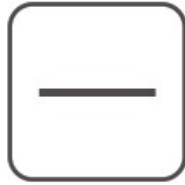

Ultra Thin



Energy Saving



3000K-6500K

Contents

- [1 INTRODUCTION](#)
- [2 PRODUCT INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 2.4G REMOTE CONTROL INSTRUCTION](#)
- [5 NOTE](#)
- [6 MEMORY FUNCTION](#)
- [7 WALL SWITCH OPERATION](#)
- [INSTRUCTIONS](#)
- [8 ACCESSORIES LIST](#)
- [9 INSTALLATION STEPS](#)
- [10 QUESTION & ANSWER](#)
- [11 PRECAUTIONS](#)
- [12 Documents / Resources](#)
- [13 Related Posts](#)

INTRODUCTION

Dear customer,

Thank you for purchasing our RGB ceiling light.

In order to use this product correctly, please read and keep this instruction for future reference.

We are dedicated to the customers to bring a convenient and comfortable experience.

Email address: support@blinan.net

PRODUCT INTRODUCTION

You could directly use the remote control to set the functions.

Front Light — Adjust the brightness and color temperature.


RGB Side Light — Change different RGB colors as an atmosphere light.

BLNAN RGB led flush mount ceiling light with remote, ideal for bedroom, living room, study room, balcony, home movie theater, party, festival, etc.

SPECIFICATIONS

Product Model	LS-CL-G3-24W-Dim-WYRGB
Size	φ330*25mm/φ13*0.99inch
Wattage	24W+RGB 8W
Voltage	AC120V 60Hz
Luminous Flux	2400LM
Color Temperature (Front Light)	3000K-6500K
RGB Light (Sidelight)	7 RGB colors
LED Quantity	144pcs beads + 98pcs RGB beads
CRI	90
Material	PC
Waterproof	IP40
Remote Control Frequency	2.4G
Remote Control Distance	10M
Life Span	30000H

 2.4G REMOTE CONTROL INSTRUCTION

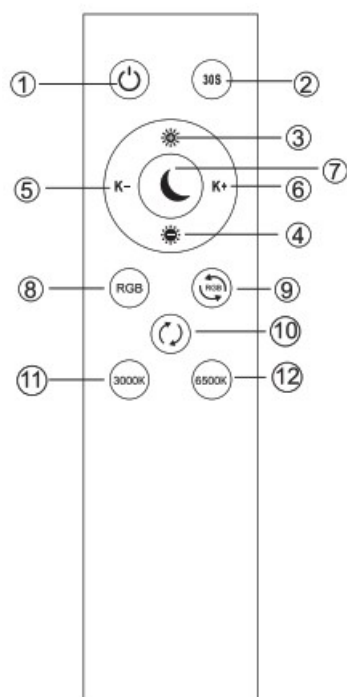

1. ON/ OFF (Not applicable for RGB)
2. Turn o the light after 30 seconds
3. Steplessly up to 100% brightness (Not applicable for RGB)
4. Steplessly down to 10% brightness (Not applicable for RGB)
5. Steplessly down to 3000k
- 6 .Steplessly up to 6500k

7. Night light mode
8. 7 RGB colors + Turn off the RGB light
9. RGB cycle mode fast/ slow (Press the touch “ RGB ” first, the n press this touch)
10. Different color temperature (3000k/ 4000k/ 6500k)
11. Warm white: 3000k
12. Cold white: 6500k

NOTE

- Batteries are not included
- Don't fit for dimmer switch.
- The remote control distance is 10 meters.
- The brightness of 7 RGB colors can not be adjusted.
- The brightness of the front light only can be adjusted by remote control, not by a wall switch.

MEMORY FUNCTION

1. Keep the current color temperature and brightness for 1 minute and turn off the ceiling light for more than 5 seconds, the light will remember the light setting when it is turned back on.
2. Remote control: memory function does not include 7 RGB color and RGB cycle mode.

 
WALL SWITCH OPERATION INSTRUCTIONS

Change the 6500K→ 3000K→ 4000K→ night light mode→ RGB cycle mode in turn. (Do not fit for home dimmer!)

ACCESSORIES LIST




Screw for
junction box x2

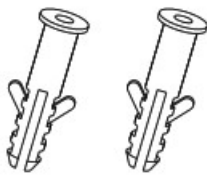


Anchor x2



 Screw for anchor x2

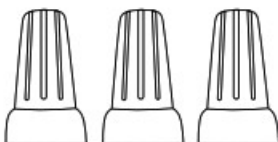

Wire nut x3




 


Remote control



Instruction for
installation x1

    INSTALLATION STEPS

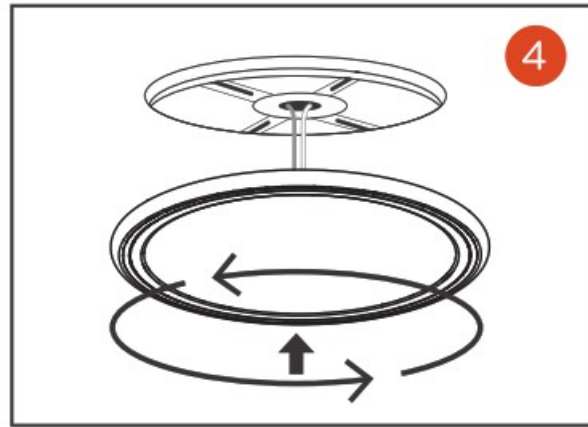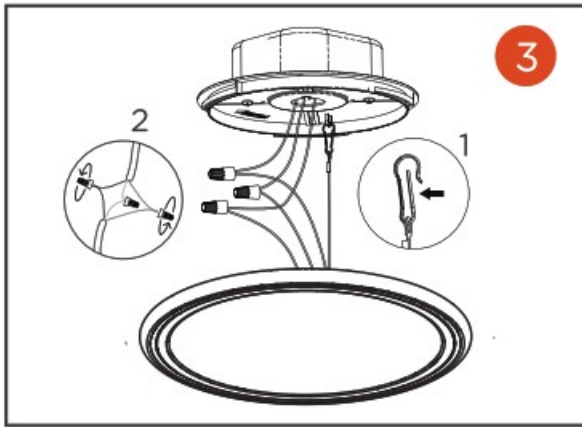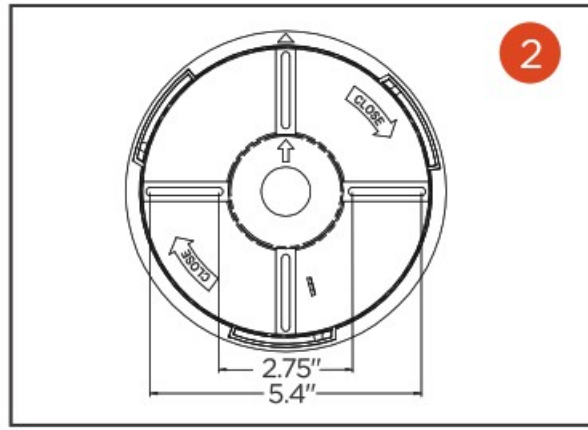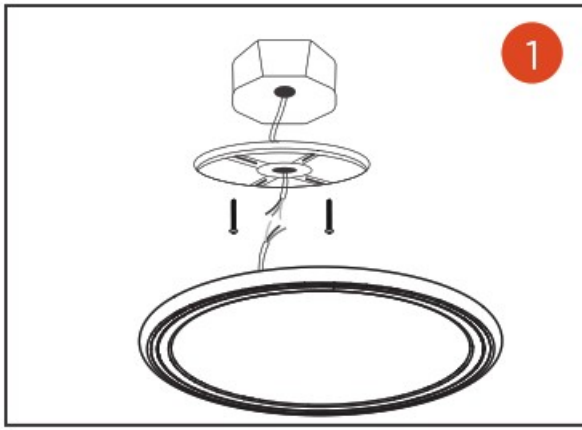

1. Please rotate and remove the base plate, fix the base plate to the junction box with screws provided.
2. Please use the correct size junction box. The screw hole distance of the junction box: 2.75-5.4 inches.
3. Hang up the wire rope and connect the wires of the corresponding color, then push and feed all wires up into the junction box.

(Description of the supply terminals: Black: Hot Wire; White: Neutral Wire; Green: Ground Wire)


4. Push and rotate the lamp and install it onto the base plate.

QUESTION & ANSWER

Why does the remote control not work?

- A: Try to replace the new batteries.
- B: Try to pair the remote control and the light.
- C: If you have any questions, please contact the following email address: support@blnan.net.

How to pair the remote control and the light?

- First step: power off for 10-20 seconds, Second step: power on again, Third step: long press  for 5 seconds to match the code, the ceiling light flashes once and the pairing is successful.

How to cancel the pairing between the remote control and the light?

- First step: power off for 10-20 seconds,
- Second step: power on again,

Third step: long press  for 5 seconds, the ceiling light flashes twice and the pairing is canceled successfully.

PRECAUTIONS

◆ Precautions Before Installation

1. Power off before installation.
2. Do not exceed the rated voltage.
3. Do not install it on surfaces where are not stable or deformed.
4. Do not install it on or above the surface with high temperatures.
5. Please make sure that no gas, water, or electricity pipes and wires can be drilled through or damaged in your chosen mounting location.

◆ Precautions During Installation


1. There must be no corrosive, explosive, or flammable materials around the lamp.
2. User should connect the cable correctly, and the lamp should be installed by a qualified electrician.
3. Please pay attention to connecting the wires correctly, and make sure the cable connection comply with national regulations.
4. Please make sure that the lampshade is clear in case of low luminous efficiency.
5. Please make sure that illuminants are securely fixed during the installation.

◆ Precautions About the Product

1. It is not suitable for dimmers and electronic switches.
2. The LED light source inside the lamp body can not replaceable.
3. The lampshade cannot be opened.
4. Do not touch the light when it is running.
5. Do not look straight into the light source (illuminant, LED, etc.).
6. Do not let the children touch this light and packaging to avoid danger.



Documents / Resources

	BLNAN LS-CL-G3-24W-Dim-WY RGB Ceiling Light with Remote [pdf] User Manual LS-CL-G3-24W-Dim-WY RGB Ceiling Light with Remote, LS-CL-G3-24W-Dim-WY, RGB Ceiling Light with Remote, Ceiling Light with Remote, Light with Remote, Remote
---	--