



BLUAPUNKT Vehicle Tracking System Instructions

[Home](#) » [BLUAPUNKT](#) » BLUAPUNKT Vehicle Tracking System Instructions 

BLUAPUNKT Vehicle Tracking System Instructions



Contents

- 1 CAUTIONS
- 2 STRUCTURE & FUNCTIONS
- 3 SPECIFICATIONS
- 4 FUNCTION LIST OF THE DEVICE
- 5 WIRING DIAGRAM
- 6 TROUBLESHOOTING
- 7 OPERATION INSTRUCTION
- 8 DIFFERENT SCENARIO
- 9 SOFTWARE OPERATION
- 10 SOFTWARE OPERATION
- 11 SOFTWARE OPERATION
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts

CAUTIONS

Safety Notes

This device has been manufactured according to established safety guidelines. However, dangers may still occur if the safety notes in this manual is not observed. This manual is intended to familiarize the user with the device's important functions. Read this carefully, prior to using the device. Keep this manual in an easily accessible location. In addition, do observe the instructions of the devices used in conjunction with this device.

Attentions

- This device is intended for installation and operation in a vehicle with 12V and 24V vehicle system voltage.
- Keep the device away from children.
- Keep the device away from flammable areas or liquids.
- The device should be stored in dry and low humidity place.
- Ensure the car battery is fully charged.
- For abnormalities, please refer to the "Troubleshooting" section. Consult with Blaupunkt dealer for further assistance, in case if the problem cannot be resolved.


This manual may be updated from time to time without any notice. Visit www.blaupunkt.com/ase for latest info.

Disclaimer

In no event shall Blaupunkt be liable for any direct, indirect, punitive, incidental, special consequential damages to property or life and whatsoever arising out of or connected with the use or misuse of our products.

USA & CANADA: This product is not intended for sale in the United States and Canada. If purchased in the U.S. or Canada, this product is purchased on as-is basis. No warranty, whether expressed or implied is provided in the U.S. or Canada. Blaupunkt does not warrant the performance of the local telecommunication network used with our product. It is recommended to test for network compatibility prior to purchase.

STRUCTURE & FUNCTIONS

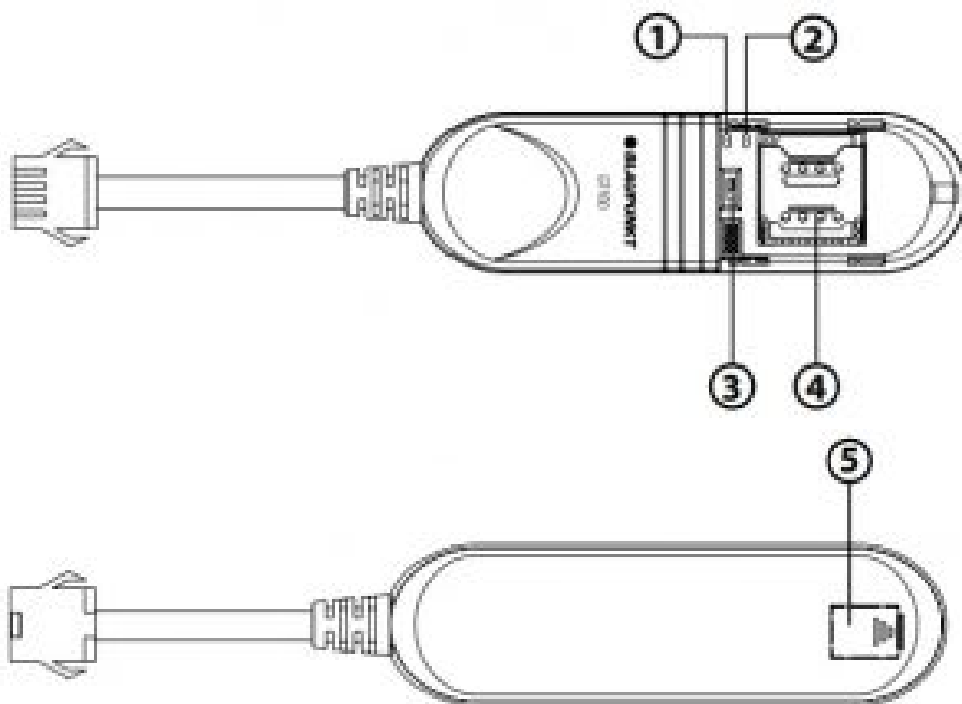

Functions

1. Indicator light of GSM
2. Indicator light of GPS
3. Switch (On/Off)
4. Sim Card Slot
5. SIM card slot 5. Light sensor


SPECIFICATIONS

| | |
|---------------------|----------------------|
| Operating Voltag | DC 9V-36V |
| Current | 10mA |
| Navigation System | GPS |
| Location Accuracy | Up to 10 Meters |
| GSM Frequency | 850/900/1800/1900MHZ |
| Internet Protocol | TCP |
| Working Temperature | -25°C ~ +75° |
| Storage Temperature | -40°C ~ +85°C |
| Standby Battery | 0.5 Hours |
| Dimension (LxWxH) | 78.5x23x12mm |

FUNCTION LIST OF THE DEVICE

| Functions | Details | Descriptions |
|--------------------------|------------------------------|--|
| Vehicle Status Detection | Acc On/ Of | Uploaded data include the Acc On/ Off status each time in dynamic view. |
| Alarm Notification | External Power Disconnection | When the vehicle voltage is <5V, Vehicle battery consumption is stopped. When the backup battery of device is depleted, the tracking function will be disconnected. |
| | Low External Battery | Vehicle battery voltage is between 5V to 10V. It is an indicate that the vehicle battery is low. |
| | External Power Supply | Power is supplied to the device. |
| | External Power Disconnection | Power supply has been disconnected from the device. |
| | Enter Fence | The vehicle enters the defined area set by user. |
| | Leave Fence | The vehicle leaves the defined area set by user. |
| | Speeding Start | Vehicle speed exceeds value set. Default is 120km/hr for 10 seconds. |
| | Speeding End | Vehicle speed is below value set after speeding is detected. |

WIRING DIAGRAM

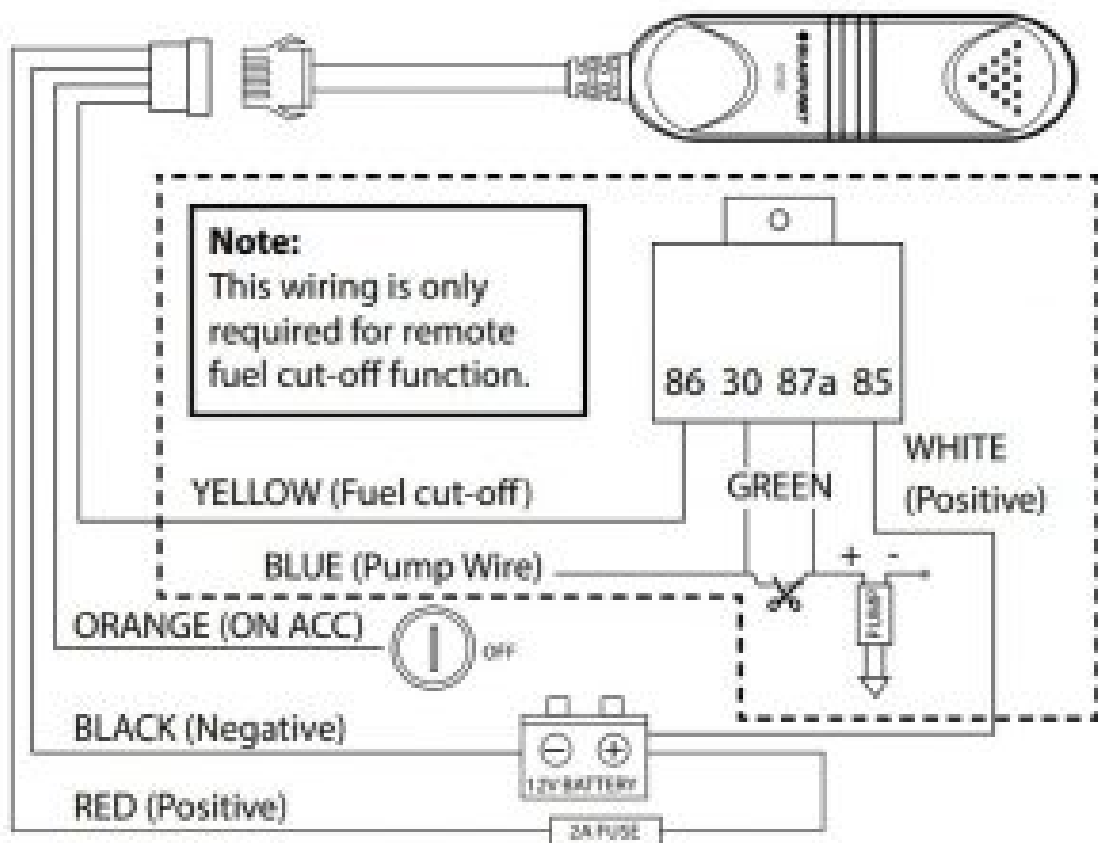


TROUBLESHOOTING

If any of the following problem occur, please resort to Troubleshooting for the possible solutions. Consult Blaupunkt authorized dealer if problem persist.


| Problems | Possible Causes | Solutions |
|--|--|--|
| Weak or no GPS signal | GPS tracking device is not positioned properly | Check the installation location of the device. |
| | | Ensure it is not being shielded by metal. |
| The device is not responding to SMS commands | SIM card has run out of credit. | Top up the SIM card. |
| | Improper installation of SIM card. | Check whether the SIM card has been slotted correctly. |
| | | Check that the SMS command is correct. |

OPERATION INSTRUCTION

1. Remove device cover and insert the SIM card into the SIM card slot and close back the device. (Ensure the SIM card has Internet access)

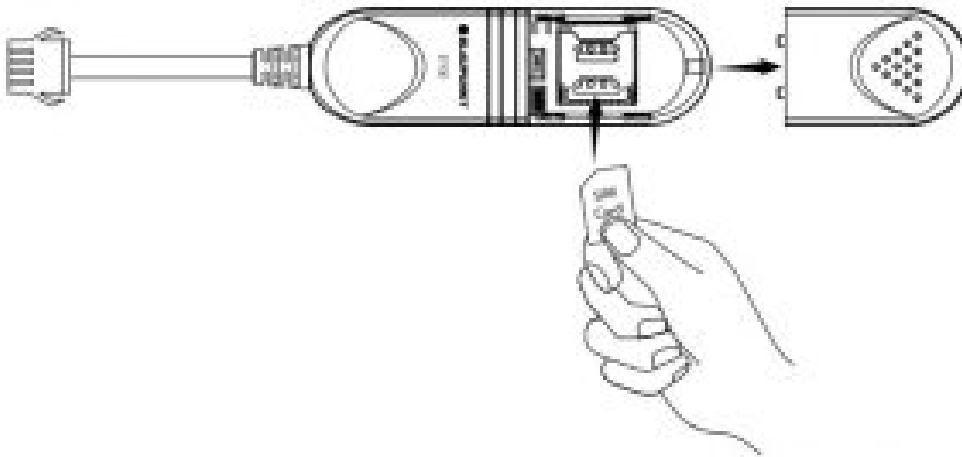

2. Tear off the 3M tape on the back of device and paste it inside the dashboard or car trunk.

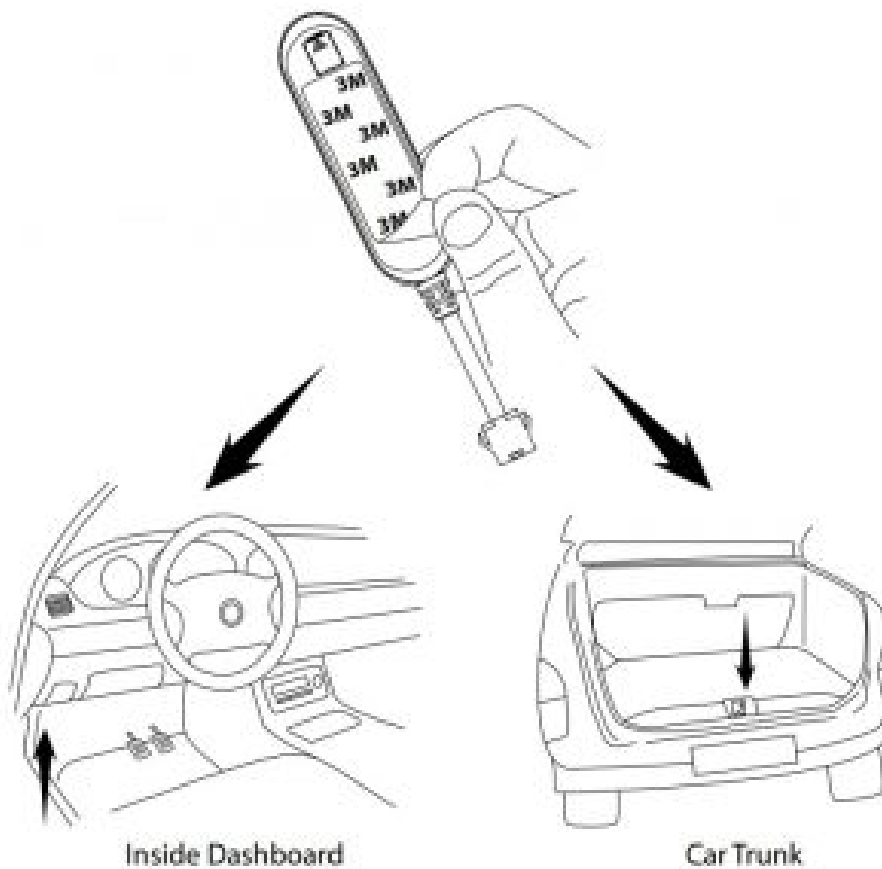

DIFFERENT SCENARIO

Indicator of GSM and GPS

| System | Indicator Light | Status | Meaning |
|--------|-----------------|-------------|--------------------------------|
| GSM | Red | Fast Flash | GSM initialising |
| | | Slow Flash | Normal GSM signal |
| | | Long Bright | GPRS online |
| | | No Light | No GSM signal/ No SIM card |
| GPS | Yellow | Fast Flash | Searching for GPS Signal |
| | | Long Bright | Normal GPS signal |
| | | No Light | No GPS signal/ GPS not working |

SOFTWARE OPERATION



 
Mobile Application

Search "Blaupunkt Tracker" on Google Play Store or iOS App Store to download the App.

Home Page

1. Click on the menu button
2. Click to enter tracking interface.




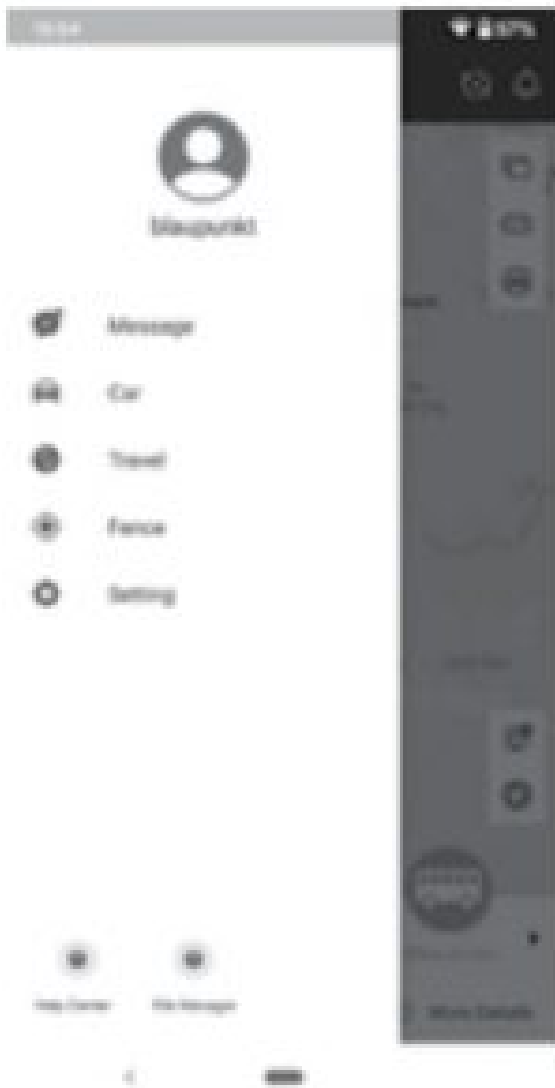

SOFTWARE OPERATION

1. Setting
2. Tracking

 
Click to enter tracking details interface.

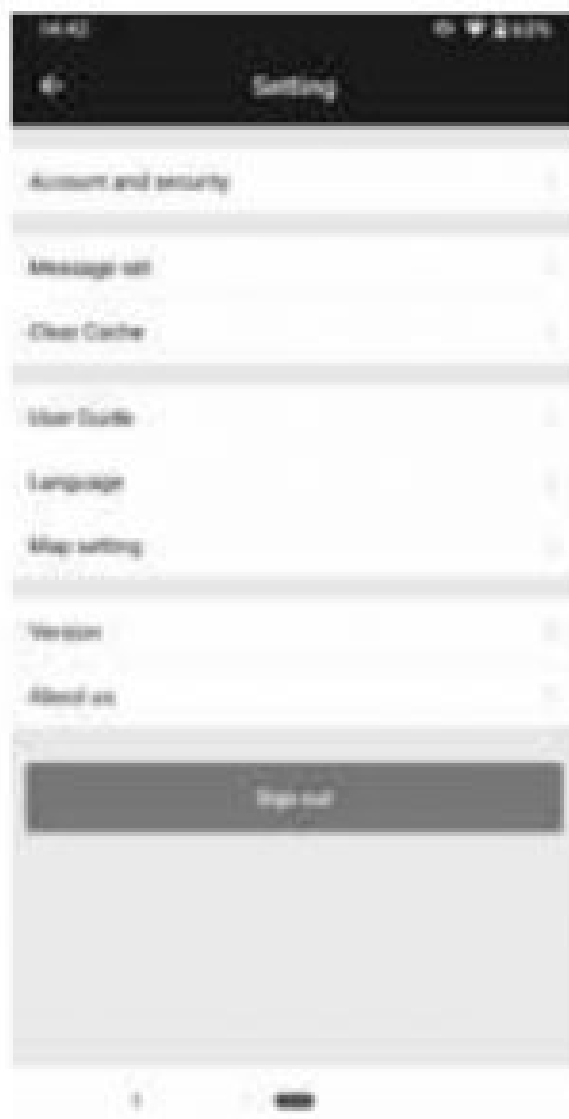



3. Tracking Details

4. Playback

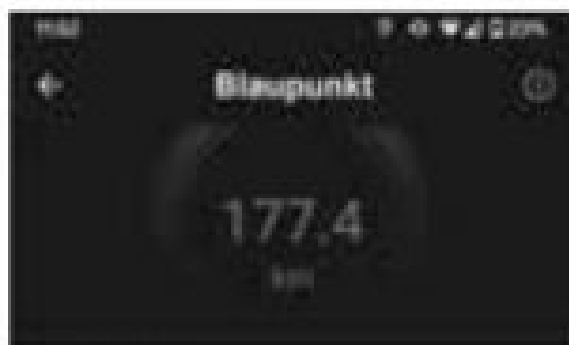

Navigation



Navigation



Navigation



Navigation



Navigation



Navigation

Navigation & Maps



Navigation



Navigation



Navigation



Navigation



Navigation

 
 


Navigation



SOFTWARE OPERATION

1. Dynamic
2. Fence

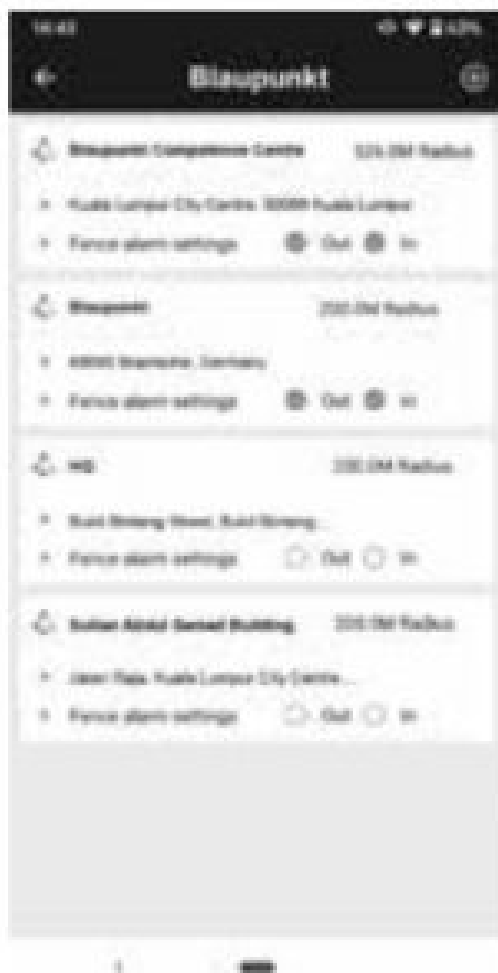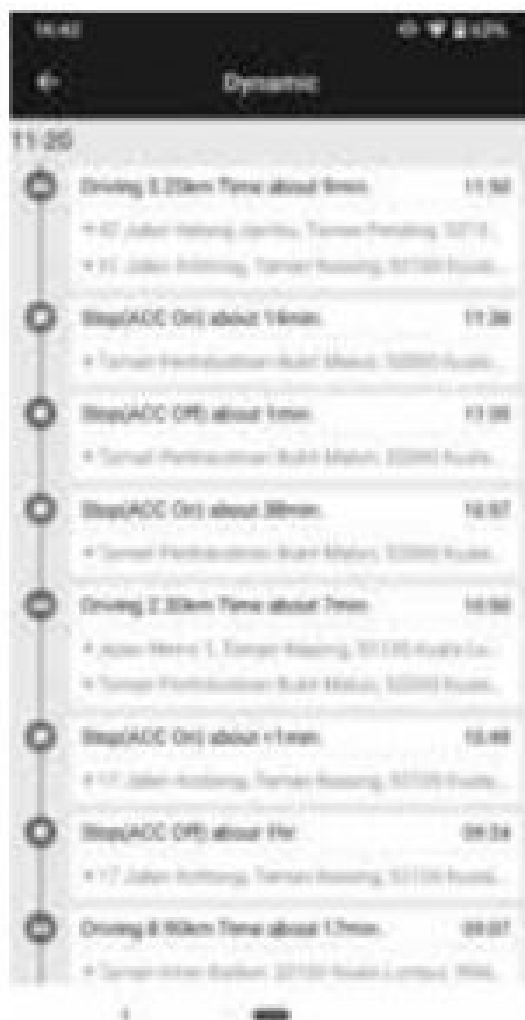


3. Mileage Analysis & Report

4. Velocity Analysis & Report





Documents / Resources

| | |
|---|--|
|  | <p>BLUAPUNKT Vehicle Tracking System [pdf] Instructions Vehicle Tracking System, GT100</p> |
|---|--|

References

- [Home - Blaupunkt](#)