

Add Camera on Blue Iris Instruction Manual

[Home](#) » [BLUE IRIS](#) » Add Camera on Blue Iris Instruction Manual


How to Add Camera on Blue Iris

The screenshot shows the 'Network IP camera configuration' dialog box. Red annotations and arrows highlight the steps to add a camera:

- 1: type in camera IP address**: Points to the 'Address' field where '192.168.0.101' is entered.
- 2: type in camera password**: Points to the 'Password' field, which is currently masked with dots.
- 3: click her**: Points to the 'Find/inspect...' button.

The dialog box contains the following fields and options:

- Address**: http:// 192.168.0.101
- User**: admin
- Password**:
- Find/inspect...** button
- Blank address to search for camera** (text label)
- Make**: Generic/ONVIF
- Model**: *RTSP H.264/H.265/MJPEG/MPEG4
- Media/video/RTSP port**: 554
- Discovery/ONVIF port**: 8999
- Video** section:
 - Main stream**: /
 - Params**: (empty field)
 - Camera**: 1
 - Sub stream (+params)**: (empty field)
- Audio** section:
 - Path**: (empty field)
 - Format**: 16-bit PCM
 - ☐ Setup RTSP back-channel for talk support (PCM-U format)
- Network options** section:
 - Receive buffer (MB)**: 6.0
 - ☐ Use RTP/UDP ports: 7000
 - ☒ Send RTSP keep-alives
 - ☒ Use RTSP/stream timestamp
 - ☐ Skip initial HTTP DNS and reachability tests
 - ☐ Decoder compatibility mode
 - ☐ Get ONVIF trigger events
 - Media profile**: Profile_1
- Buttons**: OK, Cancel, Help

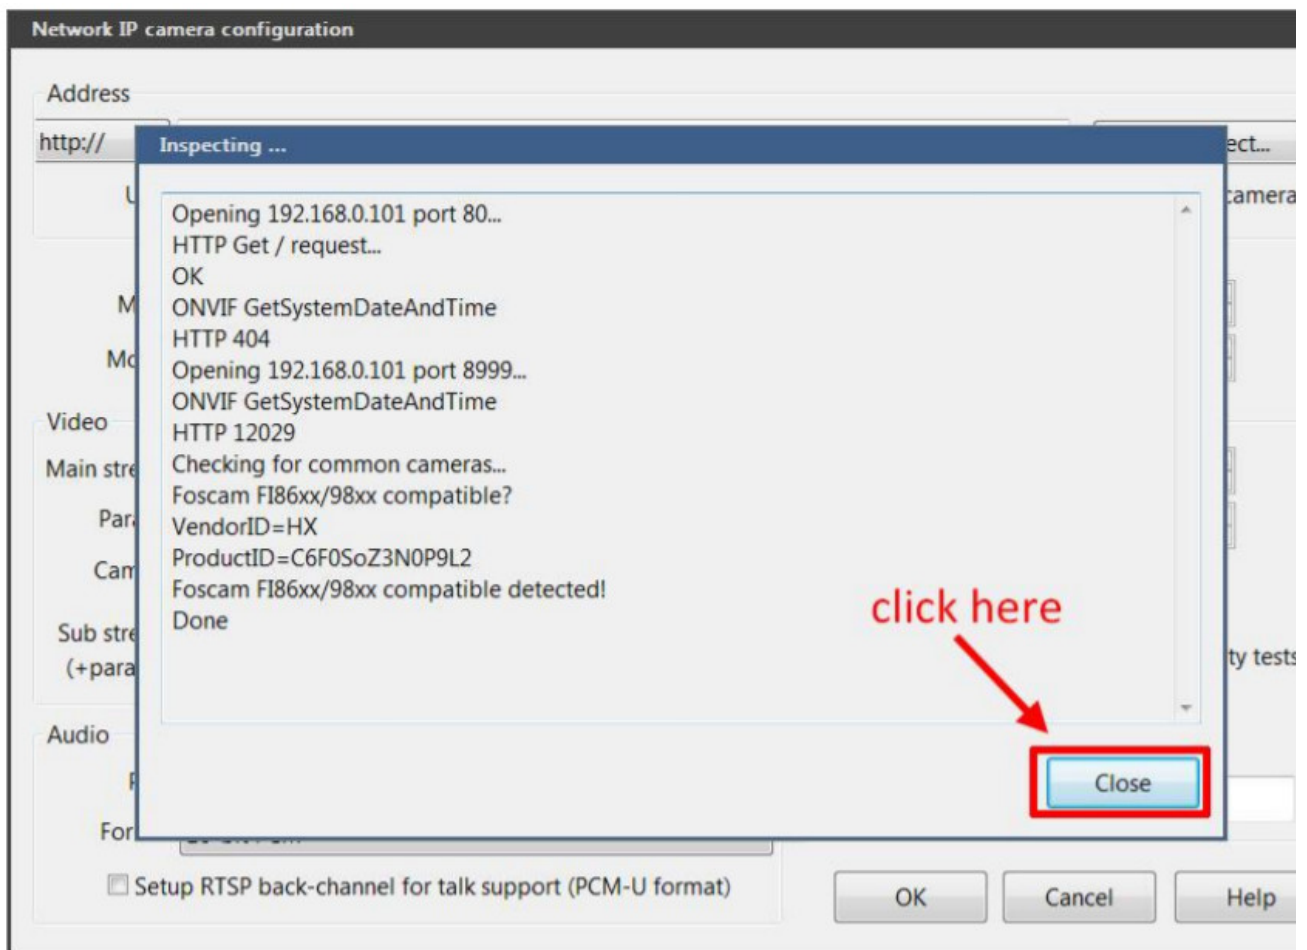

Network IP camera configuration

Address
http:// 192.168.0.101:80 Find/inspect...

User admin Password Blank address to search for cameras

Make Foscam
Model FI86xx/98xx compatible

Media/video/RTSP port 554
Discovery/ONVIF port 8999

Video
Main stream /livestream/11?action=play&media=video_audio_data
Params
Camera 1
Sub stream (+params)

Audio
Path
Format 64 kbps G.711 a-law
☐ Setup RTSP back-channel for talk support (PCM-U format)

Network options
Receive buffer (MB) 6.0
☐ Use RTP/UDP ports: 7000
☒ Send RTSP keep-alives
☒ Use RTSP/stream timecode
☐ Skip initial HTTP DNS and reachability tests
☐ Decoder compatibility mode
☐ Get ONVIF trigger events
Media profile: Profile_1

click here

OK Cancel Help

New camera

Webcast	Schedule	PTZ/Control	Watchdog			
General	Video	Audio	Trigger	Record	Alerts	Post

Device type

☐ Screen capture DirectDraw Blits Primary

☐ USB, Firewire, or Analog

Input Advanced...

☒ Network IP <http://192.168.0.101> Configure...

☐ Broadcast from client app

Image format

Size: ? Max. rate: 1000000 [10.00 fps]

☐ Anamorphic (force size) Delay (msec): 0

☐ Flip left/right Rotate: No


☐ Area of interest (AOI) Edit... De-interlace: None

☒ Enable overlays Edit... 360: No

Hardware accelerated decode: Default

☐ Limit decoding unless required GPU: any ☐ Also BVR


click OK here → 确定 取消 帮助

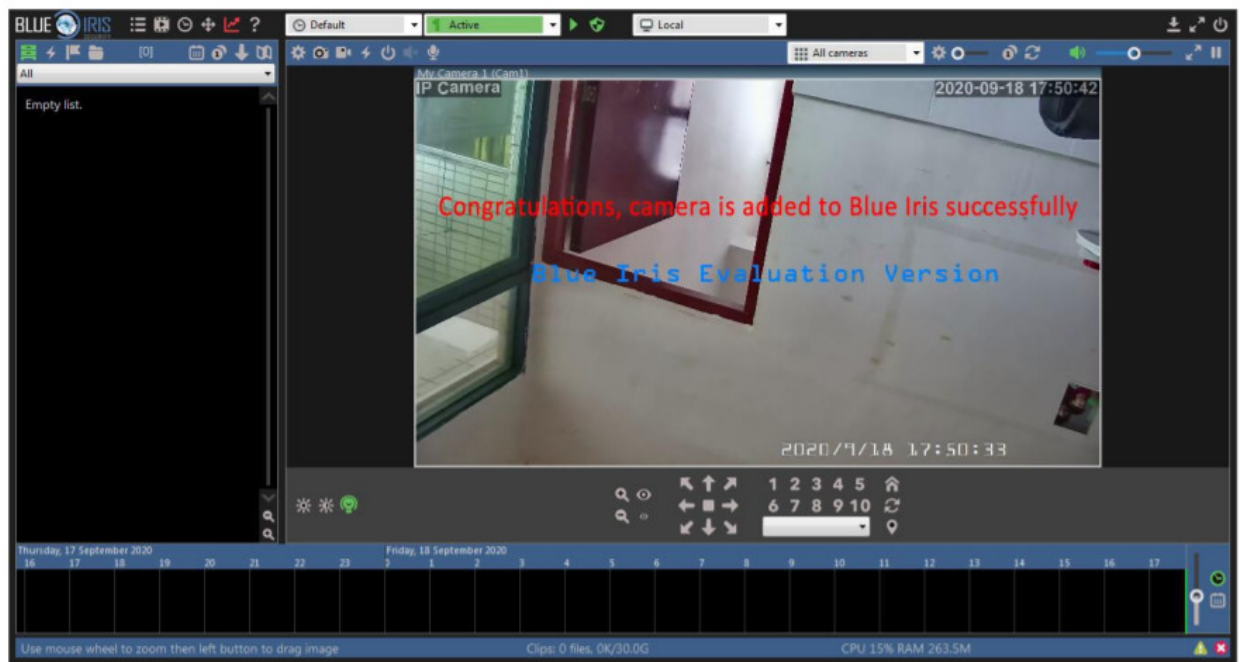

Contents [[hide](#)

- [1 Documents / Resources](#)
- [2 Related Posts](#)

Documents / Resources

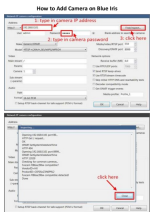

[BLUE IRIS Add Camera on Blue Iris \[pdf\]](#) Instruction Manual
BLUE IRIS, Add, Camera, Network, IP, Configuration