



BlueRetro RSBL Wireless Controller Adapter Owner's Manual

[Home](#) » [BlueRetro](#) » BlueRetro RSBL Wireless Controller Adapter Owner's Manual 

Contents

- [1 BlueRetro RSBL Wireless Controller Adapter](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 INTRODUCTION](#)
- [5 Features](#)
- [6 Instructions](#)
- [7 Pairing with PS4 or P\\$5 controller](#)
- [8 Pairing with Wii & WiU Pro controller](#)
- [9 Pairing with Switch Pro & Joycon](#)
- [10 Pairing with 8bitdo controller](#)
- [11 Pairing with Retro-Bit controller](#)
- [12 Pairing with PS3 controller](#)
- [13 Firmware update](#)
- [14 Buttons mapping reference](#)
- [15 ONLINE CONTACT](#)
- [16 FCC Warning](#)
- [17 Documents / Resources](#)
- [18 Related Posts](#)



BlueRetro RSBL Wireless Controller Adapter



Product Information

- This device is designed and manufactured by an approved manufacturer. It complies with part 15 of the FCC Rules, which ensures that it operates within the defined limits for electromagnetic interference.
- It is important to note that any changes or modifications made to this device without explicit approval from the manufacturer may void your authority to operate the equipment. Therefore, it is recommended to use the device as instructed without making any modifications.
- This equipment also complies with FCC radiation exposure limits for an uncontrolled environment. It is safe to install and operate this equipment, but it should be done with a minimum distance of 0cm between the radiator (the emitting component) and your body. This distance ensures that any potential radiation exposure remains within the defined limits.

Product Usage Instructions

1. Read and understand the user manual thoroughly before operating the device.
2. Do not make any changes or modifications to the device that are not explicitly approved by the manufacturer.
3. When installing the equipment, ensure that there is a minimum distance of 0cm between the radiator and your body.
4. Place the device in a suitable location where it can operate without causing harmful interference to other devices.
5. If you experience any undesired operation or interference, try adjusting the placement of the device or contact the manufacturer for assistance.
6. Operate the device according to the instructions provided in the user manual to ensure proper functionality and performance.
7. If you have any questions or concerns regarding the operation of this device, contact the manufacturer for further assistance.

INTRODUCTION

- This device is a wireless controller adapter for PS1&PS2 consoles. compatible with the best-selling Bluetooth controllers on the market.
- Based on the open source project [darthcloud] (<https://github.com/darthcloud/BlueRetro>), Built using the popular ESP32 Chip.
- Support PS3 / PS4 / PS5 / Xbox One S / Xbox Series XIS / Wii / Wii U Pro / Switch Pro / Switch Joycon / 8bitdo / Retro-Bit Wireless Controller, etc.



RetroScaler Github



Darthcloud Github

Features

1. Only suitable for PS1&PS2 consoles.
2. Support Firmware updates and rumble.
3. Almost zero latency, the PS4 & PS5 controller less than 6ms of latency using Blueretro.
4. Compatible Xbox One S / Xbox Series XIS / Wii / Wii U Pro / Switch Pro/ Switch Jovcon / 8bitdo / Retro-Bit PS3 / PS4 / PS5 Wireless Controller.
5. Supports Keyboard/trackball/mouse console accessories.
6. Button mapping can be configured via GoogleChrome Plugin.

Instructions

Button Usage

- **“BOOT” Button:**
 - Under < 3 sec hold: Disconnect all Bluetooth devices.
 - 3sec~6sec hold: Start the new pairing.
 - 10 sec holds: Restore to default configurations and clear BT pairing keys.



“SYNC” LED Status

- **“RED LED” FULLY ON:** Bluetooth failure
- **“RED LED” Pulsing:** Searching wireless controller
- **“BLUE LED” FULLY ON:** Bluetooth connected successfully

Pairing with PS4 or P\$5 controller

First time pairing

1. Boot up BlueRetro and make sure adapter is in inquiry mode (“SYNC” RED LED pulsing).
2. Hold down “Share” button (PS4) or “Create” button (PS5) and “PS” button of the controller simultaneously until the light bar flash blink.



Press and hold “Share” or “Create” & “PS” button
(Bluetooth Inquiry Mode Enable)

Successful pairing

1. For BlueRetro adapter: The “SYNC” BLUE LED fully on.
2. For PS4 or PS5 controller: The light bar fully on.



Reconnect

Simply hold down the “PS” button on the PS4 or PS5 controller until the Bluetooth function is activated. Then it will reconnect to BlueRetro adapter automatically.

Pairing with Xbox One S, Series X|S controller

- **As of v1.2.1 the minimum required Xbox FW for controller are:**
Xbox One S: 4.8.1923.0 Adaptive: 4.5.1680.0 Series X'S: 5.9.2709.0 Update via the Xbox accessories Win 10 app. (<https://apps.microsoft.com/store/detail/9NBLGGH30XJ3?hl=en-us&g|=US>)
- **For details of the update procedure, please visit on:**
(<https://support.xbox.com/en-US/help/hardware-network/controller/update-xbox-wireless-controller>)

First time pairing

1. Boot up BlueRetro and make sure adapter is in inquiry mode ("SYNC" RED LED pulsing).
2. Power on controller via "Xbox" button and then hold the black "SYNC" button until the LED of "Xbox" button flash rapidly.



Successful pairing

1. For BlueRetro adapter: The "SYNC" BLUE LED fully on.
2. For Xbox One S, Series X S & Adaptive controller: The LED of "Xbox" button comes to constant.



Reconnect

Simply hold down the "Xbox" button on the controller to power on. Then it will reconnect to BlueRetro adapter automatically.

Pairing with Wii & WiU Pro controller

First pairing

1. Boot up BlueRetro and make sure adapter is in inquiry mode ("SYNC" RED LED pulsing).
2. Press red "SYNC" button, then the four lights flash.
3. LEDs will stop blinking on controller once pairing is complete.



Successful pairing

1. For BlueRetro adapter:
The "SYNC" BLUE LED fully on.
2. For Wii & WiiU Pro controller:
The first light fully on.



Reconnect

Simply press power button on the controller. Then it will reconnect to BlueRetro adapter automatically.

Pairing with Switch Pro & Joycon

First time pairing

1. Boot up BlueRetro and make sure adapter is in inquiry mode ("SYNC" RED LED pulsing).
2. Press and hold the "SYNC" button on the top of the gamepad until the indicator on the underside of the pad starts flashing back and forth.



Successful pairing

1. For BlueRetro adapter: The "SYNC" BLUE LED fully on.
2. For Switch Pro & Joycon controller: The first light on the left fully on.



Reconnect

Simply press any button on the controller. Then it will reconnect to BlueRetro adapter automatically.

Pairing with 8bitdo controller

- As of v1.2.1 the minimum required 8bitdo FW for controller are:

- SF30: v1.37
- Gbros adapter: v2.25
- Update via the 8bitdo Win10 app.

(<https://apps.microsoft.com/store/detail/9NBLGGH30XJ3?hl=en-us&q=US>)

- For details of the update procedure, please visit on:

(<https://support.8bitdo.com/firmware-updater.html>)

First time pairing

1. Boot up BlueRetro and make sure adapter is in inquiry mode ("SYNC" RED LED pulsing).
2. Power up Sbitdo controller in Xinput mode, then LED 1 will start to blink. ("Start + X" button or set switch to X)
(Only supported in Xinput mode!).



Set switch to X
(Turn on Xinput mode)

3. Press and hold "SYNC" button until LED starts flashing back and forth.



Successful pairing

1. For BlueRetro adapter: The “SYNC” BLUE LED fully on.
2. For 8bitdo controller: The first light on the left fully on.



Reconnect

Simply press start button on the controller. Then it will reconnect to BlueRetro adapter automatically.

Pairing with Retro-Bit controller

First time pairing

1. Boot up BlueRetro and make sure adapter is in inquiry mode (“SYNC” RED LED pulsing).
2. Power up Retro-Bit controller in Xinput mode (“Home + X”), then LED starts flashing back and forth. (Only supported in Xinput mode!).



Successful pairing

1. **For BlueRetro adapter:** The “SYNC” BLUE LED fully on.
2. **For Retro-Bit controller:** The LED fully on.



Reconnect

 
Simply press “Home” button on the controller. Then it will reconnect to BlueRetro adapter automatically.

Pairing with PS3 controller


NOTE: Only official PS3 controllers are supported.

First time pairing Windows


1. Download and install Sixaxis Pair Tool. (<https://sixaxispairtool.en.lo4d.com/windows>)



2. Connect the BlueRetro adapter to PC or phone to get BD ADDR (MAC address. (Make sure your converter is plugged into the console or connected to the USB cable for power)
 - Open (<https://blueretro.io/jin>) a chrome web browser. (Windows PC)
 - Navigate to "BlueRetro System Manager".
 - Click on "Connect BlueRetro".
(Make sure your PC had built-in Bluetooth compatibility or a Bluetooth dongle plugged in.)
 - The BD ADDR of your BlueRetro will be displayed when connected.
Write it down.

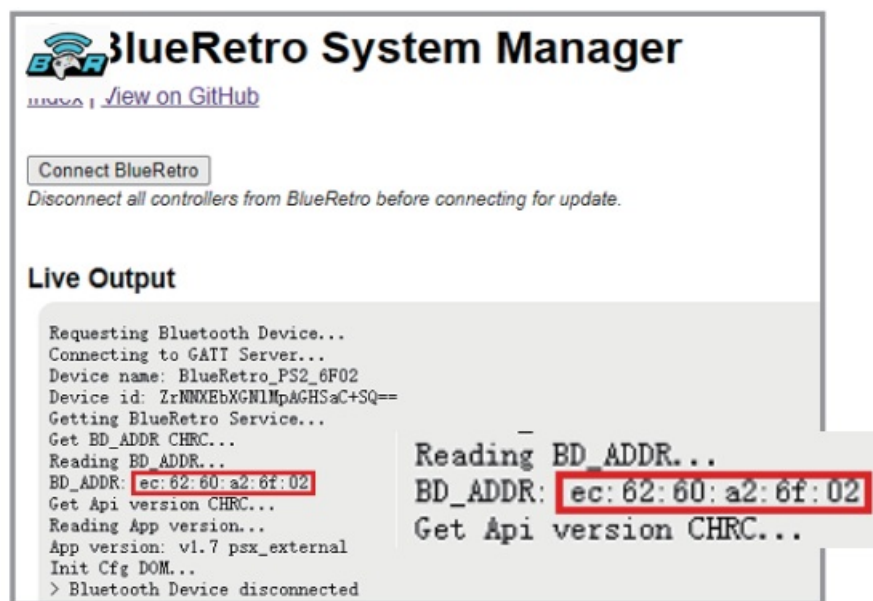

3. Use USB cable to connect your PS3 controller to PC.
4. Launch Sixaxis pair tool and enter BD ADDR into the Change Master.
5. Click update. (Once the update is complete the controller can be disconnected from the PC.)

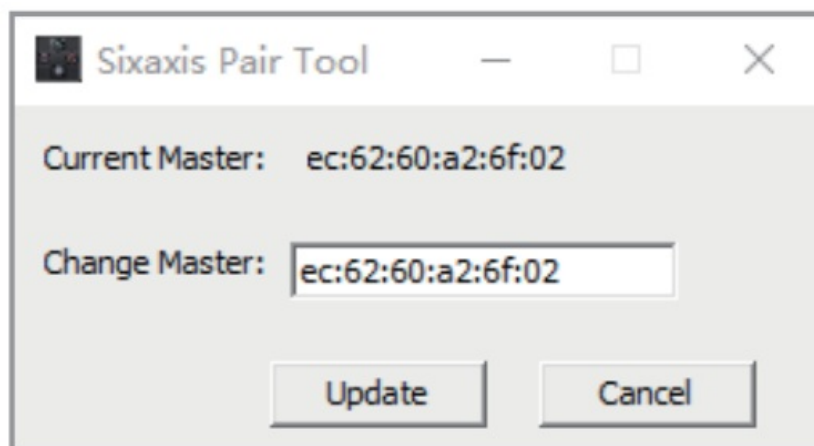

6. Insert your BlueRetro adapter into your console to boot up BlueRetro. (Make sure adapter is in inquiry mode ("SYNC" LED pulsing)).
7. Hold down the "PS" button on your controller until the four red lights on top of the DualShock 3 flashing.



Press and hold the "PS" button
(Bluetooth Inquiry Mode Enable)

Successful pairing

1. **For BlueRetro adapter:** The "SYNC" BLUE LED fully on.
2. **For PS3 controller:** The four red lights on top of the DualShock 3 fully on.




Reconnect

Simply hold down the "PS" button on the PS3 controller until the Bluetooth function is activated. Then it will reconnect to BlueRetro adapter automatically.


Firmware update

1. Download the NodeMCU-PyFlasher and Blueretro firmware. (<https://github.com/RetroScaler/Blueretro-PS>)
2. Execute NodeMCU-PyFlasher.exe

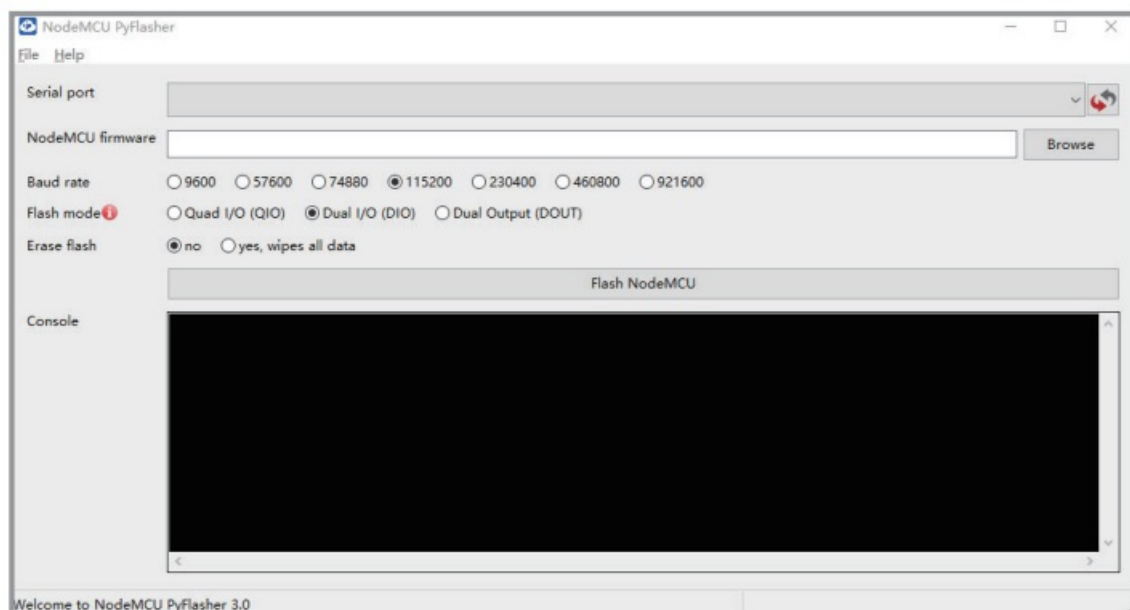


3. Connect Blueretro to computer using the type cable. Select proper COM port for your computer. And choose

the latest BlueRetro firmware.

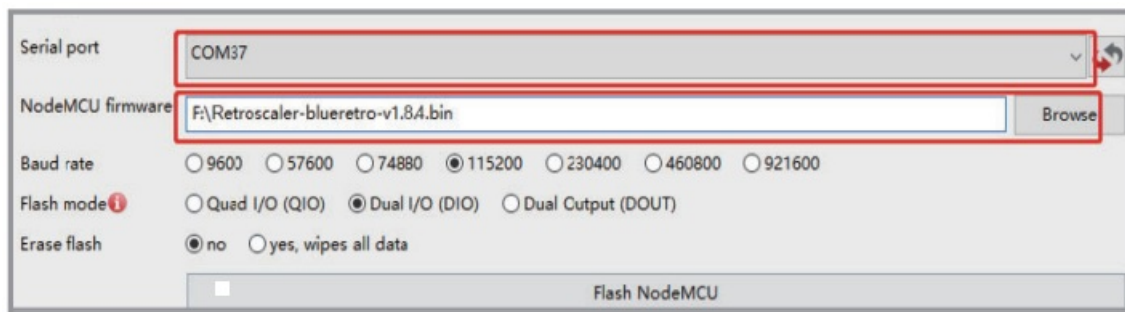

4. Click Flash NodeMCU. Then wait for the burning to complete.

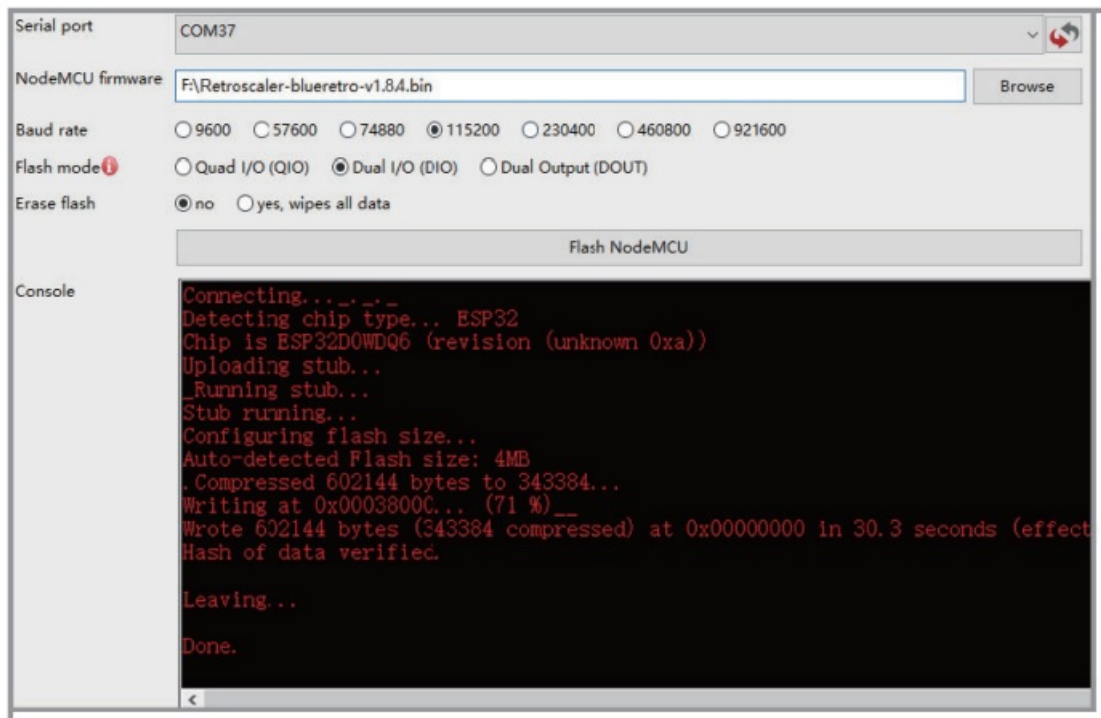

Buttons mapping reference

PSX/PS2	WiiU Pro	Switch Joycon	Switch Pro	Saturn
Left stick left	Left stick left	Stick left (H)	Left stick left	Stick left
Left stick right	Left stick right	Stick right (H)	Left stick right	Stick right
Left stick down	Left stick down	Stick down (H)	Left stick down	Stick down
Left stick up	Left stick up	Stick up (H)	Left stick up	Stick up
Right stick left	Right stick left		Right stick left	
Right stick right	Right stick right		Right stick right	
Right stick down	Right stick down		Right stick down	
Right stick up	Right stick up		Right stick up	
D-pad left	D-pad left		D-pad left	D-pad left
D-pad right	D-pad right		D-pad right	D-pad right
D-pad down	D-pad down		D-pad down	D-pad down
D-pad up	D-pad up		D-pad up	D-pad up
Square	Y	B or D-pad up	Y	X
Circle	A	X or D-pad down	A	B
X	B	A or D-pad left	B	A
Triangle	X	Y or D-pad right	X	Y
Start	"+"	"+" or Capture	"+"	Start
Select	"-"	"-" or Home	"-"	
Analog	Home		Home	
L2	ZL	SL	ZL	Analog L
L1	L	L or R	L	Z
L3	Left stick click	Stick click	Left stick click	Analog R
R2	ZR	SR	ZR	C
R1	R	ZL or ZR	R	Digital R
R3	Right stick click		Right stick click	

PSX/PS2	PS3	PS4/PS5	Xbox One S/XS	8bitdo/
Left stick left	Left stick left	Left stick left	Left stick left	Left trackpad left
Left stick right	Left stick right	Left stick right	Left stick right	Left trackpad right
Left stick down	Left stick down	Left stick down	Left stick down	Left trackpad down
Left stick up	Left stick up	Left stick up	Left stick up	Left trackpad up
Right stick left	Right stick left	Right stick left	Right stick left	Right trackpad left
Right stick right	Right stick right	Right stick right	Right stick right	Right trackpad right
Right stick down	Right stick down	Right stick down	Right stick down	Right trackpad down
Right stick up	Right stick up	Right stick up	Right stick up	Right trackpad up
D-pad left	D-pad left	D-pad left	D-pad left	Stick left
D-pad right	D-pad right	D-pad right	D-pad right	Stick right
D-pad down	D-pad down	D-pad down	D-pad down	Stick down
D-pad up	D-pad up	D-pad up	D-pad up	Stick up
Square	Square	Square	X	X
Circle	Circle	Circle	B	B
X	X	X	A	A
Triangle	Triangle	Triangle	Y	Y
Start	Start	OPTIONS	Menu	Start
Select	Select	SHARE	View	Back
Analog	PS	PS	Xbox	Home
L2	L2	L2	LT	Analog LT
L1	L1	L1	LB	LB
L3	L3	L3	Left stick click	LG
R2	R2	R2	RB	Analog RT
R1	R1	R1		RB
R3	R3	R3	Right stick click	RG

ONLINE CONTACT


- RetroScaler
- @RetroScaler
- www.retroscaler.com

- barry@retroscaler.com

FCC Warning

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.
- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 1. This device may not cause harmful interference
 2. this device must accept any interference received, including interference that may cause undesired operation.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
- This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

Documents / Resources

	<p>BlueRetro RSBL Wireless Controller Adapter [pdf] Owner's Manual 2BCXM-RSBL, 2BCXMRSBL, RSBL, RSBL Wireless Controller Adapter, Wireless Controller Adapter, Controller Adapter, Adapter</p>
---	--