

BLUESTORK
4 IN 1 USB C
Hub Adapter



Bluestork 4 IN 1 USB C Hub Adapter User Manual

[Home](#) » [BLUESTORK](#) » Bluestork 4 IN 1 USB C Hub Adapter User Manual 

Contents

- 1 Bluestork 4 IN 1 USB C Hub Adapter User Manual
- 2 TECHNICAL FEATURES
- 3 CONNECTIVITY
- 4 USE
- 5 PRECAUTIONS
- 6 WARNING ON BATTERY-OPERATED PRODUCTS
- 7 WARRANTY
- 8 ENVIRONMENT
- 9 PACKAGING
- 10 References



Bluestork 4 IN 1 USB C Hub Adapter User Manual




Bluestork's HUB FIRST has a unique design, a small size, and a weight of just 40 g thanks to its ABS structure. The HUB FIRST is easy to install and requires no driver, just plug it in and it's ready to use.

TECHNICAL FEATURES

| | |
|-----------------|-----------------------------|
| Package content | 1 x HUB FIRST |
| Material | ABS |
| Net weight | 40 g |
| Dimensions | 107 x 34.5 x 11 mm |
| Transfer speed | 5Gbps |
| Intensity | 0.5A (USB-A) 0.9A(USB-C) |

CONNECTIVITY

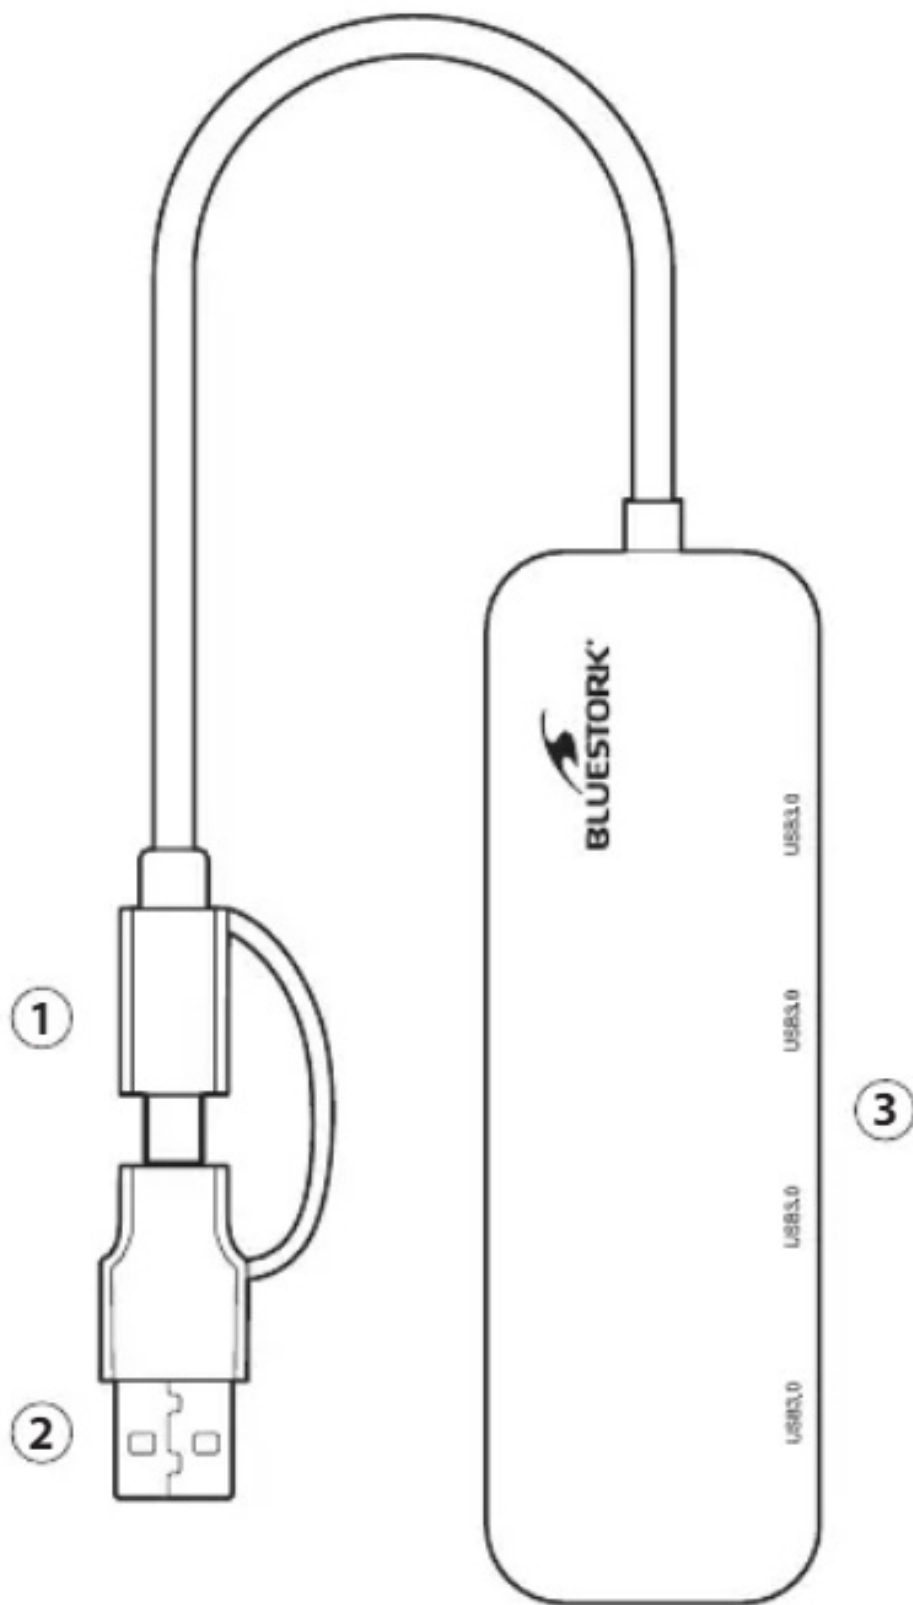

1. 1 x USB-C
2. 1 x USB-A adapter
3. 4 x USB-A 3.0

USE

- Plug the USB-C cable into your computer's USB-C port.
- If your computer doesn't have a USB-C port, use the
- USB-C/USB-A adapter and plug it into your computer.

- Then connect a USB flash drive, mouse, keyboard, or other equipment to one of the USB sockets.

BLUESTORK HUB FIRST 2024

Made in China

Distributed by :

AXS – 1 Rue de la Garenne ZI Le Vert Galant

95310 SAINT OUEN L'AUMONE – France

EU DECLARATION OF CONFORMITY

AXS declares under its sole responsibility as a manufacturer that the product below :

HUB FIRST BLUESTORK EAN 3760162050950

Conforms to the following essential requirements and standards.

| EU Directives | Conforms to |
|--|--|
| 2014/53/EU – RED | EN 62368-1:2014+A11:2017 EN 62479:2010 EN 55032:2015+A11:2020 EN 55035:2017+A11:2020 EN 301 489-1 V2.2.3 EN 301 489-17 V3.2.4 |
| 2011/65/UE - RoHS with amendement 2015/863/UE | EN 300 328 V2.2.2 EN IEC 63000: 2018 |

Signed at SAINT OUEN L'AUMONE, the 21 March 2024



By Stefan Riesser

President AXS

PRECAUTIONS

Product safety instructions. Keep these safety instructions for future reference:

- Read the safety and operating instructions carefully before operating this product.
- Observe all warnings on the product and in the operating instructions.
- Do not place this product in direct sunlight or near a heat source.
- Do not use it in a damp environment.
- Do not drop or subject this product to shock/vibration. Violent shocks may damage components. Before cleaning an electrical product, switch it and unplug it.
- Use a soft cloth to clean the product. Do not use liquid cleaners or glass cleaners.
- If an unusual odor or heat escapes from this product, or if you notice any other sign of malfunction, immediately disconnect the product from the power supply and contact your dealer for inspection or repair.
- If a foreign substance or water enters the product, immediately turn the power and unplug the power cord. Then remove the foreign substance or water, if possible.

Do not disassemble or attempt to repair this product yourself:

- Opening or removing the product exposes you to various risks, including electric shock.
- Repairs should be carried out by a specialist. Send the product to your nearest service center.
- Do not attempt to disassemble or modify this product. Unauthorized modifications will void the warranty.

If your product uses rechargeable batteries, please read the specific precautions below:

WARNING ON BATTERY-OPERATED PRODUCTS

When handling batteries

- Always keep batteries out of the reach of children. If swallowed, contact a doctor immediately.
- Do not charge batteries intended for single use (alkaline or saline).
- Charging non-rechargeable batteries causes gas and/or heat emissions which may lead to explosions and/or res.
- Do not dispose of batteries in a re. Do not touch the same poles of batteries.
- Do not deform, crush, or puncture batteries. Do not disassemble batteries.
- Do not dispose of batteries with ordinary household waste.
- You may create a short circuit if the positive and negative terminals come into contact.
- This can damage the battery and cause leakage.

WARNING ON RECHARGEABLE BATTERY PRODUCTS

If the battery does not work properly within the warranty period, please send the product to your nearest service center to have the battery replaced. Do not attempt to replace the battery yourself.

WARNING: There is a danger of explosion if the battery is incorrectly replaced. Only replace the battery with the same or equivalent type recommended by the manufacturer.

Batteries must not be exposed to excessive heat such as sunshine, or similar sources. Dispose of used batteries according to the manufacturer's instructions.

WARNING: Use of non-original batteries may present a risk of, explosion, leakage, or other hazards. Improperly handled batteries may explode. Never disassemble them. Do not allow children to handle batteries.

WARRANTY

- AXS offers a 2-year warranty from the date of purchase on new, unused products with undeniable material or manufacturing defects.
- The warranty does not apply to the following cases: improper use, electrical or mechanical damage resulting from improper use, damage resulting from force majeure, bad weather or natural disasters, or improper repairs carried out by non-approved workshops.
- The warranty is only valid in the country of purchase.
- Batteries and normal wear and tear are not covered by the warranty.
- The warranty is only valid on the presentation of the invoice. Shipment of a defective product for warranty repair is at the customer's risk.
- The warranty is reserved for the end-user purchaser. AXS reserves the right to repair or exchange the defective product at its sole discretion.
- Any legal provisions in force in your country that go beyond the cases set out here shall prevail over the present provisions.

ENVIRONMENT

THE PRODUCT



The crossed-out garbage can on the product (including accessories) means that it belongs to the electrical and electronic equipment family. To promote the recycling and recovery of Waste Electrical and Electronic Equipment (WEEE) and protect the environment, European regulation 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE) requires that used household appliances are not disposed of in the normal municipal waste stream. Used appliances must be collected separately to optimize the recovery and recycling rate of the materials of which they are made, and to reduce the impact on the environment and human health. The crossed-out wheeled

garbage can symbol is displayed on all products to remind consumers of their separate collection obligations. Consumers should contact their local authority or retailer to out how to dispose of their appliances.

BATTERIES

Batteries must be disposed of at designated collection points by local regulations. This device contains batteries covered by the European Directive 2006/66/EC, which must not be disposed of with household waste. Find out about the regulations in force in your area concerning the separate collection of batteries. Correct disposal of batteries helps protect the environment and your health.

PACKAGING



AXS is committed to respecting the environment. Our packaging is to be placed in the recycling garbage can and does not contain any single-use plastic. To facilitate the recycling of packaging, please respect the sorting rules in place locally for this type of waste.

For more information, visit us at: www.bluestork.eu

Or contact us: support@axs-group.com

Download PDF: [Bluestork 4 IN 1 USB C Hub Adapter User Manual](#)

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.