



BlumSafe 2.0 New Keypad User Guide


[Home](#) » [BLUMSAFE](#) » BlumSafe 2.0 New Keypad User Guide 

Contents

- [1 BlumSafe 2.0 New Keypad](#)
- [2 Product Usage Instructions](#)
- [3 Operation](#)
- [4 Programming](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



BlumSafe 2.0 New Keypad

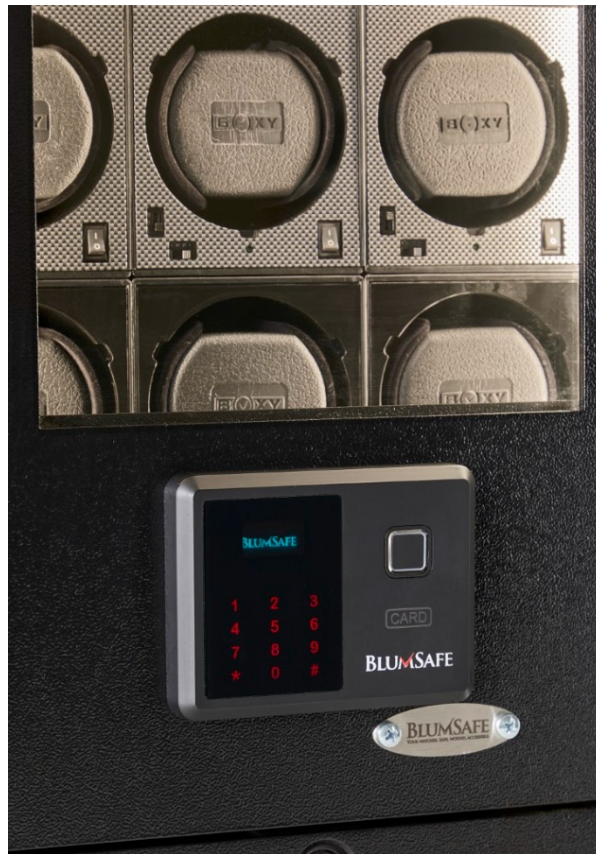

Product Specifications

- Model: BlumSafe New Keypad 2.0
- Supported Entry Methods: Code, Fingerprint, RFID Card
- Fingerprint Capacity: 30 pieces
- RFID Card Capacity: 100 pieces

Product Usage Instructions

Closing the Door

To close the door, press `#` on the keypad.

Programming

Follow the steps below to set up fingerprints and IC cards:

1. Press any touch key to wake up the display.
2. Press the red coding switch without listening to the sound.
3. The system will prompt you with different sounds and LCD messages for various actions like setting fingerprint, adding IC card, changing password, deleting fingerprints, deleting IC cards, and resetting password.
4. Follow the prompts on the display to complete the desired action.

Low Voltage Prompt

When opening the door, a Low Battery meter low voltage prompt will appear if the battery is running low.

Mute Settings

To mute the system, press `**`. To turn on sound, press `**`.

FAQ

- **Q: How do I add a new fingerprint or IC card?**

A: To add a new fingerprint or IC card, follow the programming instructions provided in the manual.

- **Q: What should I do if I forget my password?**

A: You can reset the password to the factory default (1234) by following the reset procedure in the manual.

- **Q: How can I check the battery level?**

A: The system will display a low voltage prompt when the battery is running low.\

BlumSafe New Keypad 2.0 (Code, Fingerprint, RFID Card) Operating Instructions

Operation

User password: 1234; **Manager password:** No; The fingerprint library is empty, and any fingerprint can open the electronic lock. But after registering the fingerprint, only the registered fingerprint can be used to open the electronic lock.

1. **Fingerprint:** open the door

Place your finger on the fingerprint window without moving. If the fingerprint comparison is successful, the unlock icon will be displayed and the lock will be opened. If the fingerprint comparison fails, the unlock failure icon is displayed.

2. **Password:** open the door

Press any touch key, wake up the display, enter the password, and then press the “#” key. If the password is correct, the unlock icon is displayed and the lock is opened. If the password is incorrect, the unlock failure icon is displayed.

3. **IC card:** open the door

Press any touch button to wake up the display, swipe the card, and if the IC card comparison is successful, the unlock icon will be displayed and the lock will be opened. If the IC card is incorrect, display the unlock failure icon

Close the door: press ‘#’ to close the door.

Programming

How to set fingerprint and IC card

- **Fingerprint group:** 30pcs
- **IC cards:** 100pcs

Press any touch key to wake up the display, and then press the red coding switch without listening to the sound as follows:

1. The buzzer sounds once and prompts as follows. You can release your hand and register and change your password according to the display:

| | | |
|---|----------------|-----------------|
| Sounds | LCD | |
| Short press to set and release with one sound | 1-EnrollFinger | Set fingerprint |
| | 2-EnrollCard | Add IC card |
| | 3-ChangeCode | Change password |

2. The buzzer sounds twice and prompts as follows. You can release it and delete and reset the password according to the display:

| | | |
|--|------------------|------------------------|
| Sounds | LCD | |
| Long press and hold the setting button until it rings 2 times to release | 1-DelFingerprint | Delete all fingerprint |
| | 2-DelCard | Delete all LC card |

| | | |
|--|-------------|----------------------------------|
| | 3-ResetCode | Restore factory password 1234 |
|--|-------------|----------------------------------|

3. The buzzer will sound for a long time and prompt as follows, which can be released. The system will set the factory value, clear all fingerprints, clear the IC, and reset the password to 1234
4. Low voltage prompt
- When opening the door, a “Low Battery” meter low voltage prompt will appear.

- Mute settings: press
- Turn on sound: press **

Videos for Programming:



Documents / Resources



[BlumSafe 2.0 New Keypad \[pdf\] User Guide](#)
2.0 New Keypad, 2.0, New Keypad, Keypad

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.