

BLUSTREAM
MX44KVM 4x4
USB KVM
Matrix



BLUSTREAM MX44KVM 4x4 USB KVM Matrix User Manual

[Home](#) » [BLUSTREAM](#) » BLUSTREAM MX44KVM 4x4 USB KVM Matrix User Manual 

Contents

- 1 BLUSTREAM MX44KVM 4x4 USB KVM Matrix
- 2 Product Usage Instructions
- 3 Introduction
- 4 FEATURES
- 5 Front And Rear Panel Description
- 6 Infrared (IR) Control
- 7 Web-GUI Control
- 8 Remote Control Description
- 9 IR Commands
- 10 Specifications
- 11 Package Contents
- 12 Maintenance
- 13 RS-232 Configuration and Telnet Commands
- 14 Web-GUI Firmware Update
- 15 Example Schematic
- 16 Certifications
- 17 Documents / Resources
 - 17.1 References



BLUSTREAM MX44KVM 4x4 USB KVM Matrix



Specifications:

- **Product Name:** MX44KVM 4x4 USB KVM Matrix
- **USB Version:** USB 3.0
- **USB Data Transfer Rate:** Up to 5Gbps
- **Supported Devices:** 4x USB peripheral devices shared between 4x host devices
- **Advanced Features:** Cascading of multiple units, GPIO functionality, web browser interface module, RS-232 integration

Product Usage Instructions

Connecting the MX44KVM:

1. Connect the USB Host port to the USB port of the Host device.
2. Connect USB devices or peripherals to the USB Device ports.
3. Use the TCP/IP RJ45 connector for network control and configuration.
4. Connect the IR Control Input for IR control using a Blustream IR receiver.
5. Utilize the RS-232 Ports for direct control or pass-through to other devices.
6. Connect GPIO devices for input/output control of third-party products.
7. Plug in the 24V/1.25A DC power input.

Operating the MX44KVM:

The MX44KVM allows you to share 4 USB peripheral devices among 4 host devices. Use the front panel SELECT buttons to choose the desired device for each host. You can also control and configure the Matrix using the in-built web browser interface or via RS-232 integration.

Additional Functions:

- Cascade multiple MX44KVM units for expanded functionality.
- Utilize GPIO functionality for controlling third-party products.
- Access advanced control features through the web browser interface.

Frequently Asked Questions (FAQ):

- **Q: Can I cascade multiple MX44KVM units?**

A: Yes, you can cascade multiple MX44KVM units for expanded functionality.

- **Q: How do I update the firmware of the MX44KVM?**

A: Firmware updates can be done through the web-GUI interface. Refer to the user manual for detailed instructions.

Thank you for purchasing this product.

For optimum performance and safety, please read these instructions carefully before connecting, operating, or adjusting this product. Please keep this manual for future reference.

Surge Protection Device Recommended

This product contains sensitive electrical components that may be damaged by electrical spikes, surges, electric shocks, lightning strikes, etc. Use of surge protection systems is highly recommended to protect and extend the life of your equipment.

Introduction

Our 4x4 USB 3.0 KVM Matrix offers unprecedented performance and value for the custom and commercial installation market. The MX44KVM is a USB 3.0 Matrix package allowing 4x USB peripheral devices to be shared between 4x host devices, supporting plug-and-play capabilities, and USB data transfer rates up to 5Gbps.


The Matrix provides advanced features including cascading of multiple MX44KVM units, GPIO functionality for 3rd party product triggers, an in-built web browser interface module for control and configuration of the Matrix, along with RS-232 for seamless control integration. An RS-232 loop-through connection allows for the MX44KVM to be intrinsically linked to any Blustream video matrix product for the addition of KVM support to our video-only switching products.

FEATURES

- 4x4 USB KVM Matrix allowing up to 4x USB peripheral devices to be shared between 4x host devices
- USB 3.0 connectivity with data transfer rates up to 5Gbps
- Backward compatible with USB 2.0 and 1.1
- Plug-and-play with no drivers, downloads, or software required
- USB-A connections provide 5V 900mA
- Features 4x configurable GPIO ports for integration with 3rd party products
- Features RS-232 loop-through for repetition of incoming RS-232 commands to additional Blustream products
- Assignable inputs and outputs allowing automated switching when used with existing Blustream Matrix products
- Web interface module for control and configuration of the MX44KVM
- Control via front panel, IR, RS-232, and TCP/IP


Front And Rear Panel Description

Front Panel Description

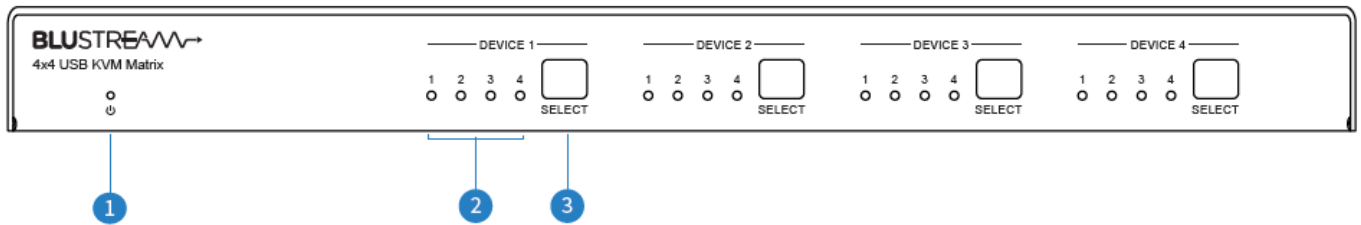

1. Power LED – Illuminates blue when the device is powered on. Illuminates red when the device is powered off
2. Selection LED – The illuminated number corresponds to the USB Host the selected USB Device is routed to
3. Select Button – Press to cycle the selected USB Device through each USB Host output

Rear Panel Description

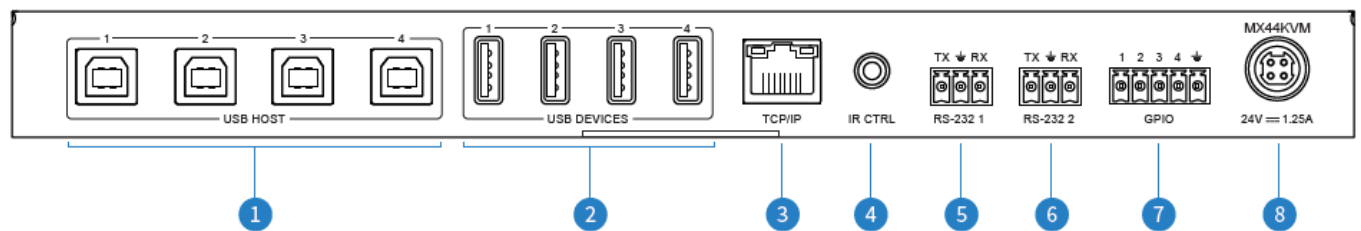

1. USB Host – Connects to the USB port of the Host device
2. USB Device – Connects to USB Devices or peripherals
3. TCP/IP – RJ45 connector for TCP/IP and Web-GUI control of the Matrix
4. IR Control Input – 3.5mm stereo connector to connect to Blustream IR receiver for IR control of the Matrix
5. RS-232 Port 1 – 3-pin Phoenix connector for direct RS-232 control of the Matrix
6. RS-232 Port 2 – 3-pin Phoenix connector for RS-232 pass-through to cascaded MX44KVM or a Blustream HDMI/ HDBaseT Matrix
7. GPIO Port – 5-pin Phoenix connector for input sense/output relay/contact closure control of 3rd party devices
8. 24V/1.25A DC power input 4-pin DIN connector

Infrared (IR) Control


The Blustream range of matrix products includes Matrix control via IR.

IMPORTANT:


Blustream Infrared products are all 5V and NOT compatible with alternative manufacturers' Infrared solutions. When using third-party 12V IR control solutions please use the Blustream IRCAB cable for IR conversion.

IR Receiver – IRR

Blustream 5V IR receiver to receive an IR signal for control of the matrix.

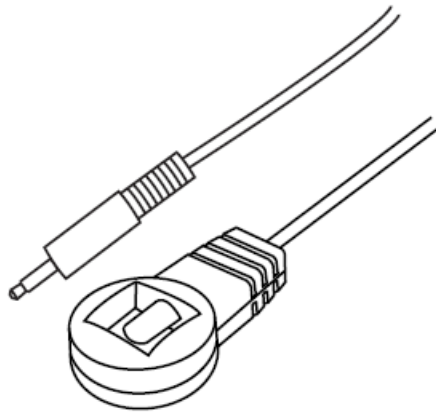


IR Receiver – Stereo 3.5mm

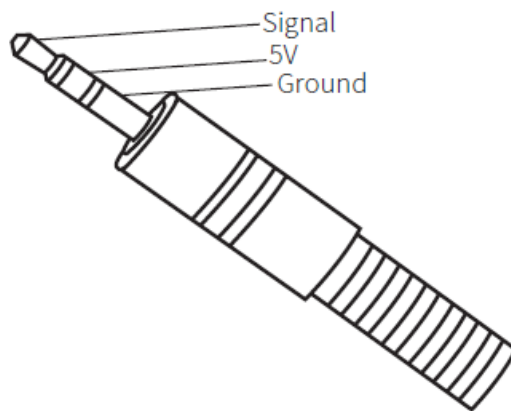

IR Control Cable – IRCAB (supplied)

Blustream IR Control cable 3.5mm Mono to 3.5mm Stereo for linking third-party control solutions to Blustream products. Compatible with 12V IR 3-party products.

Please Note: cable is directional as indicated.

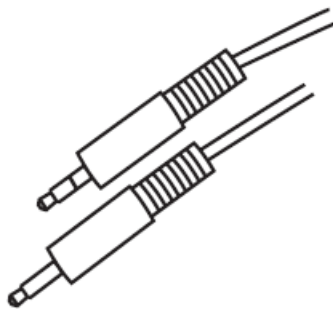

Web-GUI Control

The following pages outline the operation of the Matrix Web-GUI. Connect the TCP/IP RJ45 socket to the local network in order to access the product's Web-GUI, or connect a PC directly to the TCP/IP port for initial configuration.

By default the Matrix is set to DHCP, however, if a DHCP server (eg: network router) is not installed the matrix IP address will revert to the below details:

- Default IP Address: 192.168.0.200
- Default Username: bloodstream
- Default Password: 1234

The Web-GUI supports multiple users along with multiple user permissions as follows:

- Guest Account – This account does not require a user to log in. The Guest account can only change sources for each zone. Guest access can be changed by the Admin, limiting inputs or outputs as necessary.
- User Accounts – 7x User accounts can be utilized, each with individual login details. User accounts can be assigned permissions to specific areas and functions. A User must log in to make use of these functions.
- Admin Account – This account allows full access to all functions of the Matrix, as well as assigning users with individual permissions.


Login Page

The Login Page allows a User or Admin to log in and access additional functionality. This page displays the current firmware version of both the Matrix and Web-GUI.

The screenshot shows the BLUSTREAM Web-GUI Login Page. The header has two tabs: 'Control' and 'Login'. The 'Login' tab is selected. The main area features the BLUSTREAM logo, followed by 'Username' and 'Password' labels above two text input fields. Both fields contain the placeholder text 'Please Enter'. Below the fields is a 'Login' button. At the bottom of the page, the following text is displayed: 'MX44KVM', 'GUI: V0.0a', and 'Firmware: V0.0a'.


Guest Control Page

- The Guest Control Page allows a guest to change inputs for each zone without needing to be logged into the matrix. Simply select the square that corresponds with the input and zone needing to be changed.
- There is also a power button on the lower right corner to turn the Matrix on or off.

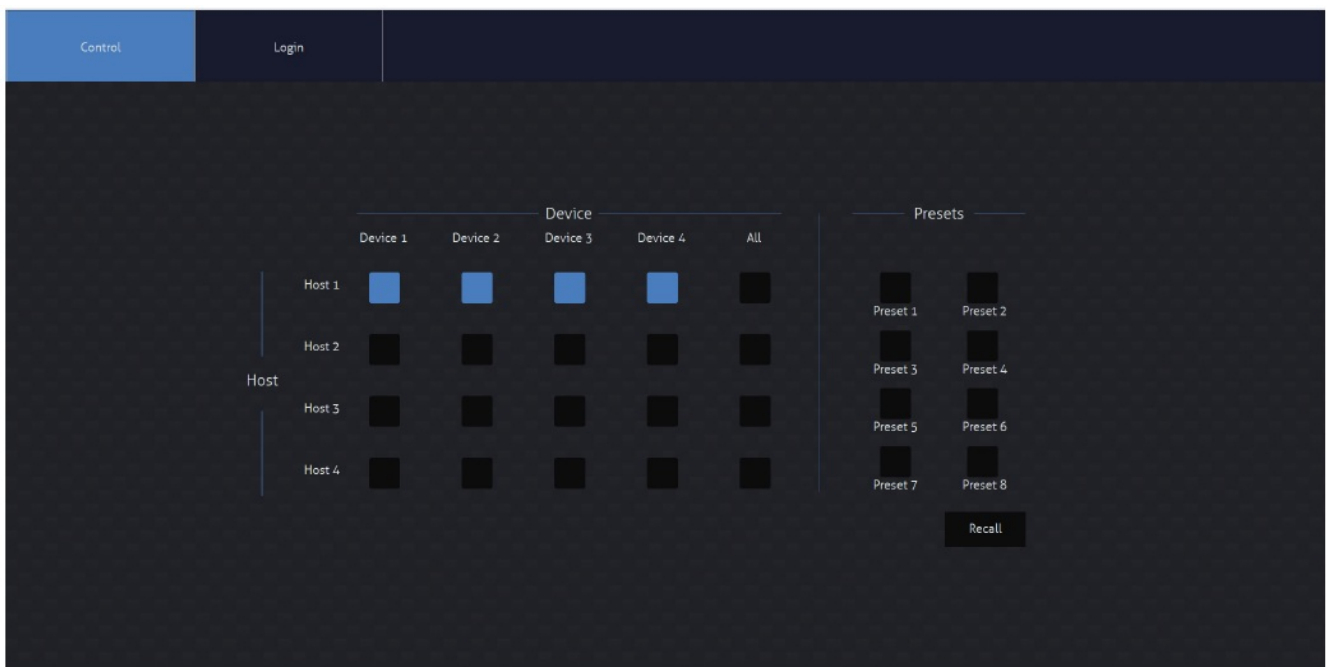

User Control Page

- A logged-in User, or Admin Control page allows a User to change inputs and/or presets for each Host. To change inputs, select the square that corresponds with the input and zone output needing to be changed. On the right, a preset can be recalled, or save the current input/output configuration into a specified preset slot.
- There is also a power button on the lower right corner to turn the Matrix on or off.

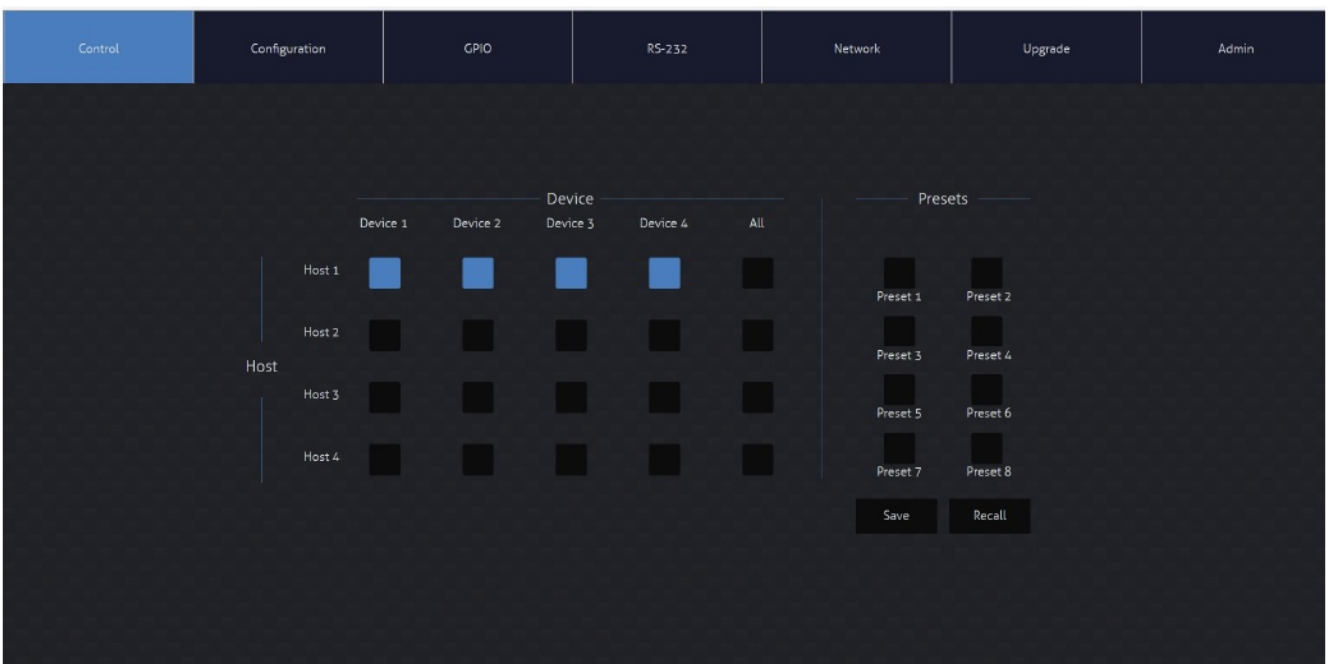

Host Configuration Page

The Host Configuration page allows each of the USB Host inputs to be assigned an ID associated with an input into a Blustream AV Matrix, as well as a name. This is particularly useful when being used in conjunction with a Blustream AV Matrix. The MX44KVM can be cascaded (for control via RS-232) with multiple MX44KVM units, with each USB Host assigned a specific ID number to switch with the associated inputs on additional MX44KVM, or when linked to AV Matrix products.

Control	Configuration	GPIO	RS-232	Network	Upgrade	Admin
---------	---------------	------	--------	---------	---------	-------

Host

Device

Presets Naming

Host 1

NameAssigned as Input of AV Matrix

Host 101

Host 2

NameAssigned as Input of AV Matrix

Host 202

Host 3

NameAssigned as Input of AV Matrix

Host 303

Host 4

NameAssigned as Input of AV Matrix

Host 404

Device Configuration Page

The Device Configuration page allows each of the USB Device peripherals to be assigned an ID associated with an input into a Blustream AV Matrix, as well as a name. This is particularly useful when being used in conjunction with a Blustream AV Matrix. The MX44KVM can be cascaded with multiple MX44KVM units, with each USB Device assigned a specific ID number to switch with the associated output on additional MX44KVM, or AV Matrix products.

Control	Configuration	GPIO	RS-232	Network	Upgrade	Admin
---------	---------------	------	--------	---------	---------	-------

Host

Device

Presets Naming

Device 1

NameAssigned as Output of AV Matrix

Device 101

Device 2

NameAssigned as Output of AV Matrix

Device 202

Device 3

NameAssigned as Output of AV Matrix

Device 303


Device 4

NameAssigned as Output of AV Matrix

Device 404

Preset Configuration Page

The Preset Configuration Page allows a User to change the naming of the presets on the Control Page of the Matrix for simpler navigation by additional users.

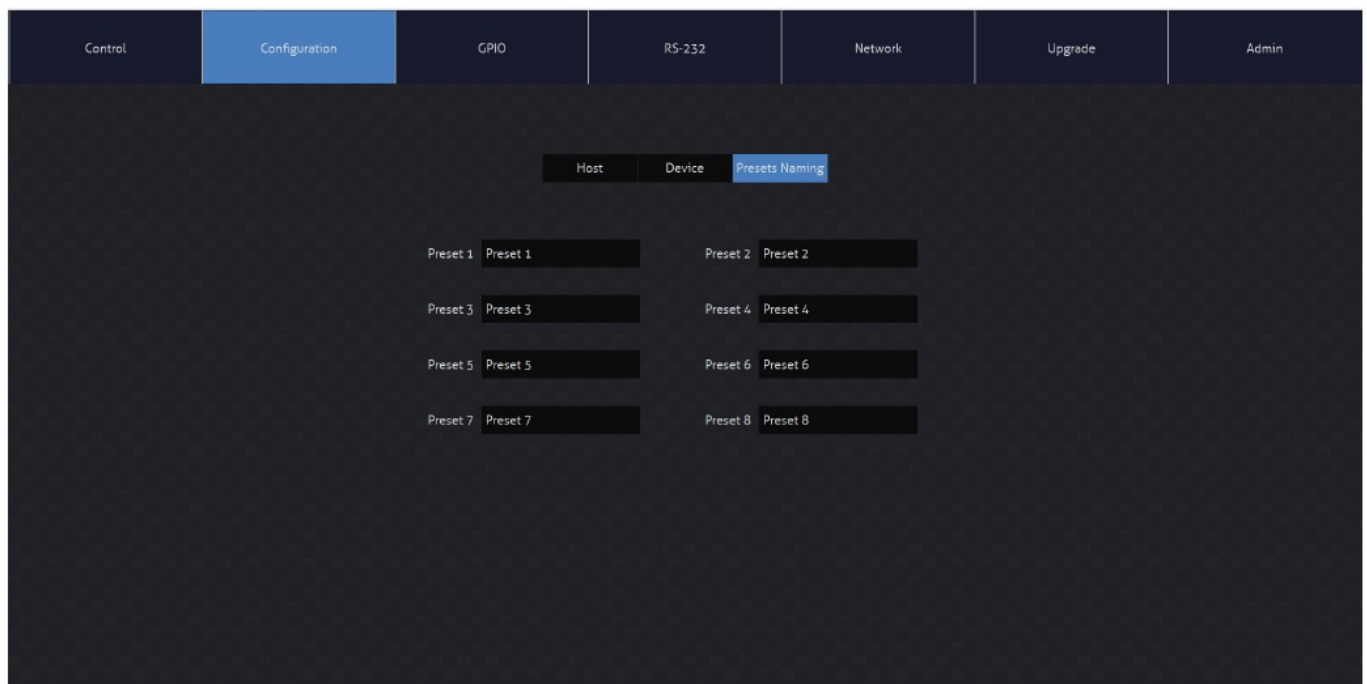

• GPIO Page

- The GPIO (General Purpose Input / Output) page allows for the configuration of the functionality of the GPIO ports on the MX44KVM.
- Each of the MX44KVM's four I/O ports can be configured as either Inputs or Outputs and have the following independent options available:


• Input Triggers:

- The MX44KVM can be triggered to carry out an action when a voltage is sensed from one of the GPIO's set to Input. Trigger Conditions: Low Level (0-6V), or High Level (6-12V)
- Trigger Event: Activate Standby, or Activate Auto-Switching

• Output Triggers:

The MX44KVM's outputs can be used as either a contact closure or to output a 5V or 12V trigger for a set period.

- Output type: 5V 50mA, 12V 50mA, or contact closure
- Output duration: 1min to 60mins, or always on

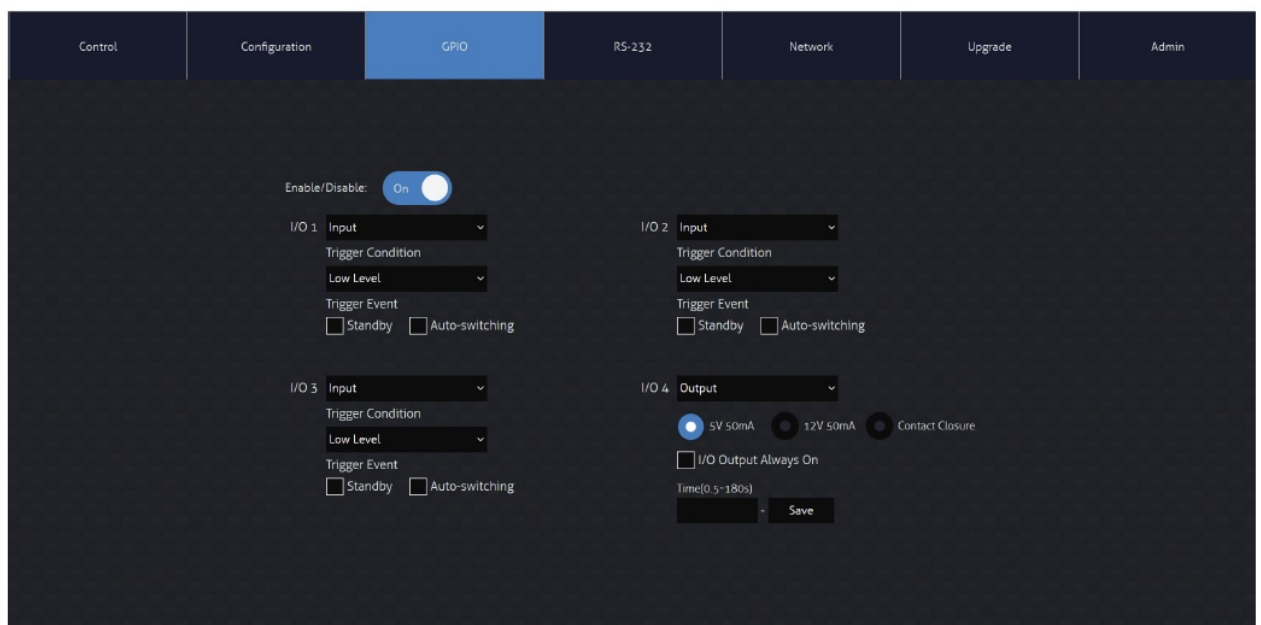

RS-232 Page

- The RS-232 page allows for commands to be sent out of the local RS-232 port on the Matrix.
- Baud rate and terminator commands, as well as Hex or ASCII, can be selected.
- Sending an RS-232 command out via the Matrix can be useful in assisting with debugging and fault-finding an RS-232 device connected to the Matrix.

The screenshot shows the RS-232 configuration page. At the top, there is a navigation bar with tabs: Control, Configuration, GPIO, RS-232 (selected), Network, Upgrade, and Admin. Below the navigation bar, there are two tabs: HEX and ASCII (selected). The main configuration area includes a Baud Rate dropdown menu set to 57600, a Command Ending dropdown menu set to NULL, and a Command text input field. Below these fields are two buttons: Send and Cancel. At the bottom, there is a blue information icon followed by the text: "This page allows you to configure RS232 port on the matrix and send out commands to the connected device."

Network Page


The Network page allows the ability to specify the TCP/IP network port settings. Static IP or DHCP, can be selected as well as specification of a fixed IP Address, Subnet Mask, and Gateway. The Telnet port can also be adjusted for individual control systems as required.

The screenshot shows the Network configuration page. At the top, there is a navigation bar with tabs: Control, Configuration, GPIO, RS-232, Network (selected), Upgrade, and Admin. Below the navigation bar, the MAC Address is displayed as 34-D0-B8-23-00-13. There are two tabs: DHCP (selected) and Static IP. The DHCP configuration section includes fields for IP Address (192.168.0.200), Subnet Mask (255.255.255.0), and Gateway. Below these fields is a Save button. The Telnet configuration section includes a Telnet Access toggle switch (On), a Telnet Port field (23), and a Port 8000 toggle switch (On).

Upgrade Page

The Upgrade page shows the current firmware versions on the Matrix, this includes the Web-GUI version and

MCU firmware versions. The Matrix (MCU) firmware can be uploaded from this page as required. Please refer to the instructions within the files on the Blustream website before undertaking a firmware update. To update the firmware of the unit, download the relevant file from the Blustream website, browse for the firmware update file on your PC, and press Submit. Do not unplug or turn off the updating PC during the update process.

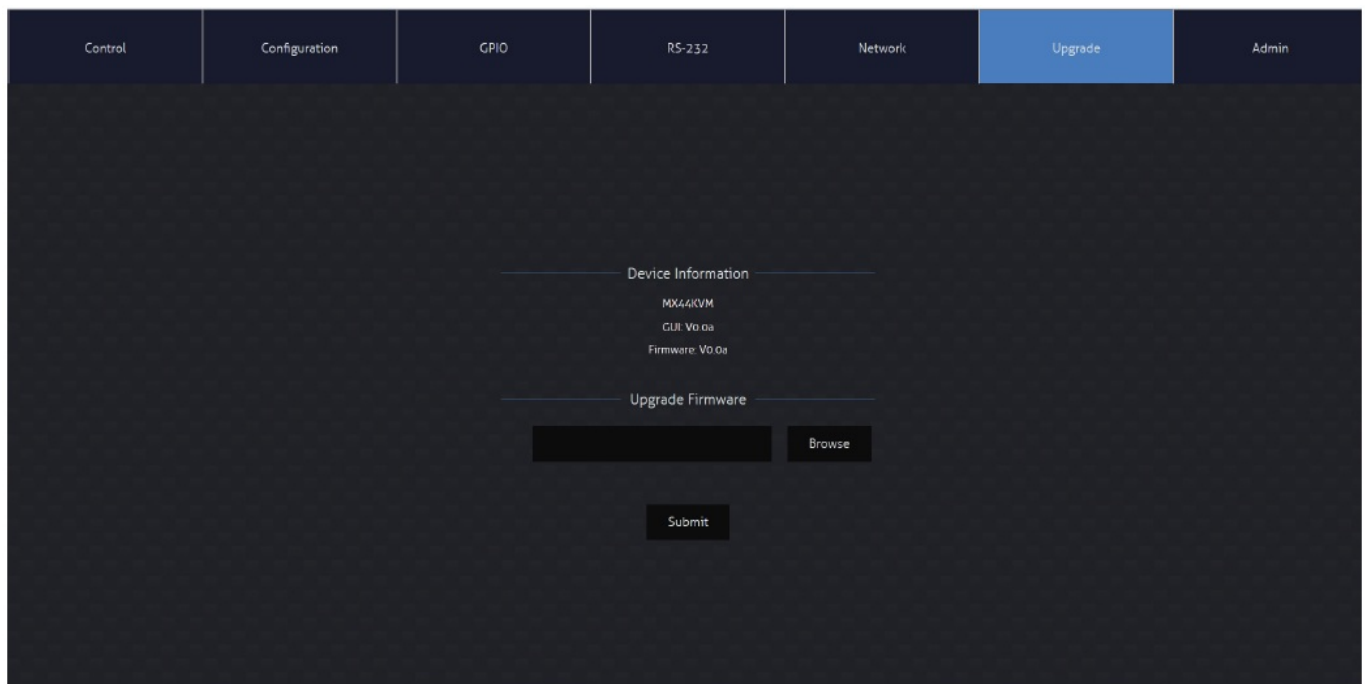

The screenshot shows the 'Upgrade' tab selected in the top navigation bar. The main content area is dark-themed and contains the following elements:

- Device Information:** A section with three lines of text: 'MX44/CVM', 'GUI: V0.0a', and 'Firmware: V0.0a'.
- Upgrade Firmware:** A section containing a large text input field, a 'Browse' button to its right, and a 'Submit' button centered below the input field.

Admin Page

- The Admin page allows the Admin user to configure up to 8x Users including a Guest user. Users have permission to update their own passwords as required, but can also be carried from this page by the Admin as required.
- The Admin, or Users who have been given Admin permissions, are able to allocate permissions to Users. These permissions include allowing or disabling access to individual pages within the Web-GUI, as well as access to each input or output of the Matrix.
- The Admin page also allows for the front panel buttons, and front panel IR control to be locked or unlocked. The Matrix can be factory defaulted by clicking the Reset button. This resets the matrix back to factory settings – this includes naming, users, permissions, and network settings.


Control	Configuration	GPIO	RS-232	Network	Upgrade	Admin
Admin Credentials Name: blustream Current Password: New Password: Confirm New Password:						
User Authorisation Guest: ☒ On User 1: ☐ Off User 2: ☐ Off User 3: ☐ Off User 4: ☐ Off User 5: ☐ Off User 6: ☐ Off User 7: ☐ Off						
User ☒ Guest ☐ User 1 ☐ User 2 ☐ User 3 ☐ User 4 ☐ User 5 ☐ User 6 ☐ User 7						
Host / Device Permissions Host: ☐ 1 ☐ 2 ☐ 3 ☐ 4 Device: ☐ 1 ☐ 2 ☐ 3 ☐ 4 Preset: ☐						
Main Features Front Panel Lock: ☐ Off Reset Reset all settings of the unit including network and general settings.						
Save						

Remote Control Description

OUTPUT AND INPUT SELECTION

Please note the MX44KVM supports the Blustream REM16 (16×16) remote control.

- **A.** Select the zone Output you wish to change the source on (Numbers 1-16 correspond to the zone outputs 1-16, or All correspond with all outputs). Pressing the PTP button will mirror all inputs and outputs (Example – Input 1 to output 1, input 2 to output 2, etc).
- **B.** Select the source Input you wish to change the selected zone to (numbers 1-8 correspond to the source inputs 1-8m or All corresponds with all inputs)

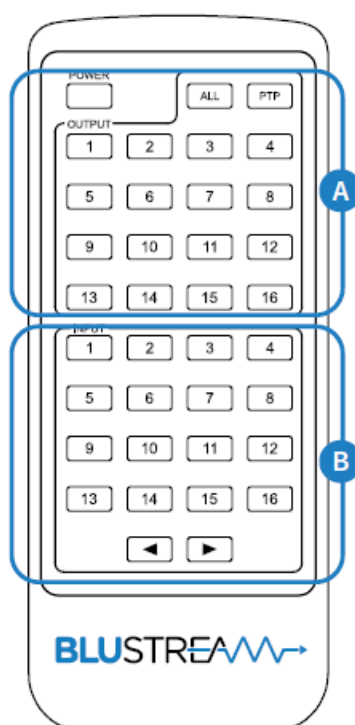

IR Commands

- NEC Customer Code = 1898
- Advanced matrix features are not available via IR commands

COMMAN D	NEC	HEX
POWER TOGGL E	0x14	0000 006e 0000 002c 0160 00b0 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0 016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0016 0016 0016 0016 0016 0042 0016 0016 0016 0016 0016 0042 0 016 0016 0016 0042 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0016 0016 0016 0042 0016 0016 0016 0042 0016 0042 0016 0042 0016 061a
OUTPUT 1	0x09	0000 006e 0000 002c 0160 00b0 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0 016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0016 0016 0016 0016 0016 0042 0016 0042 0016 0016 0016 0016 0 016 0042 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0016 0016 0016 0042 0016 0042 0016 0042 0016 0042 0016 061a
OUTPUT 2	0x1d	0000 006e 0000 002c 0160 00b0 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0 016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0016 0016 0016 0016 0016 0042 0016 0042 0016 0016 0016 0042 0 016 0042 0016 0042 0016 0016 0016 0016 0016 0016 0016 0016 0016 0042 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0016 0042 0016 061a
OUTPUT 3	0x1f	0000 006e 0000 002c 0160 00b0 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0 016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0016 0016 0016 0016 0016 0042 0016 0042 0016 0042 0016 0042 0 016 0042 0016 0042 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0016 0042 0016 061a
OUTPUT 4	0x0d	0000 006e 0000 002c 0160 00b0 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0 016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0016 0016 0016 0016 0016 0042 0016 0042 0016 0016 0016 0042 0 016 0042 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0042 0016 0016 0016 0016 0016 0042 0016 0042 0016 0042 0016 0042 0016 061a
OUTPUT 5	0x19	0000 006e 0000 002c 0160 00b0 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0 016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0016 0016 0016 0016 0016 0042 0016 0042 0016 0016 0016 0016 0 016 0042 0016 0042 0016 0016 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0016 0016 0016 0016 0016 0042 0016 0042 0016 0042 0016 061a

[illegible]

[illegible]

[illegible]

INPUT 1 6	0x1a	0000 006e 0000 002c 0160 00b0 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0 016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0016 0016 0016 0016 0016 0042 0016 0016 0016 0042 0016 0016 0 016 0042 0016 0042 0016 0016 0016 0016 0016 0016 0016 0016 0042 0016 0016 0016 0042 0016 0016 0016 0016 0016 0042 0016 0042 0016 0042 0016 061a
NEXT >	0x01	0000 006e 0000 002c 0160 00b0 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0 016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0016 0016 0016 0016 0016 0042 0016 0042 0016 0016 0016 0016 0 016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0016 0042 0016 0042 0016 0042 0016 0042 0016 0042 0016 061a
PREVIO US <	0x52	0000 006e 0000 002c 0160 00b0 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0 016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0016 0042 0016 0042 0016 0016 0016 0016 0016 0042 0016 0016 0016 0042 0016 0016 0 016 0016 0016 0042 0016 0016 0016 0042 0016 0016 0016 0042 0016 0016 0016 0042 0016 0042 0016 0016 0016 0042 0016 0016 0016 0042 0016 061a

Specifications

- **USB Device Connectors:** 4 x USB Type A, female
- **USB Host Connectors:** 4 x USB Type B, female
- **RS-232 Serial Port:** 2 x 3-pin Phoenix connector
- **IR Input Ports:** 1 x 3.5mm stereo jack
- **TCP/IP Control Port:** 1 x RJ45, female
- **GPIO Port:** 1 x 5-pin Phoenix connector
- **Casing Dimensions (W x H x D):** 273mm x 168mm x 25mm
- **Shipping Weight:** 0.8kg (TBC)
- **Operating Temperature:** 32°F to 104°F (-5°C to +55°C)
- **Storage Temperature:** -4°F to 140°F (-25°C to +70°C)
- **Power Supply:** 24V/1.25A DC, 4-pin DIN connector

NOTE: Specifications are subject to change without notice. Weights and dimensions are approximate.

Package Contents

- 1 x MX44KVM
- 1 x Mounting kit
- 1 x USB-A to USB-B cable
- 1 x IRR receiver
- 1 x IRCAB control cable – 3.5mm-3.5mm cable
- 2 x 3-pin Phoenix connector
- 1 x 5-pin Phoenix connector

- 1 x 24V/1.25A DC power supply
- 1 x Quick Reference Guide

Maintenance

Clean this unit with a soft, dry cloth. Never use alcohol, paint thinner, or benzene to clean this unit.

RS-232 Configuration and Telnet Commands

The Blustream matrix can be controlled via serial and TCP/IP. RS-232 port 1 is used for configuration and control of the product. RS-232 port 2 is used for cascading multiple MX44KVM units together to create a larger I/O KVM matrix system, or when used in conjunction with a Bustream AV matrix to add KVM switching to a larger system.

The default RS-232 communication settings for both ports are:

- **Baud rate:** 57600
- **Data bit:** 8
- **Stop bit:** 1
- **Parity bit:** none

The following pages list all available serial commands for RS-232 port 1:

Commonly used Serial Commands

Several commands are commonly used for control and testing:

- STATUS Status will give feedback on the matrix such as zones on, type of connection, etc...
- PON Power on
- POFF Power off
- USBOUTxxFRyy (xx is the Host/zone out, and yy is the USB Device input)
 - **Example:-** USBOUT01FR04 (This would switch host 1 to device 4)

Common Mistakes

- Carriage return – Some programs do not require the carriage return, whereas others will not work unless included after/within the string. In the case of some Terminal software, the token <CR> is used to execute a carriage return. Depending on the program you are using this token may be different. Some other examples that other control systems deploy include \r or 0D (in hex)
- Spaces – Blustream commands do not require space between commands unless specified. There may be some programs that require spacing in order to work.
 - How the string should look is as follows USBOUT01FR02
 - How the string may look if spaces are required: USBOUT{Space}01{Space}FR{Space}02
- Baud rate or other serial protocol settings are not correct

COMMAND	ACTION	COMMAND	ACTION	
---------	--------	---------	--------	--

? / HELP	Print System Status And Port Status		
STATUS	Print All Input Status	RS232BAUD z	Set RS232 Baud Rate To xx z = 1 – 2400, 2 – 4800, 3 – 9600, 4 – 19200, 5 – 38400, 6 – 57600 (Default), 7 – 115200
INSTA	Print All Output Status		
OUTSTA	Print All GPIO Input Status		
GPOUTSTATUS	Print All GPIO Output Status		
GPINSTATUS	Print All Preset Configurations	RS232ONOUT z: a: b	Command a Whose Baud Rate Is z On Output RS232- 2 z = a ASCII, h HEX a = 1 – 2400, 2 – 4800, 3 – 9600, 4 – 19200, 5 – 38400, 6 – 57600 (Default), 7 – 115200 b = RS231 Command
PRESENT STATUS	Print All Cascade Status		
CASCADESTATUS	Set System Power On Or Off	NET DHCP ON/OFF	Set Auto IP(DHCP) On Or Off
PON/OFF	Set System Key Control On Or Off	NET IP xxx.xxx.xxx.xxx	Set IP Address
KEY ON/OFF	Reset System To Default Setting		
RESET	Set System Front Panel IR Control On Or Off (Type 'Yes' To Confirm, Or Send Other Command To Discard)	NET GW xx.x.xxx.xxx.x	Set Gateway Address
USBOUT xx FR yy	Set USB HOST From DEVICE : yy xx = [01-04]: USB HOST 1 – 4 yy = [01-04]: USB DEVICE 1 – 4 yy = 00: All USB DEVICE	NET SM xx.x.xxx.xxx.x	Set Subnet Mask Address
PRESET pp SAVE	Save Current Output Connections To Preset pp Config pp = [01-09]: Presets 1 – 9	NET RB	Set Network Reboot And Apply New Config!!!
PRESET pp CLR	Delete Preset pp Config pp = [00-09] : 00: All Presets, pp = [01-09]: Preset 1 – 9	NET TN xxxx	Set Telnet Port
PRESET pp APPLY	Apply Preset pp Config To Output Connection pp = [01-09]: Presets 1 – 9	NET TN ON/OFF	Set Telnet Port On Or Off
		NET TN8000 ON/OFF	Set Telnet Port 8000 On Or Off

GPIOENABLE x	Set GPIO Enable/Disable x = [0-1] 0: Disable, 1: Enable	
AUTO-SWITCHING ON/OFF	Set Auto-Switching Mode On/Off	
HOST xx F R yy	Sets Correspondence Between Input And Input Cascades xx = [01-04]: USB HOST 1 – 4 yy = [01-16]: AV INPUT 1 – 16	
DEVICE xx OUT yy	Sets The Correspondence Of The Output Cascades xx = [01-04]: USB DEVICE 1 – 4 yy = [01-16]: AV OUTPUT 1 – 16	
OUTPIN xx MODE yy TIME zzzz	Set GPIOOUTpin: xx Mode: yy yy Time: zzzz xx = 00: GPIO All xx = [01-04]: GPIO 1 – 4 yy = 00: Close Output Mode yy = [01-03]: Mode 1 – 3 (1: output 5v 50mA, 2: output 12v 50mA, 3: Contact Closure) zzzz = [0005-1800]: time 0.5s – 180s	
INPIN xx MODE yy SN z	Set GPIOINpin: xx Mode: yy Signal: z xx = 00: GPIO All xx = [01-04]: GPIO 1 – 4 yy = [00-02]: Mode 0 – 2 (0-Turn Off All Detection Modes, 1-Turn On Standby Mode Detection, 2-Turn On Auto-Switching Mode Detection) z = [0-1]: SN 0 – 1 (Trigger Level: 0 – Low Level Valid, 1 – High Level Valid)	

Web-GUI Firmware Update

- The Web-GUI of the Matrix is used to configure and control the product through a web portal. The Matrix can

be accessed on any internet-connected device including tablets, smart phones, and laptops that are on the same network.

- As the Web-GUI is used to update the main matrix firmware it is important to ensure that the Web-GUI firmware is the latest version PRIOR to updating the main MCU firmware. Please check the current firmware version against the version available to download from the Blustream website.

To update the Web-GUI firmware:


1. Login to the Web-GUI update menu:

- **Default IP Address:** 192.168.0.200:100
- **Default Username:** bloodstream **Default Password:** 1234

Please note:

The IP address may differ if the default network settings have been updated. If this is the case, please replace the following with the product's current IP address: XXX.XXX.XXX.XXX:100

2. When the Web-GUI menu interface has been accessed, expand the 'Administration' file in the menu tree by clicking the small '+' icon next to the file.
3. Select 'Upload Firmware':

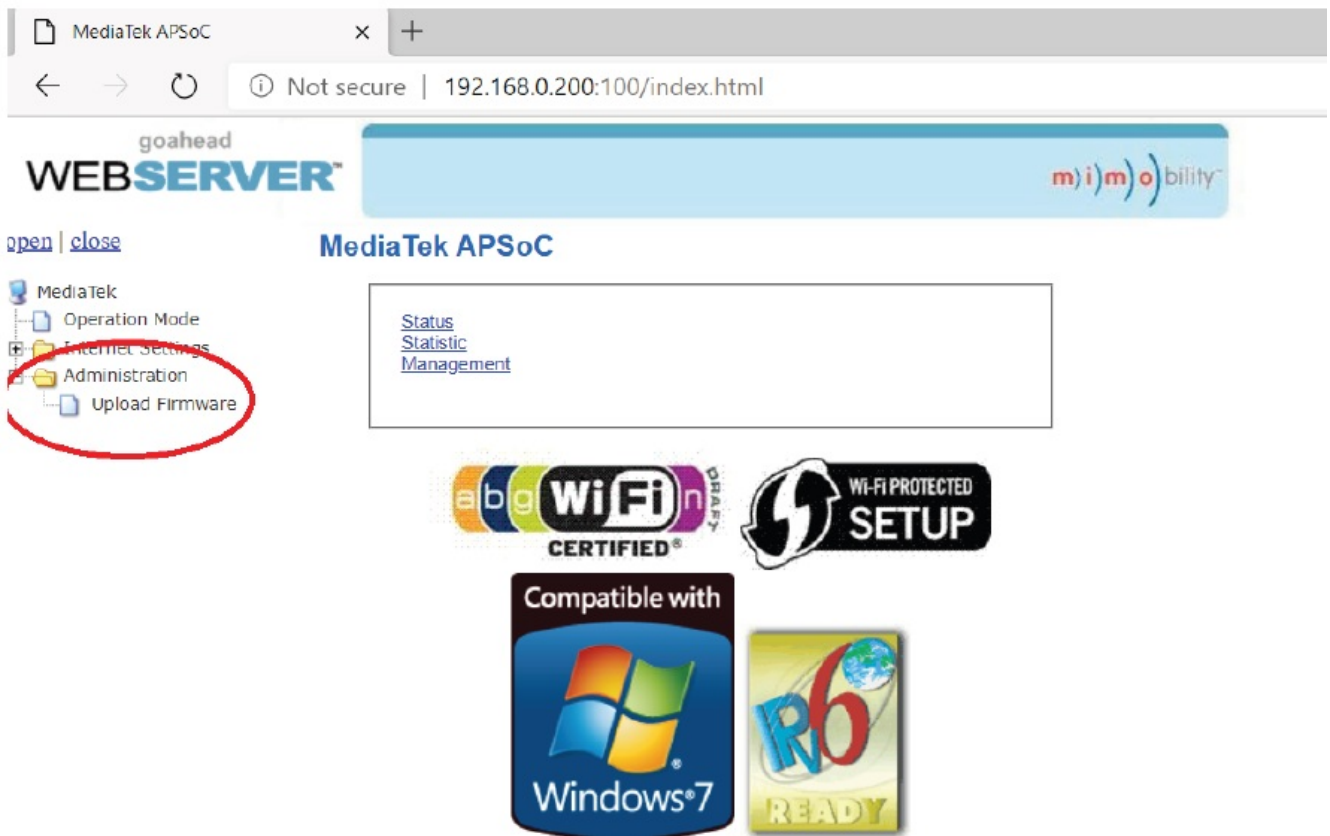


4. Click 'Choose File' and select the Web-GUI/MediaTek firmware file downloaded in advance from the Blustream website. This will be a .bin file:




5. Press 'Apply' to begin the firmware update process.

The update process will take up to 1 minute to complete. Do not refresh or navigate away from this page, or disconnect the matrix from the PC until the update process has been completed.

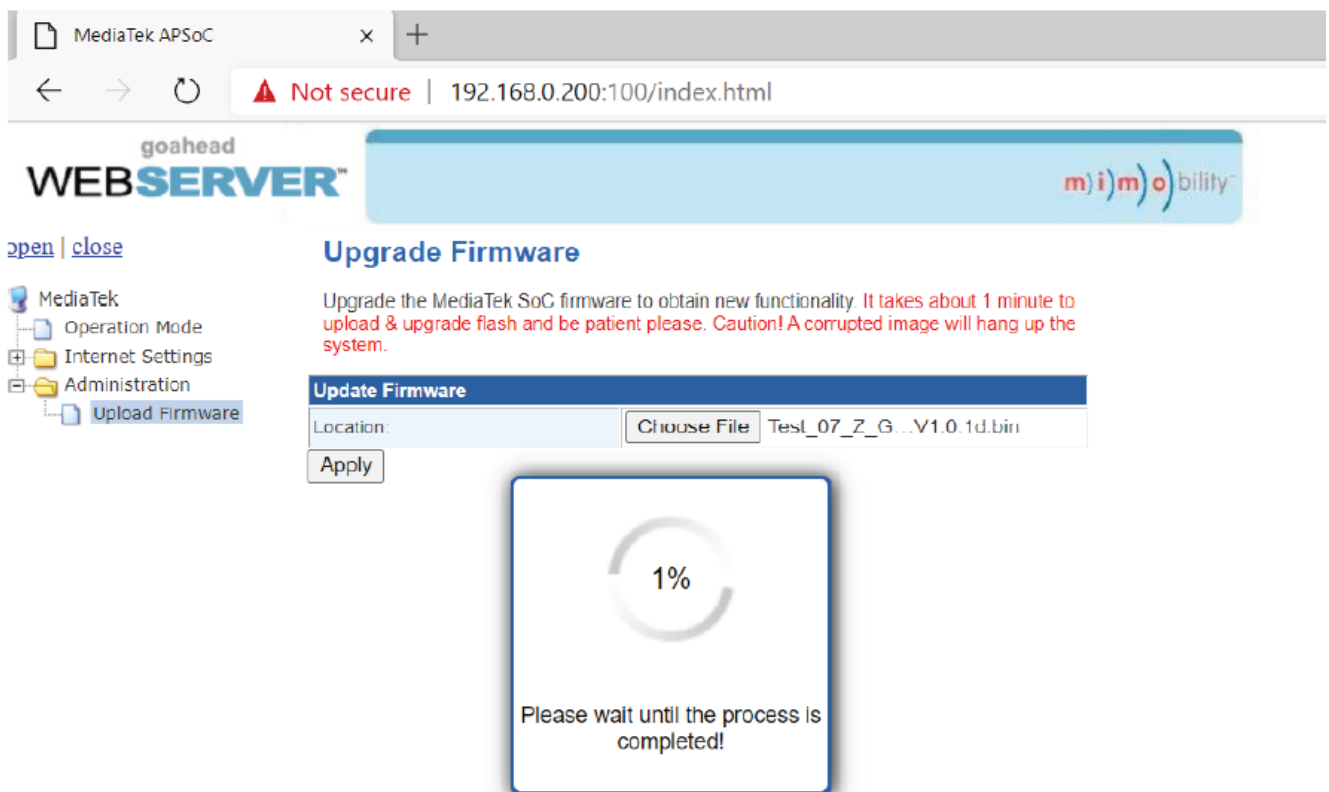

Example Schematic

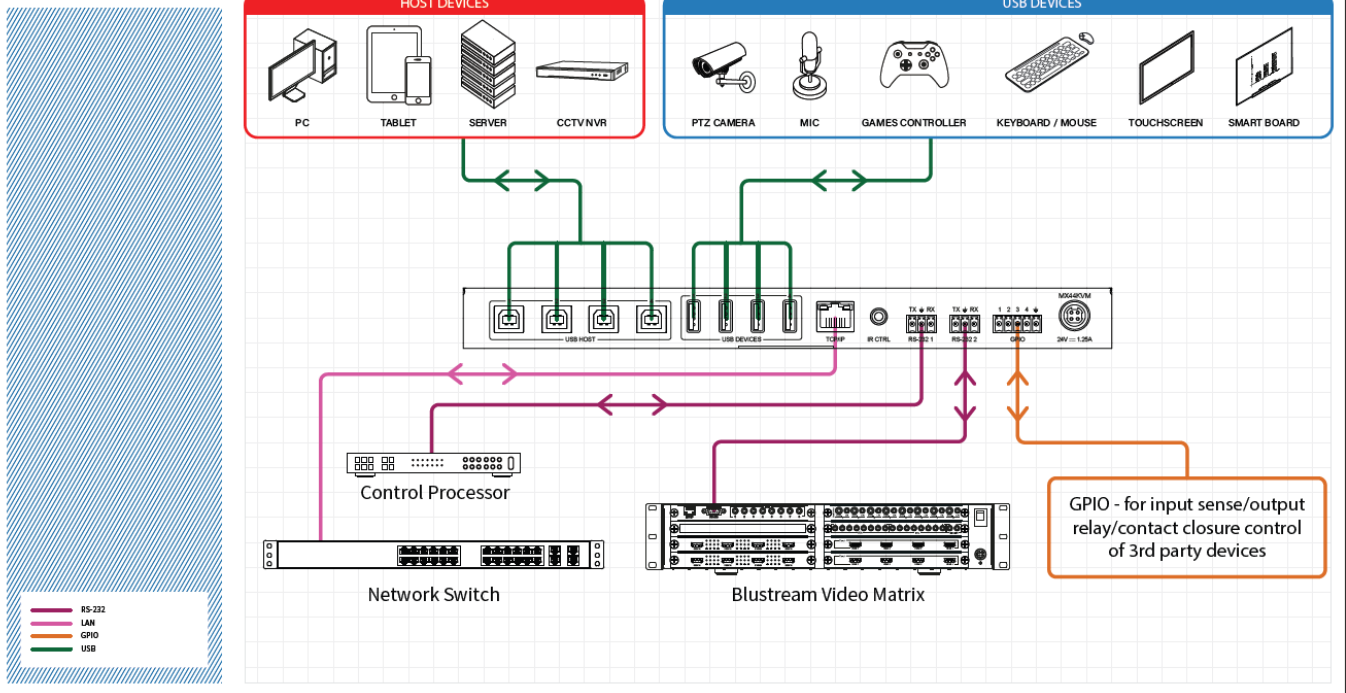

Certifications

FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CANADA, INDUSTRY CANADA (IC) NOTICES

This Class B digital apparatus complies with Canadian ICES-003.

Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

CORRECT DISPOSAL OF THIS PRODUCT

This marking indicates that this product should not be disposed of with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



Contact:

- www.blustream.com.au
- www.blustream-us.com
- www.blustream.co.uk
- support@blustream.com.au
- support@blustream-us.com
- support@blustream.co.uk

Documents / Resources

	BLUSTREAM MX44KVM 4x4 USB KVM Matrix [pdf] User Manual MX44KVM 4x4 USB KVM Matrix, MX44KVM, 4x4 USB KVM Matrix, USB KVM Matrix, KVM Matrix, Matrix
---	---

References

- [🌐 Register a .US.COM domain today!](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.