



# BN-LINK ES1513-2-5 Wireless Remote Control Socket User Manual

[Home](#) » [BN-LINK](#) » BN-LINK ES1513-2-5 Wireless Remote Control Socket User Manual 


## Contents

- [1 BN-LINK ES1513-2-5 Wireless Remote Control Socket User Manual](#)
- [2 PRODUCTS VIEW](#)
- [3 FEATURES](#)
- [4 SETUP](#)
- [5 NOTES](#)
- [6 PROGRAMMING THE OUTLETS](#)
  - [6.1 Notes: The outlets are pre-programmed for immediate use, but the configuration can be customized to meet your needs.](#)
- [7 RESETTING AN OUTLET](#)
- [8 TROUBLESHOOTING](#)
- [9 Read More About This Manual & Download PDF:](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)

## BN-LINK ES1513-2-5 Wireless Remote Control Socket User Manual



### PRODUCTS VIEW

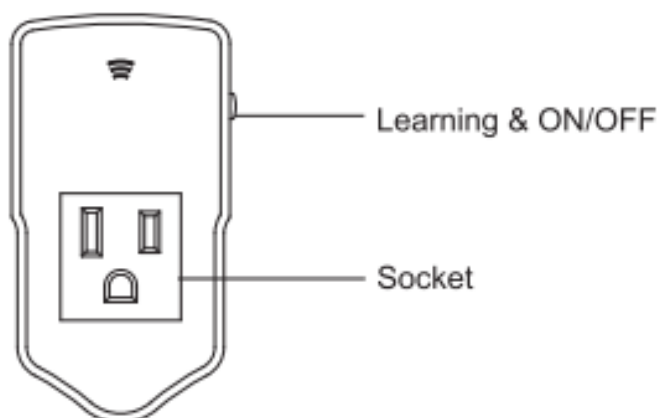

### FEATURES

- Easily controlled by the remote control from up to 100 feet in line-of-sight.
- Separate on and off buttons on the remote
- Outlets will remain powered off after a power outage to save energy.
- Power output up to 1200W at 120V(60Hz).
- Low power consumption, reduces energy use, and extends product life by up to 15%.
- Manual pairing and unpairing.

### SETUP

- Install one 12V/23A battery in the remote control's battery compartment, making sure the polarity of the battery is correct.
- Plug each outlet switch into a socket and plug a device or appliance into each
- Press the on/off buttons for the respective channel on the remote control to operate the outlet switch.

## NOTES

- Regularly change the battery in the remote control for the best performance. If you find the outlet switches are not responding or the LED indicator on the remote control becomes dim, the battery should be replaced. Always dispose of old batteries properly with consideration for the environment.
- Make sure the battery and outlets are installed firmly and correctly for safe
- These outlet switches are for indoor use only. Avoid exposure to high-temperature sources, strong sunlight, and moisture. The outlets are best used in the air with good air circulation.
- Do not exceed the maximum load current of 10A(Approximately 1200W).

## PROGRAMMING THE OUTLETS

**Notes: The outlets are pre-programmed for immediate use, but the configuration can be customized to meet your needs.**

**To program a remote control transmitter and outlets switch receiver:**

1. Remove the outlet receiver from the power socket, then plug the outlet receiver back into the power
2. Press and hold the **“Learning & ON/OFF”** button till the indicator start to flash.
3. Release the **“Learning & ON/OFF”** button, and press and hold the corresponding **“ON”** button on the remote until you hear a **“click”**.
4. The indicator will stop flashing indicating that the pairing is successful.

## RESETTING AN OUTLET

**Should you wish to unpair an outlet receiver from the remote, or if your outlets are unresponsive to the remote, the outlets can be reset following the below steps.**

1. Remove the outlet receiver from the power socket.
2. Press and hold the **“Learning & ON/OFF”** button on the outlet receiver.
3. While still holding the button, plug the outlet receiver into a power socket and wait to see the indicator flash.
4. When the indicator stops flashing, you may release the button, and the reset process is now complete.
5. You may program the outlet after.


## TROUBLESHOOTING

**In the case that one or more of the outlet receivers do not respond to the remote control, please follow the steps given below to resolve the issue:**

1. Check to see if the battery of the remote is low and needs replacement.
2. Make sure that the outlet receiver is correctly placed in the power socket.
3. Make sure that the outlet receiver is used in an area with proper air circulation to avoid overheating.
4. Reset and program the outlet(s).

***Read More About This Manual & Download PDF:***

**Documents / Resources**

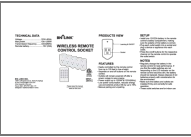	<p><b><a href="#">BN-LINK ES1513-2-5 Wireless Remote Control Socket</a> [pdf] User Manual</b> 2A003-0604, 2A0030604, 0604, ES1513-2-5, Wireless Remote Control Socket, ES1513-2-5 Wireless Remote Control Socket, Remote Control Socket, Control Socket, Socket</p>
---	---