




BOAVISION Wifi Configuration in AP Mode Instructions

[Home](#) » [BOAVISION](#) » BOAVISION Wifi Configuration in AP Mode Instructions 

Contents


- [1 The instructions of WIFI configuration in AP mode](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

The instructions of WIFI configuration in AP mode

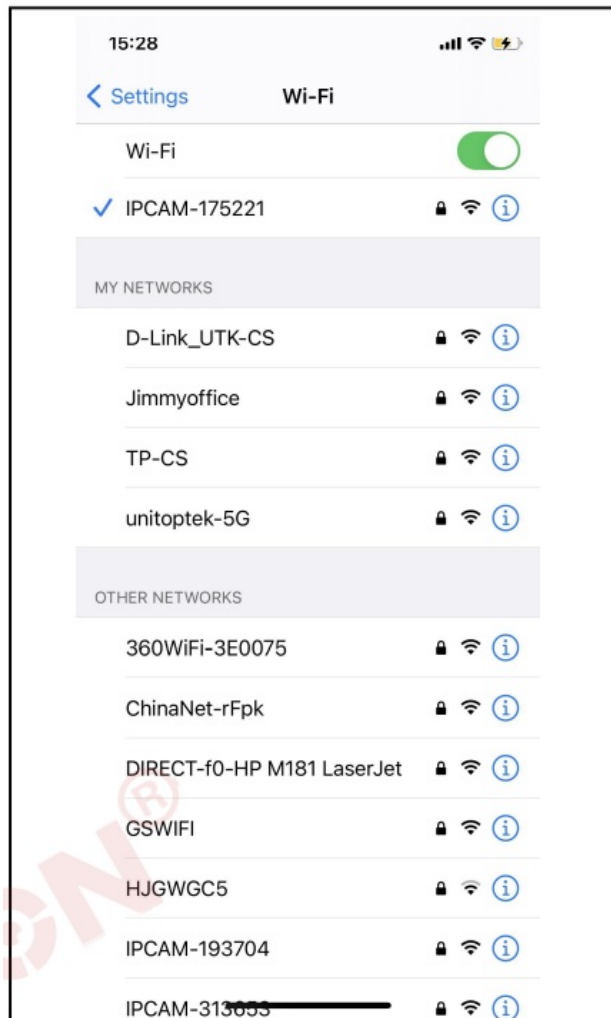


1. Please connect the power supply, do not connect a network cable
2. Wait around one minute. through the mobile phone WIFI Settings, search out the camera AP SSID;
3. The SSID format is the last eight numbers of IPCAM – six numbers. For example 'IPCAM – 0005118", **the password is "01234567"**; Mobile phone connection the SSID is ok;
4. As shown in the picture on the right, the mobile phone has been connected to the camera AP.
5. Open the mobile phone APP; add the camera; click on the LAN to search device ID; enter the camera password, admin;
6. After adding the camera, enter into the camera Settings, select the WIFI Settings, configure the camera WIFI; wait a few seconds, the device can be connected to the WIFI.


The specific operations as shown in below picture:

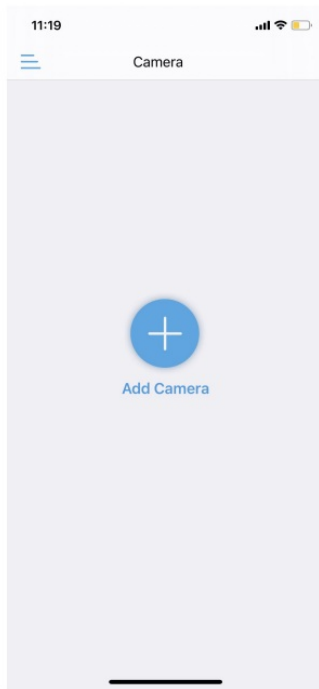


01

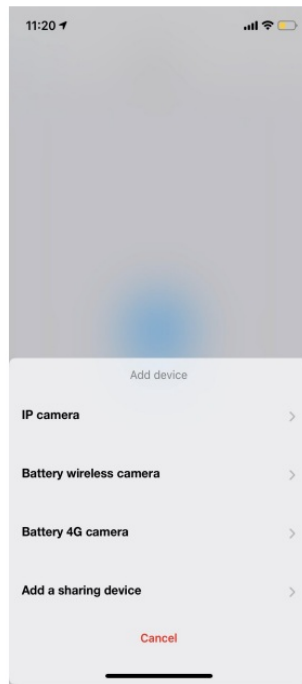


02

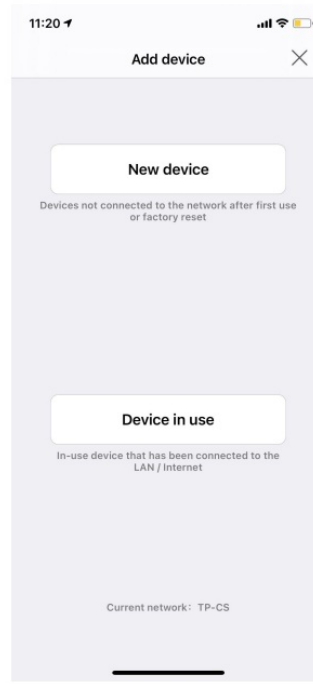


03

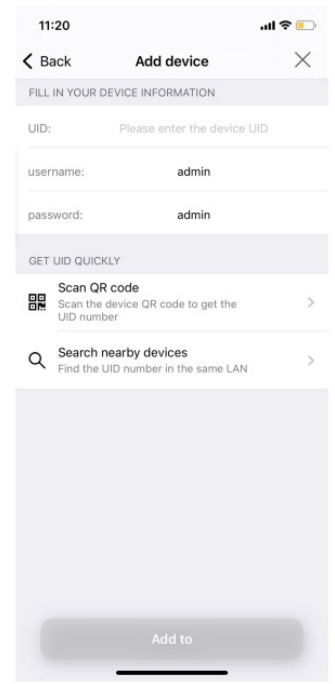


04

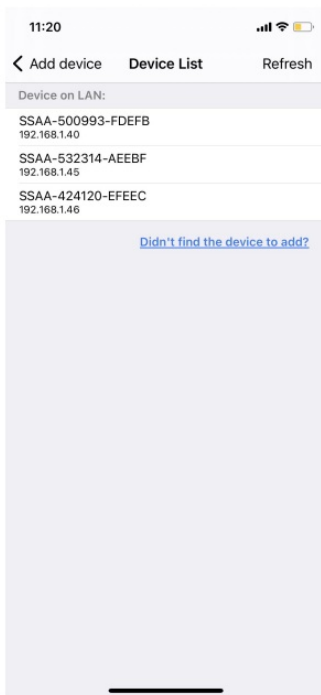


05

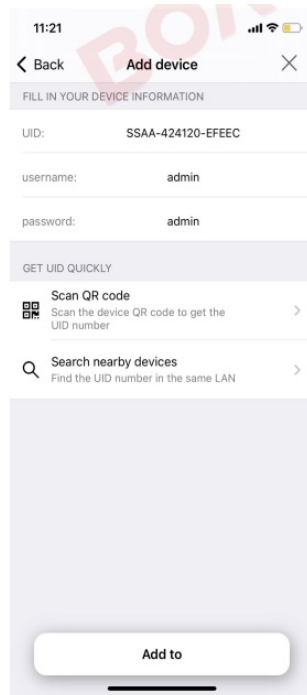


06

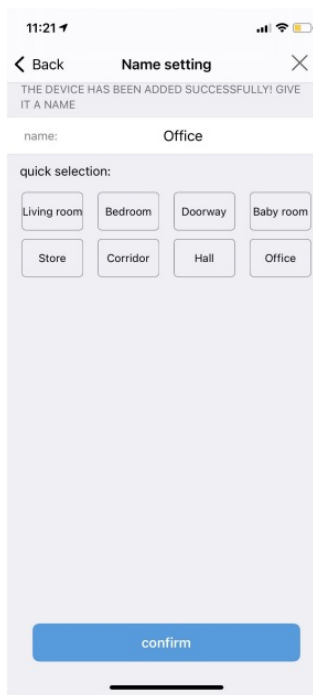

07

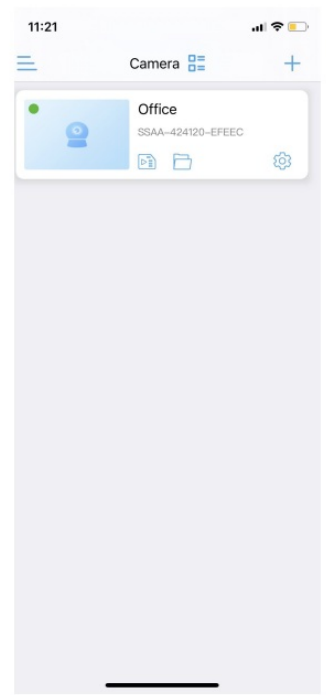


08

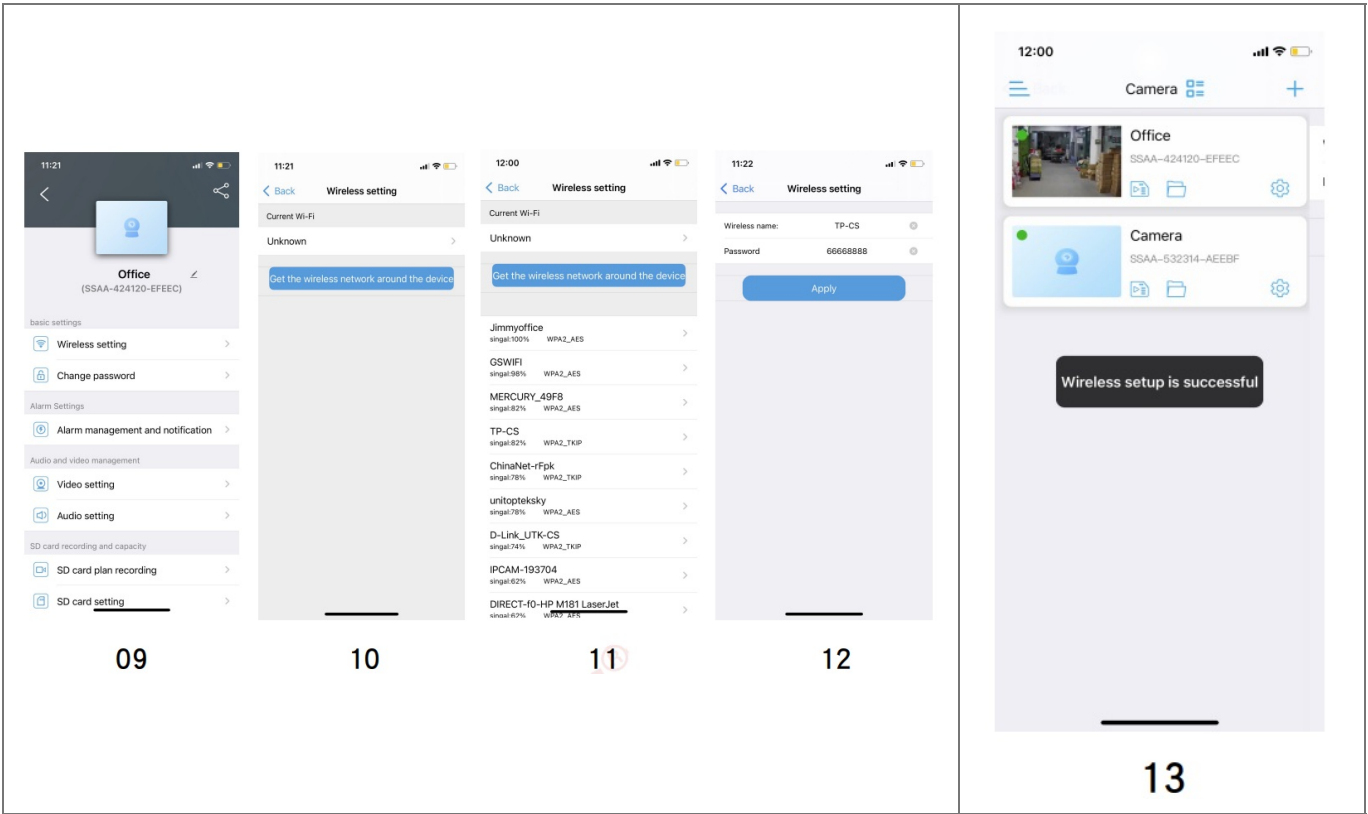

Tip: After WIFI configuration in AP mode successfully, AP mode will disappear. If you want to use the AP mode, need to restore the camera to factory settings;

Documents / Resources



[BOAVISION Wifi Configuration in AP Mode](#) [pdf] Instructions
Wifi Configuration in AP Mode