



[Home](#) » [bobie baby](#) » **bobie baby BY065 Multi Functional Swing Instruction Manual** 

Contents [[hide](#)]

- [1 bobie baby BY065 Multi Functional Swing](#)
- [2 Product List](#)
- [3 Installation Instructions](#)
- [4 Wireless connection display](#)
- [5 Backrest Height Adjustment](#)
- [6 Safety Belt Usage](#)
- [7 Cleaning and Maintenance](#)
- [8 FCC STATEMENT](#)
- [9 FAQ](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

bobie

bobie baby BY065 Multi Functional Swing



WARNING

- Read all instructions before use of the infant swing seat. Keep instructions for future use.
- Do not use this infant swing seat if it is damaged or broken.

FALL and STRANGULATION HAZARDS:

Infants have suffered head injuries falling from swings and have strangled in straps.

- Always use restraints. Adjust to fit snugly .
- STOP using product when infant attempts to climb out (approximately 9months)or the infant's weight reach to 12kg (26lbs),whichever comes first.
- Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.

SUFFOCATION HAZARDS:

- Young infants have limited head and neck control. If the seat is too upright, infant's head can drop forward and compress the airway.
- Always keep swing seat fully reclined until infant is at least 4 months old AND can hold up head without help.

- Always place swing on floor. Never use on any elevated surface.
- NEVER add soft bedding or padding.



WARNING

 
- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**.
- Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do **NOT** dispose of batteries in household trash or incinerate.
- Non-rechargeable batteries are not to be recharged.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- The compatible battery type is CR2025 and the nominal battery voltage is 3V.
- Do not force discharge, recharge, disassemble, heat above 50 (122F) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -). Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.



Product List




① Main unit X1

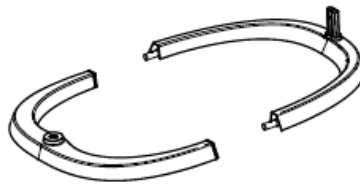


② Base tube set X2



 
③ Seat rotation base X1

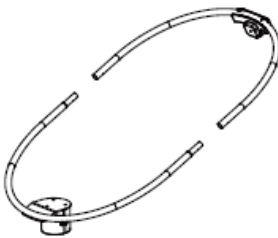


④ Seat set X2

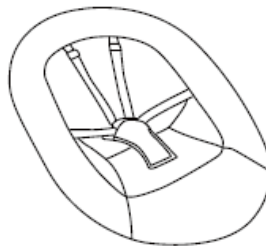 


⑤ Seat cover X1

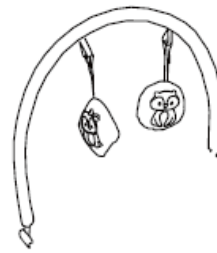 


⑥ Toy bar X1

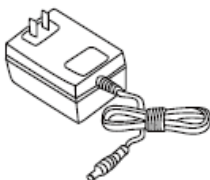 

⑦ Adapter X1

 

⑧ Remote Control X1

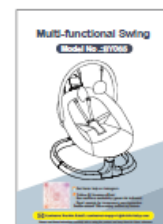 

⑨ Instruction manual X1

Please check all parts and contact us if they are missing or damaged.

Customer Service Email: customers-support@bobie-baby.com

Installation Instructions

Base Tube Set Installation

Insert the 2 base tubes in the direction of the arrows (Figure 1-1) until the clips snap into place (Figure 1-2).

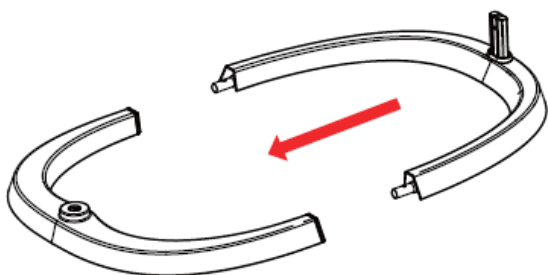 


Figure 1-1

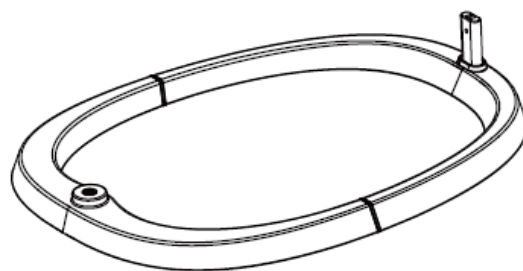 


Figure 1-2

Seat Rotation Base Installation

Place the assembled base tube set flat on the ground (Figure 1-1). Insert the seat rotation base into the base tube set in the direction of the arrow (Figure 2-2).

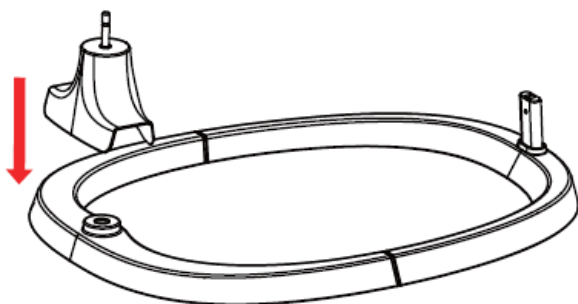 


Figure 2-1

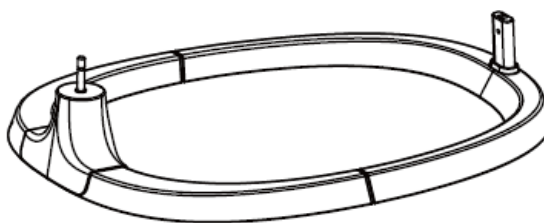 


Figure 2-2

Seat Set Installation

Insert the 2 seat tubes in the direction of the arrows (Figure 3-1) until the clips snap into place (Figure 3-2). Then, insert the assembled seat set into the seat rotation base in the direction of the arrow (Figure 3-3) until you hear a “click” (Figure 3-4).

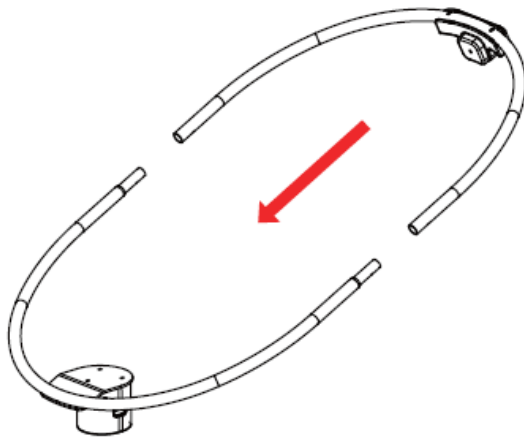 


Figure 3-1

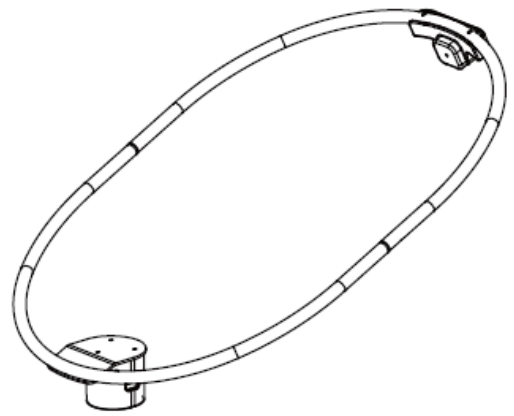 


Figure 3-2

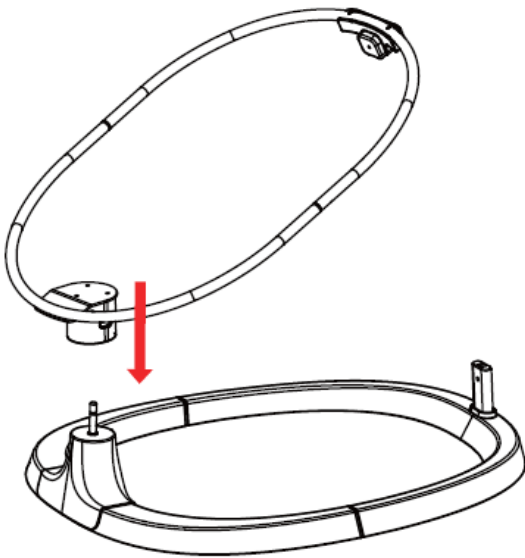 


Figure 3-3

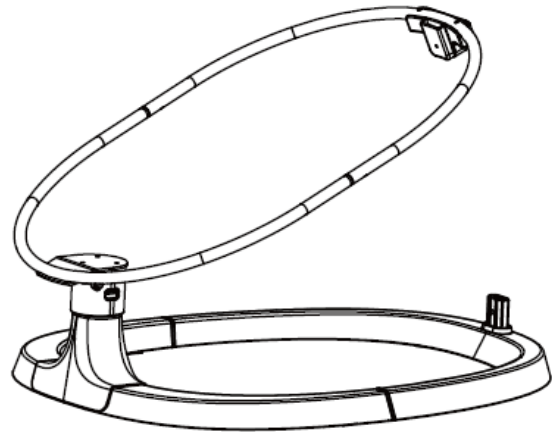 


Figure 3-4

Main Unit Installation

Place the assembled base tube set and seat set flat on the ground (Figure 4-1). Take the main unit and insert the quick-release base into the seat set in the direction of the arrow (Figure 4-2) until the clip snaps into place. Then, insert the main support tube into the base tube set in the direction of the arrow (Figure 4-3) until the clip snaps into place (Figure 4-4).

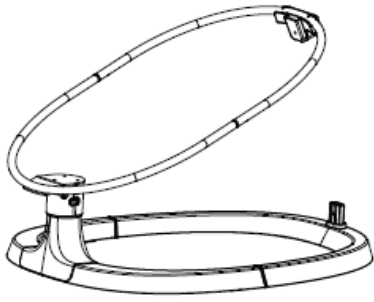 


Figure 4-1

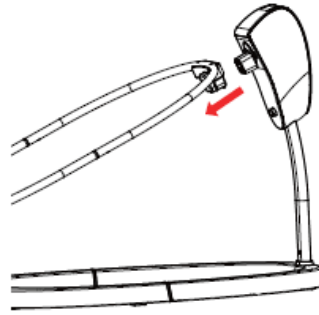 


Figure 4-2

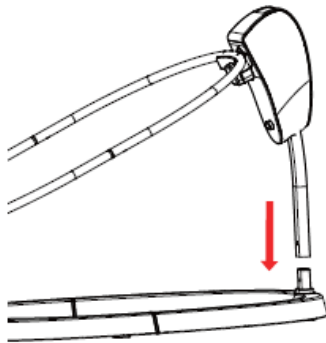 


Figure 4-3

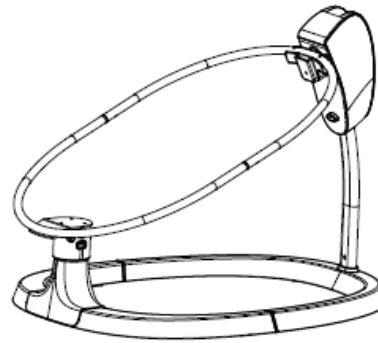 


Figure 4-4

Seat Fabric Installation Instructions

- Prepare Components: Place the seat frame and seat fabric reverse-side up on a flat surface (Figure 1).
- Attach the Fabric: Insert the seat frame into the opening at the bottom of the seat fabric (Figure 2). Secure the
- Drawstring: Fasten the drawstring buckle into the corresponding grommet (Figure 4).

Note: Ensure all parts are aligned properly before tightening. Refer to included diagrams for visual guidance.

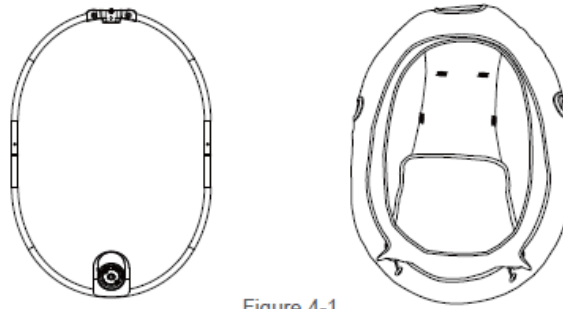 


Figure 4-1

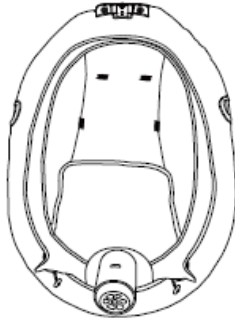 


Figure 4-2

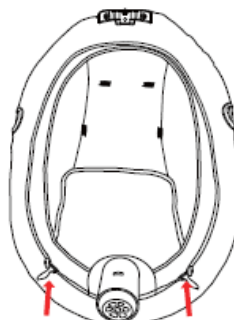 


Figure 4-3



Figure 4-4

Toy Bar Installation

Attach the toy bar to the seat tubes by pressing both sides in the direction of the arrows (Figure 5-1). Once attached, it should look like Figure 5-2.

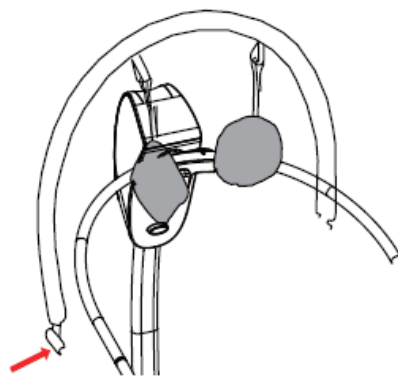 


Figure 5-1

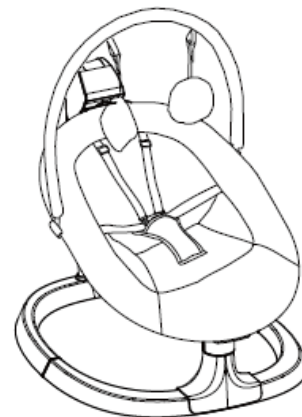 


Figure 5-2

User Manual

1. Power Supply

It is recommended to use only the 12V 2A adapter. Plug the adapter into a 100-240V power outlet and connect the other end to the power port at the bottom of the main unit (Figure 5). Use indoors and avoid damp areas.


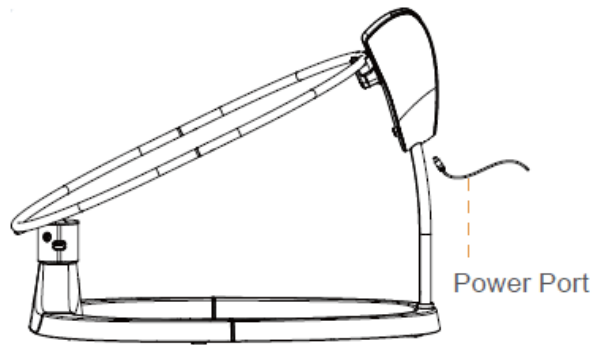 


Figure 5

 2. Touch Panel Button Functions



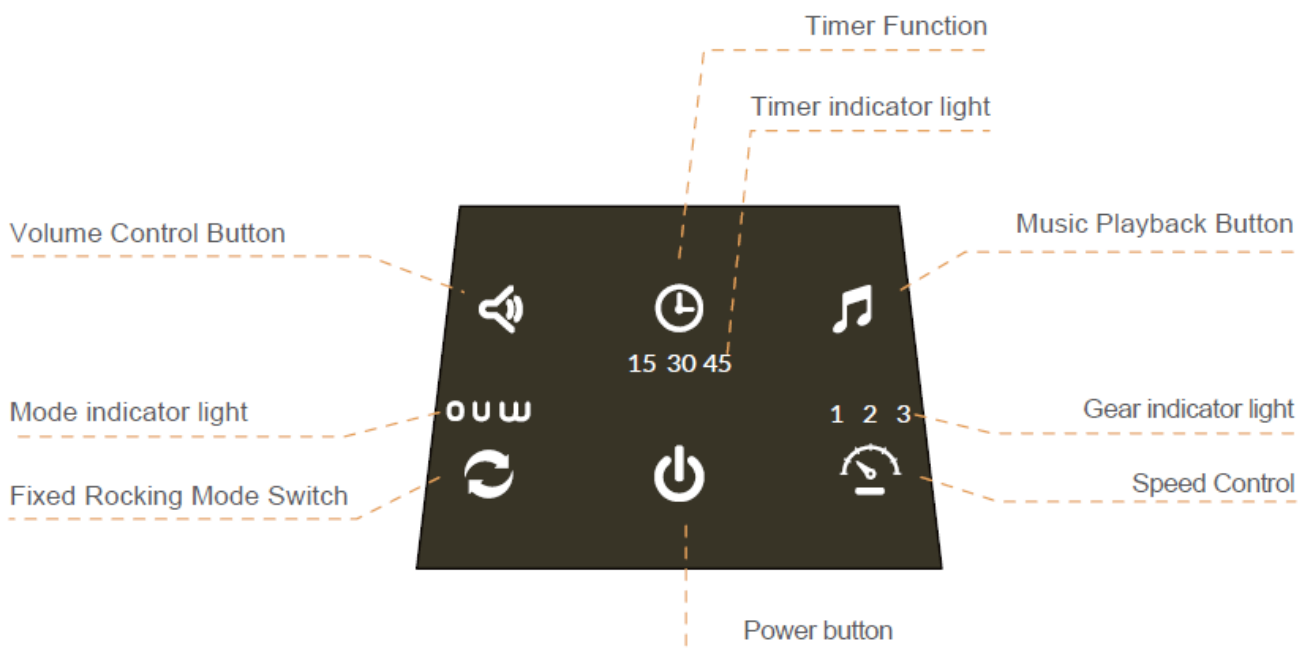

Power Button

1. Press the button to turn the product on. The function buttons will light up.
2. When the swing is in operation, press the button to stop all functions, including music and timer.
3. When the swing is in swinging mode, press the button to return the seat to the center position before stopping.

Fixed Rocking Mode Switch

In standby mode, press the button to select a rocking mode, then use the speed control button to choose the desired speed.

1.  O-shaped swinging trajectory: 3 speed levels.
2.  U-shaped swinging trajectory: 3 speed levels.



3. W-shaped swinging trajectory: Speed cannot be adjusted and varies from slow to fast.

1 2 3



Speed Control

1. Press the button to adjust the swinging speed. There are 3 speed levels, indicated by the corresponding lights.



Timer Function **15 30 45**

1. Press the button to set the timer. Use the +/- buttons to adjust the time. Options: 15, 30, or 45 minutes.
2. Default timer setting is 45 minutes.



Music Playback Button

 
1. Press the button to turn on the music. Press again to skip to the next track. Long press to turn off the music.
2. Music playback is set to loop and has a memory function. It will resume from the last track when turned back on.



Volume Control Button

1. Press this button to adjust the volume. There are 5 volume levels.

Remote Control Function Guide

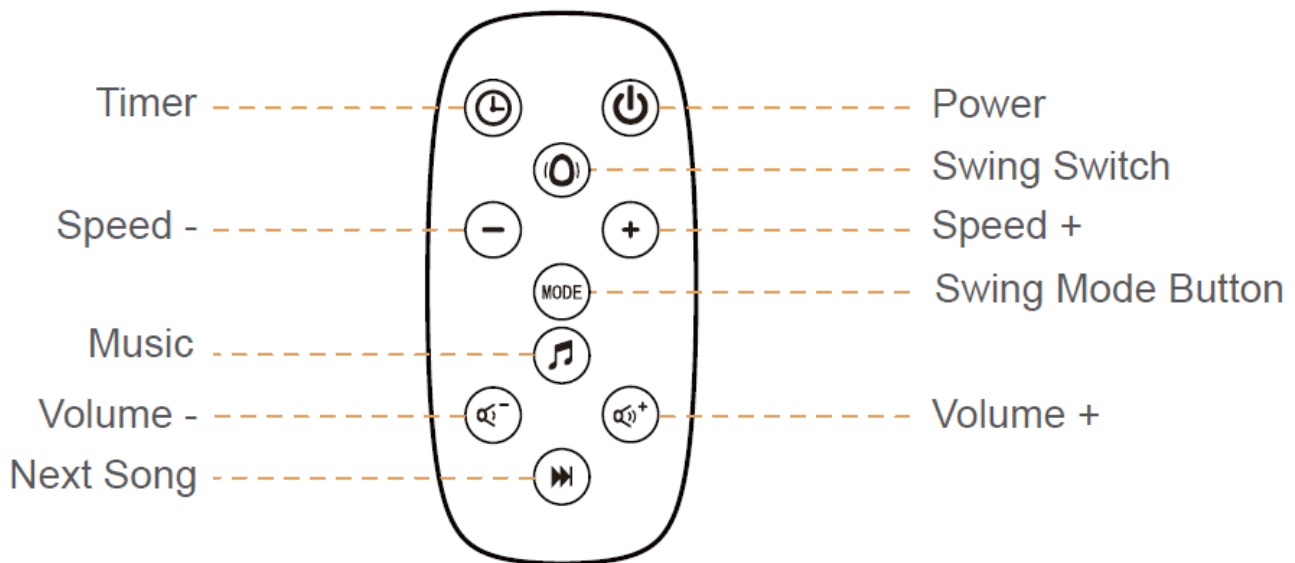

WARNING: This product contains a button or coin cell battery.

1. Initial Use

When using the remote control for the first time, pull out the battery insulating tab located at the bottom of the battery compartment and store it safely. To preserve battery life and extend the remote's longevity, reinsert the insulating tab when the remote is not in use.

2. Power Button :

Press once to turn on the power (standby mode).

Press again to turn off the power.

3. Timer Function :

Press to activate the timer. The timer display will show the set duration.

Press repeatedly to adjust the timer duration.

4. Swing On/Off :

Press to activate the timer. The timer display will show the set duration.

Press repeatedly to adjust the timer duration.

5. Mode Selection :

While rocking is active, press this button to cycle through the 6 preprogrammed rocking modes.



6. Speed Increase

Press to raise the rocking speed by one level (Levels 1–4). The corresponding indicator light will illuminate. No response when Level 4 is reached.



7. Speed Decrease

Press to lower the rocking speed by one level. The indicator light dims as levels decrease. Pressing at Level 1 will turn off the light and stop rocking.



8. Music On/Off

Press to play/pause music. Songs will repeat in a continuous loop.



9. Next Track

During playback, press to skip to the next song. Cycle through tracks indefinitely.



10. Volume Up

Default volume is medium. Press to increase volume incrementally to maximum.



11. Volume Down

Default volume is medium. Press to decrease volume incrementally to minimum.

Remote Operation Guidelines

Ensure the remote faces upward, with its infrared sensor aligned toward the rocker's front panel. Effective range: Within 4 meters (13 feet) of the rocker's front, within a 35-degree angle on either side. Failure to follow these guidelines may result in unresponsive controls.

Wireless connection display

While the unit is running, activate wireless connection display on your phone, and select

the device name (BY-BABY) to connect. Once connected, you can choose songs and adjust the volume directly from your phone.

Other Features:

1. Motor stall protection: If the product is obstructed during normal operation, the program will detect the obstruction and enter stall protection mode, stopping the music, timer, and rocking functions.

Backrest Height Adjustment

The seat has 2 adjustable angles. Press the adjustment button on the main unit (Figure 6, blue arrow) and move the main unit up or down to adjust (Figure 7). Do not adjust the backrest while a child is in the product, as this may cause injury.

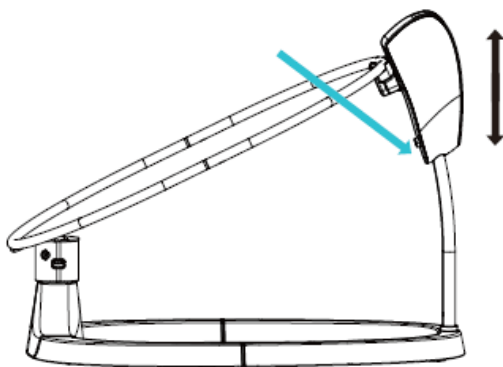 


Figure 6

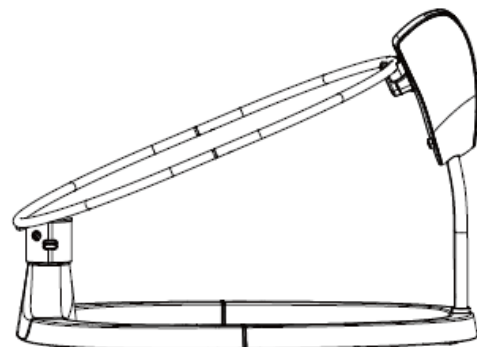 


Figure 7

Usage Notes

When the power is connected, the music function can be used without enabling the swinging function.

The motor has stall protection:

If the product is obstructed during normal operation, the program will detect the obstruction and enter stall protection mode to prevent damage to key components. The music, timer, and swinging functions will stop. Simply turn off the power and restart to resume normal operation.

Safety Belt Usage

First, open the safety belt and place it in the correct position. Then, place the child in the seat and fasten the shoulder and waist straps. Ensure the safety belt is properly installed to secure the child.

Seat Pad

1. To remove the seat cover, flip the seat cover and pull off the velcro.
2. Flip the seat cover, and starting from the bottom, remove the seat pad from the seat frame. Then, slide the seat pad up, off the top of the seat frame.

Cleaning and Maintenance

Seat Cover:

The seat cover can be removed and washed. If it gets dirty, it can be hand-washed.

Product Body/Tubes:

- The product is not waterproof. Do not wash it directly with water. If it gets dirty, wipe it with a damp cloth. Toys:
- Fabric toys can be removed and washed. Ensure they are completely dry before giving them to the child. Adapter:
- Clean only with a dry cloth. Do not wash with water.

Get faster help on Instagram

•



[Follow@Vavasoo.official](https://www.instagram.com/Vavasoo.official)

- See real-time availability (green dot indicator)
- Read receipts for transparent communication Prefer email? We'll reply within 24 hours!

Customer Service Email:

- customers-support@bobie-baby.com

Manufacturer (Produced by):

- ZHONGSHAN CITY BOBIE BABY PRODUCT CO.,LTD.
- ADD:No.3 Heman Street Jidong Yi District,
- Xiaolan Town,Zhongshan City, Guangdong, China, 52841 5

FCC STATEMENT

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modification to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

FAQ

- **Q: How do I adjust the swing seat?**
A: Use the provided restraints and adjust them to fit snugly around the infant. Always keep the swing seat fully reclined until the infant is at least 4 months old and can hold up their head without help.
- **Q: What should I do in case of battery ingestion?**
A: If battery ingestion is suspected, seek immediate medical attention. Keep batteries out of reach of children to prevent such incidents.

Documents / Resources

	bobie baby BY065 Multi Functional Swing [pdf] Instruction Manual BY065, BY065 Multi Functional Swing, Multi Functional Swing, Swing
-------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------

References

- [User Manual](#)

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.