



[Home](#) » [Bobtot](#) » **Bobtot EP20 Portable Bluetooth Speaker with Microphone User Manual** 

Contents [[hide](#)]

- [1 Bobtot EP20 Portable Bluetooth Speaker with Microphone](#)
- [2 Safety Instructions](#)
- [3 What's in the box](#)
- [4 Buttons Overview](#)
- [5 Button Function](#)
- [6 How to use the speaker](#)
- [7 How to use the wireless microphone](#)
- [8 Specifications](#)
- [9 FCC Statement](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

Bobtot

Bobtot EP20 Portable Bluetooth Speaker with Microphone



Safety Instructions

1. Avoid dropping.
2. Do not disassemble.
3. Avoid extreme temperatures.
4. Use original or certified cables.
5. Do not use any corrosive cleaner/oil to clean.
6. Do not use the device outdoors during thunderstorms.
7. Do not expose batteries to high heat as direct sun light, fire and Etc.

 
What's in the box



EP20 Karaoke Speaker



Wireless Microphone

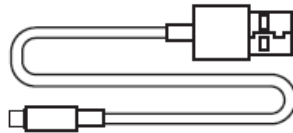

USB Type-C Charging Cable

 


3.5mm AUX Audio Cable



User Manual

Buttons Overview

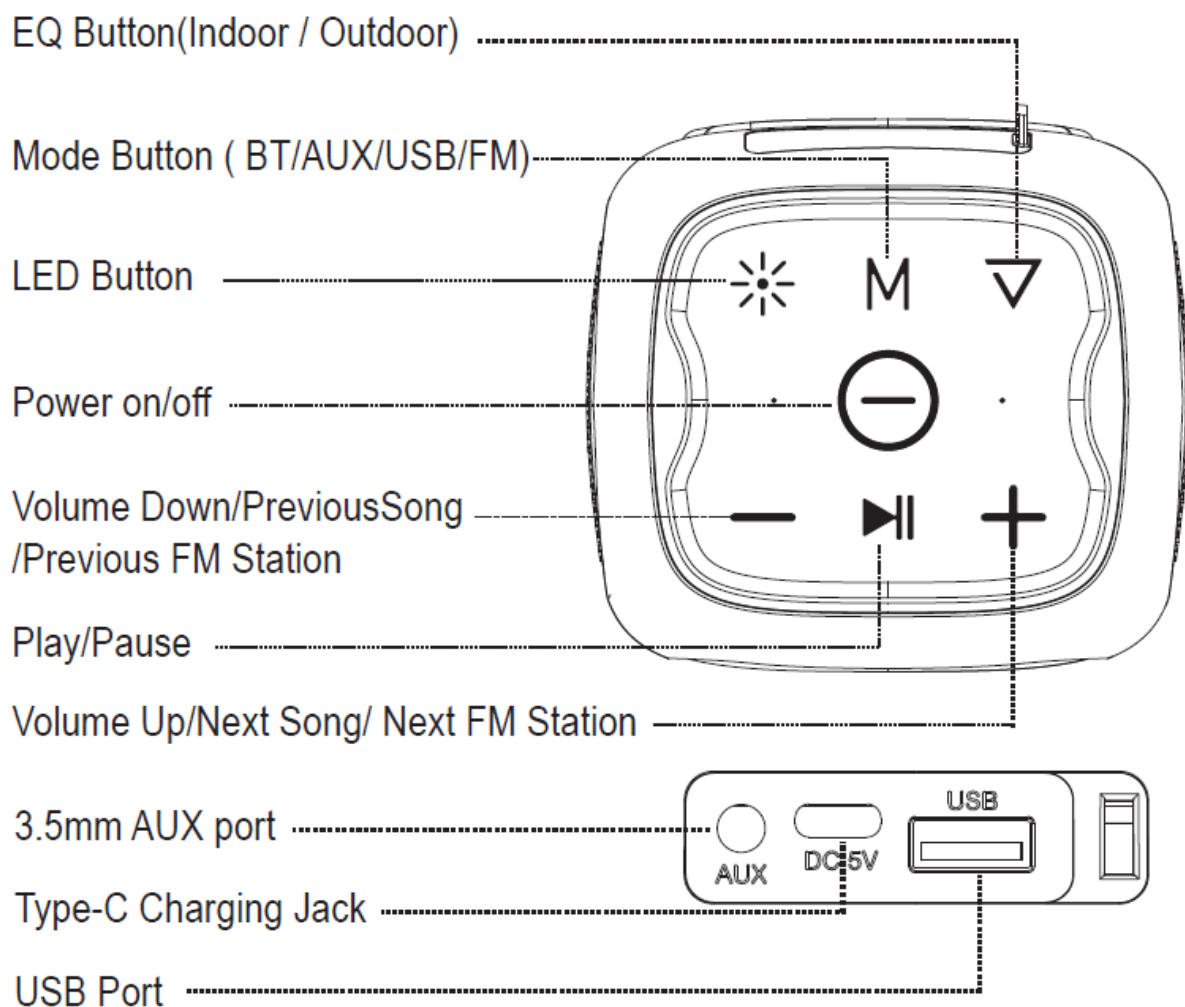

Button Function

Button	Function	Operation
⊖	Power on/off	Long press
+	Volume up	Short press
	Next song	Long press
	Next FM Station	Long press
-	Volume down	Short press
	Previous song	Long press
	Previous FM Station	Long press

	Play/Pause	Short press
	Disconnect BT	Long press
	BT/USB/AUX/FM	Short press
	Light show	Short press
	Turn off the light	Long press
	Indoor & Outdoor Mode	Short press

How to use the speaker

Wireless Pairing


1. Long press the “POWER” button to enter BT pairing mode.
2. Find ” Bobtot EP20 ” speaker on the BT list of your phone or tablet, and click to connect.
3. It’s successfully connected to your smart device if you hear prompt sound, and the indicator light is solid blue.

AUXIUSB

 
Plug AUX or USB flash drive into the speaker, it will automatically play.

When using one of the connection ways, please make sure the other source is disconnected.

FM

1. Plug the 3.5mm Audio cable into the speaker, just straighten the other end, it’s as an external antenna and improve signal.
2. Press the ” **M** ” button on the speaker to enter FM radio mode.
3. Long press the " " button to automatically search out all the FM radio stations that can be received.

How to use the wireless microphone

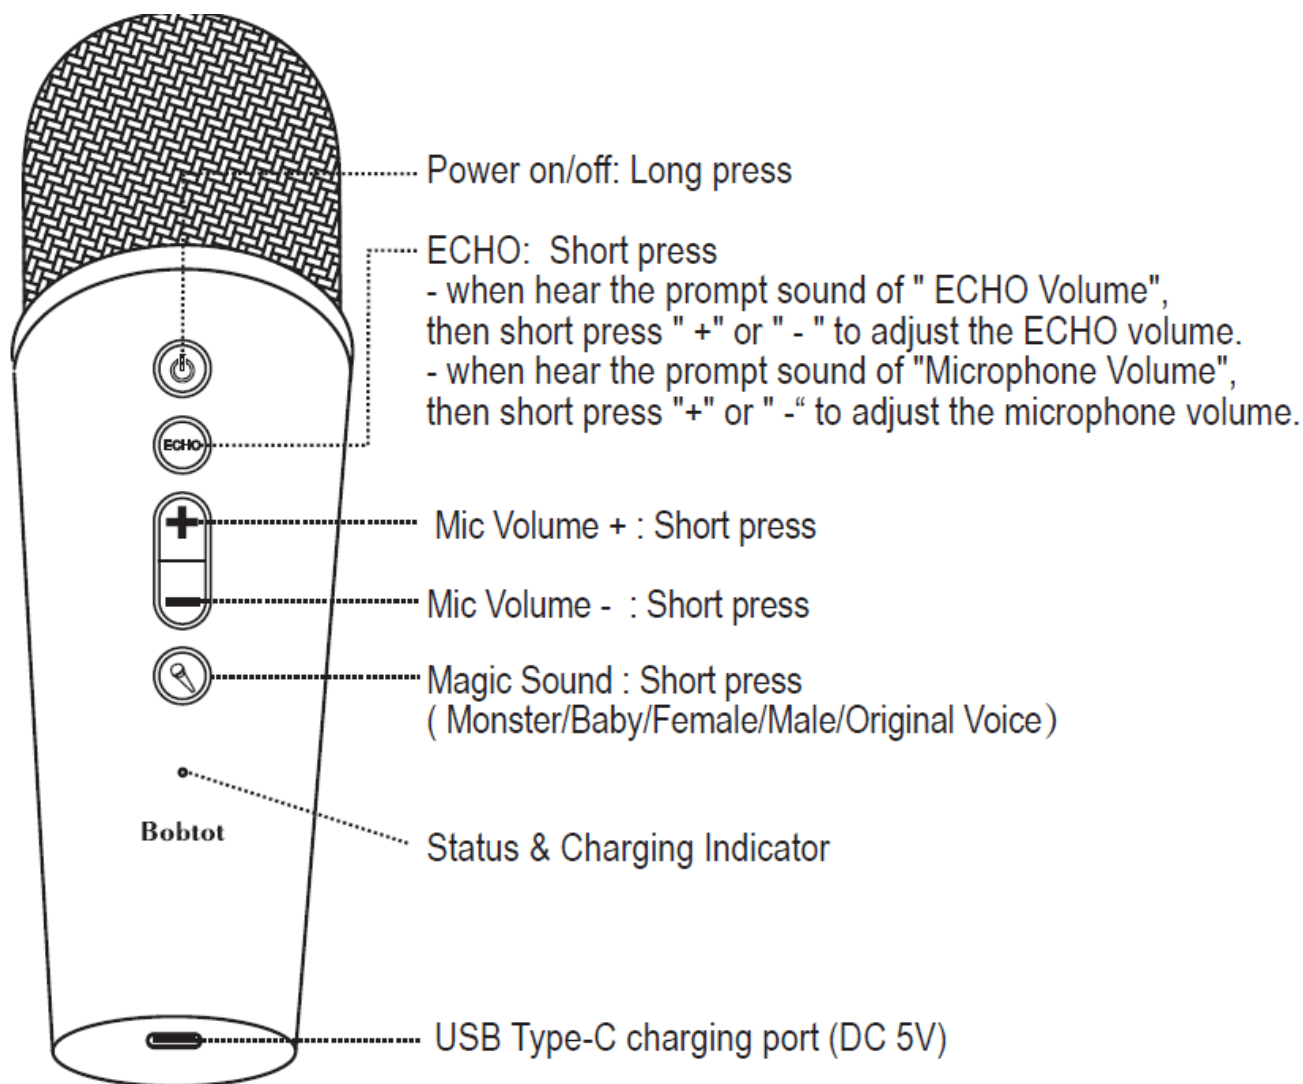

Specifications

BT version	5.3
Range	33ft/10m
Audio output	20W
Play time (varies by volume level and content)	Up to 10 hours
Charging time	4.5 hours
Waterproof rating	IPX6
Input	DC 5 V
Impedance	4Ω

Frequency response	100 Hz-18 KHz
Size	105x97x237mm/4.13x3.82 x9.33 in
Weight	1138g/2.51 lb

Reset your device to factory settings

If the speaker does not work properly, you may reset it by inserting needle to AUX jack to press and hold the button for approximately 2 seconds until the speaker powers off, and then powers on again.

FCC Statement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user s authority to operate the equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received,including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

18 Months Warranty
Life-time & Timely Technical Support

support@bobot.net www.bobot.net

Made in China
© Bobtot // Features and specifications are subject to change and or improvement without notice.

Documents / Resources

	Bobtot EP20 Portable Bluetooth Speaker with Microphone [pdf] User Manual EP20, B0DSZLCJYB, B0DCGBN8SV, B0DCFNB1B2, B0DCFMXYTG, EP20 Portable Bluetooth Speaker with Microphone, EP20, Portable Bluetooth Speaker with Microphone, Bluetooth Speaker with Microphone, Speaker with Microphone, with Microphone
---	--

References

- [User Manual](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.