

Bobtot ET200 Portable Speaker with Microphone



Bobtot ET200 Portable Speaker with Microphone User Guide

[Home](#) » [Bobtot](#) » Bobtot ET200 Portable Speaker with Microphone User Guide 

Contents

- [1 Bobtot ET200 Portable Speaker with Microphone](#)
- [2 What's in the Box](#)
- [3 Device Overview](#)
- [4 Charging Your Device](#)
- [5 Turn On/Off](#)
- [6 BT Connection/Disconnection](#)
- [7 Wireless Microphone](#)
- [8 Multi-function Mode](#)
- [9 Specification](#)
- [10 FCC Warning](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)

 
 
 
Bobtot[®]

Bobtot ET200 Portable Speaker with Microphone



What's in the Box


Check to make sure you have everything below.

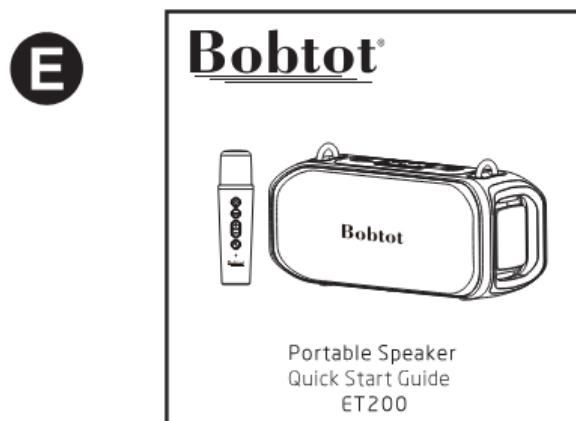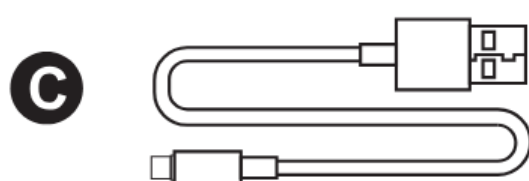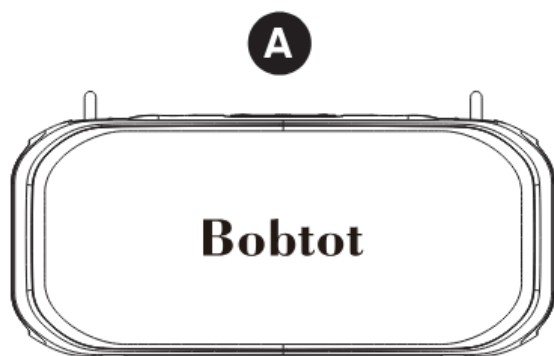

- **A:** 1 * ET200 Portable Speaker
- **B:** 1 * Wireless Microphone


- **C:** 1 * Type-C USB Charging Cable
- **D:** 1 * 3.5mm AUX Audio Cable
- **E:** 1 * Quick Start Guide

 Device Overview

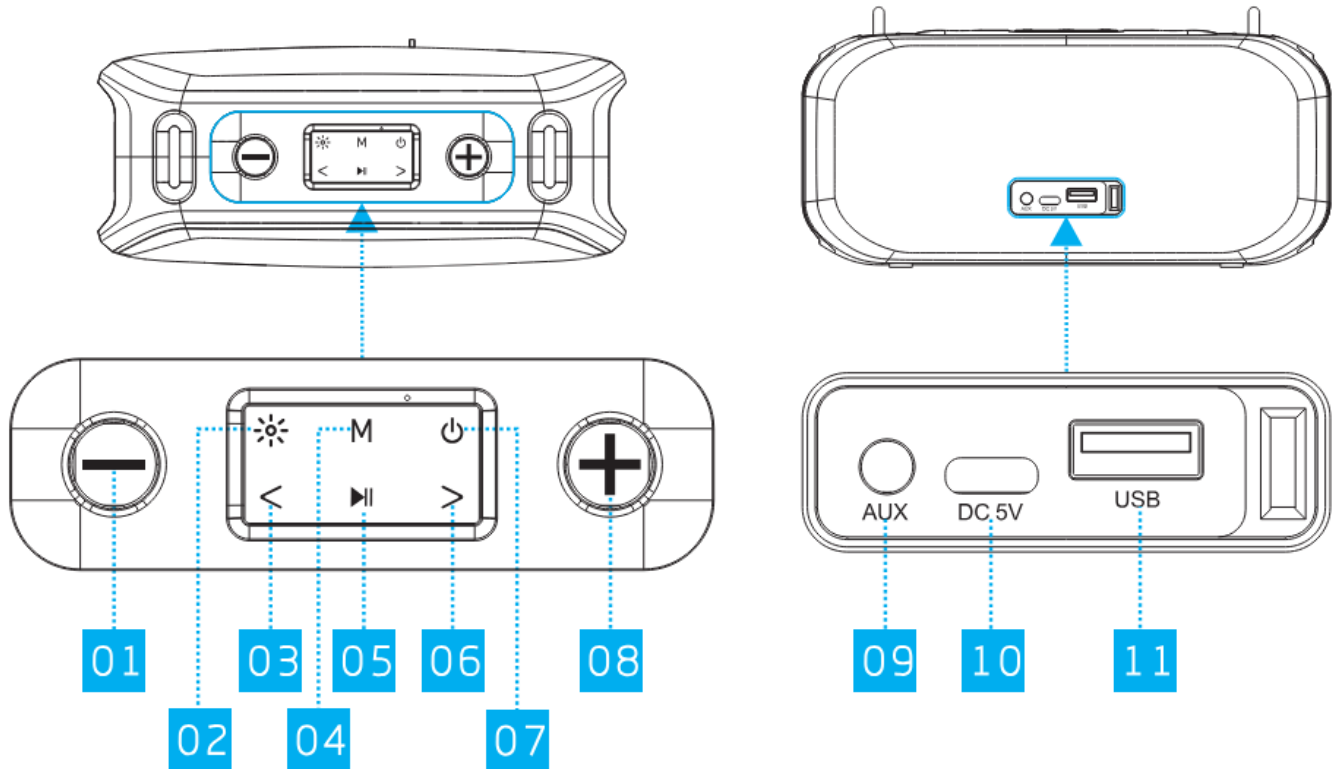


1. Volume Down
2. Light mode
3. Previous Button
4. Multi-function Button
5. Play /Pause
6. Next Button
7. Power On/Off
8. Volume Up
9. AUX Jack/Reset Button
10. Type-C Charging Port
11. USB Input

 
Charging Your Device

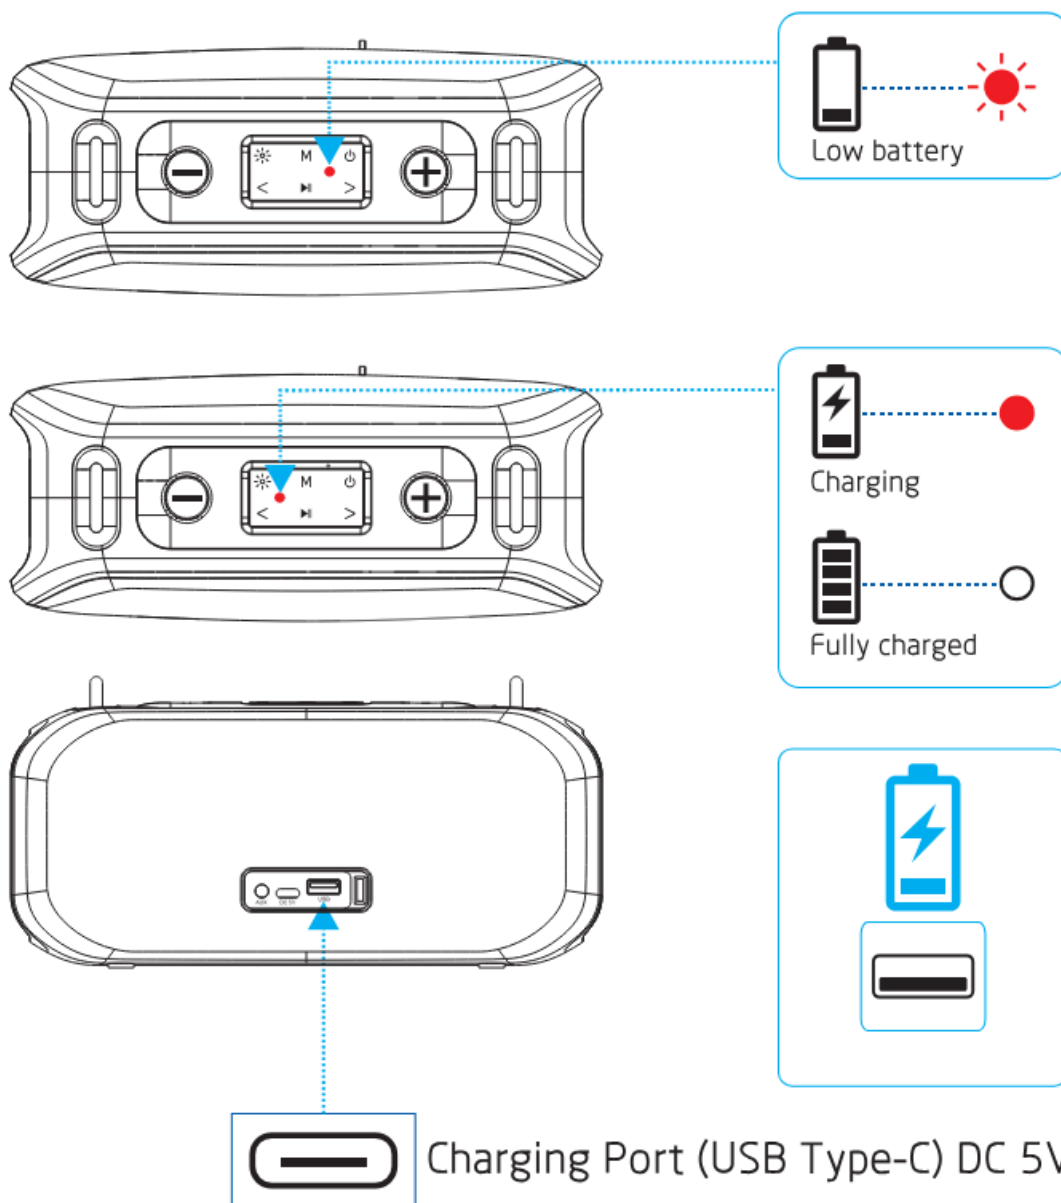

Turn On/Off

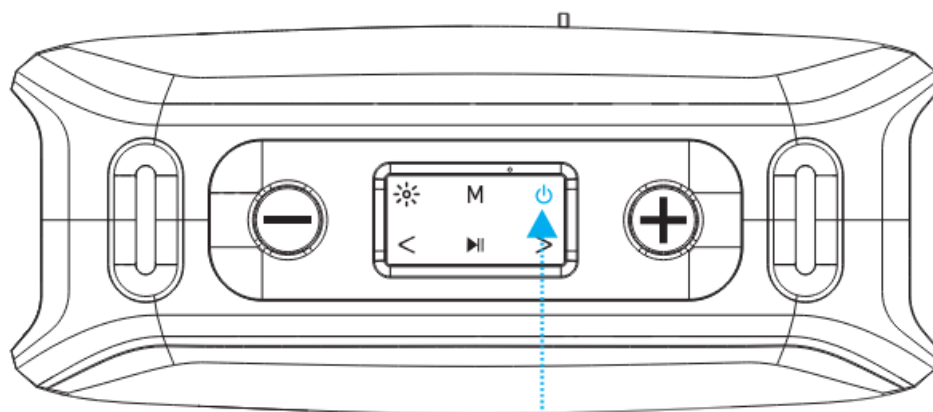 


Long Press 2"

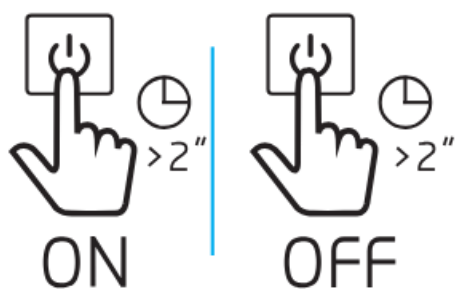 

Long Press the POWER button
2 Seconds to turn on/off the
Bobtot ET200 portable speaker.

 BT Connection/Disconnection

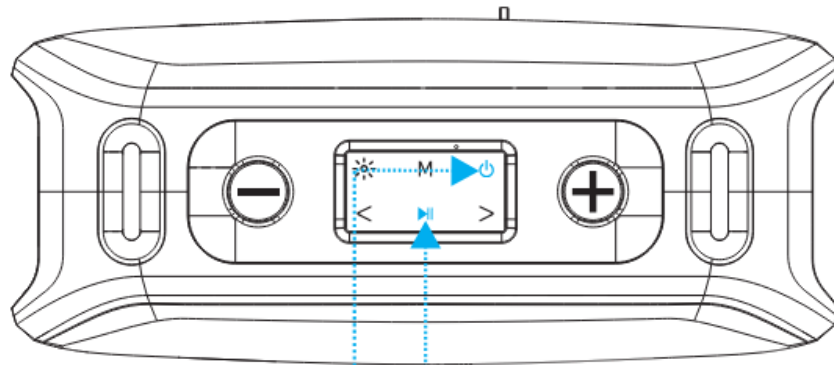

BT Connection

 
 
01



Long Press > 2"

1. After full charged, long press the POWER button to enter BT pairing mode.
2. Search for the device name "Bobtot ET200" and tap to connect.

02

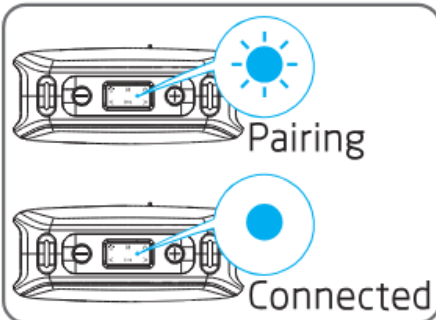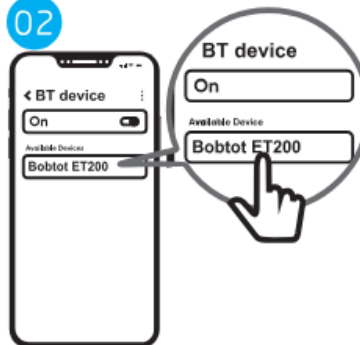

BT Disconnection




Long Press > 2"

Long press "▶||" to disconnect the current device, and then enter BT pairing new device.

NOTE:

1. Automatically shut down after 10 minutes of no connection in BT mode.
2. Automatically shut down after 20 minutes of no playback or pause after connection.

 Wireless Microphone

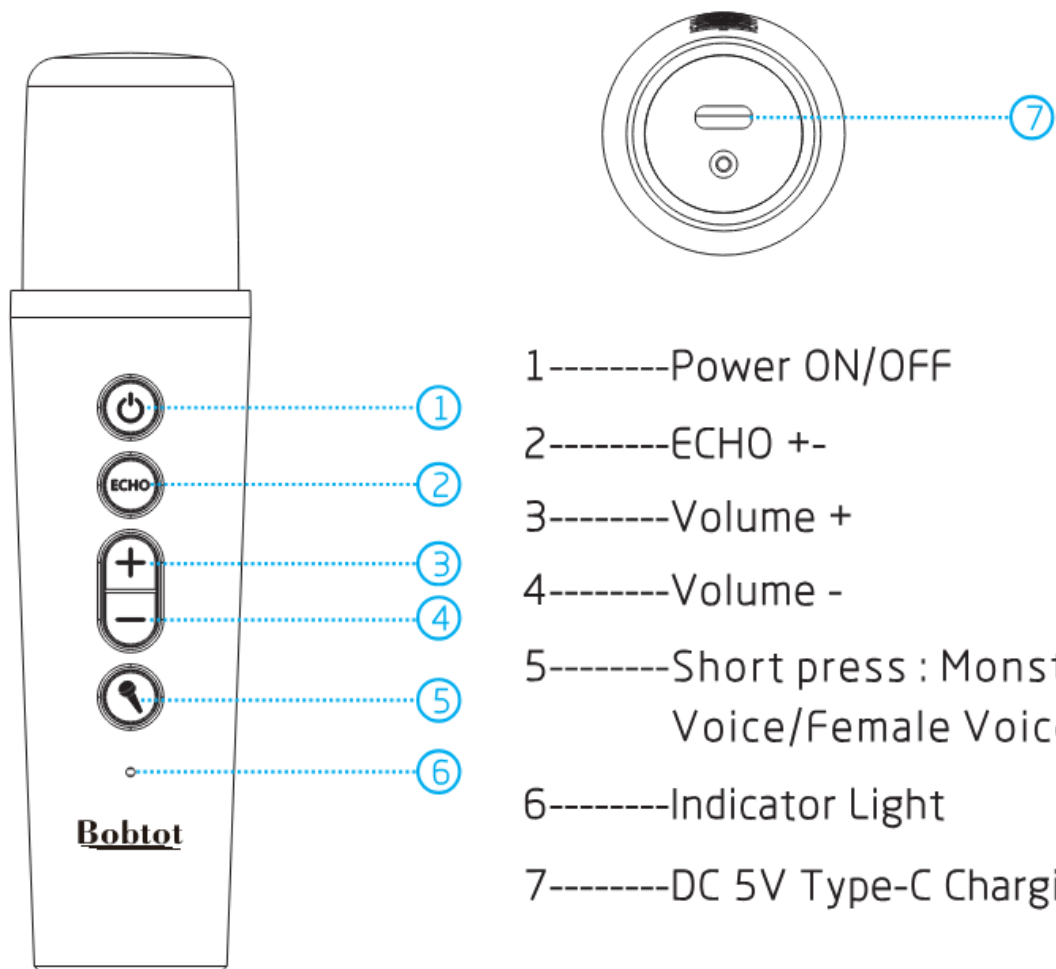

1-----Power ON/OFF

2-----ECHO +-

3-----Volume +

 
4-----Volume -

5-----Short press : Monster Voice/Baby
Voice/Female Voice/Male Voice

6-----Indicator Light

7-----DC 5V Type-C Charging

Multi-function Mode

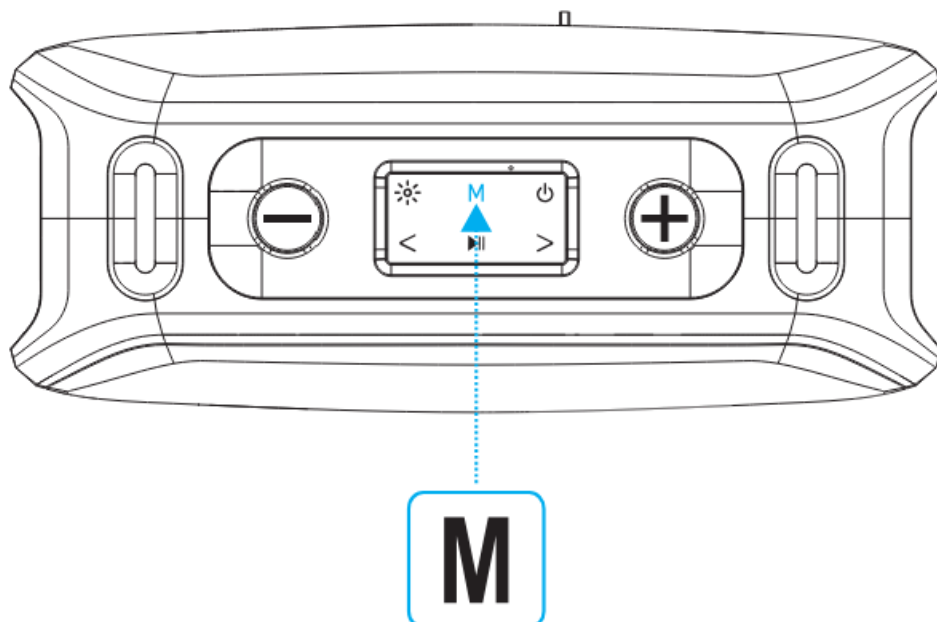

AUX / USB / BT

Plug AUX or USB flash drive into the speaker, it will automatically play. When using one of the connection ways, please make sure the other source is disconnected.

Short Press



Specification

- **Output Power:** ZOW
- **Power Supply:** DC 5V
- Built-in rechargeable battery
- **Speaker Battery:** 7.4V/4000mAh
- **Microphone Battery:** 3.7V/250mAh
- BT with up to 33ft range
- BT/AUX/USB/MIC function
- IPX5 Water-resistant, sprayproof
- Wireless Microphone Supported
- **Frequency Response:** 100Hz-18kHz

Resetting Your Device

If your speaker is not operating properly, you may reset it. To do so, use a small object – such as a paper clip – to press the button inside the AUX jack. Press and hold the button for approximately 2 seconds until the speaker powers off, and then power it on again as usual.

FCC Warming

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, under Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Need help?

Customer Care Guide

At our company, we strive to provide exceptional customer care to every one of our clients. We believe that building strong relationships with our customers is essential to the success of our business. To help us achieve this goal, we have put together the following customer care guide.

Time

We understand that our customers' time is valuable, so we will respond to any inquiries within 24 hours.

Feedback

We know that our customers are the heart of our business so we value your feedback. We encourage you to share your thoughts and ideas with us.

Solutions

If our customers encounter any issues, we will try our best to find a quick and efficient solution that meets your needs.

Here at Bobtot, we take customer care very seriously. Our customers are our first priority, and we are committed to providing the highest quality service.

If you have any questions or concerns, please don't hesitate to reach out to us.

We will be happy to assist you:


Call or Message: +1 888 572 1718

Email: service@bobot.net

bobot.net

CI2024 B0BT0T // Features and specifications are subject to change and or improvement without note.

Documents / Resources

	Bobtot ET200 Portable Speaker with Microphone [pdf] User Guide ET200 Portable Speaker with Microphone, ET200, Portable Speaker with Microphone, Speaker with Microphone, Microphone
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.