

BODYCRAFT How To Update Connect 22 Software Instructions

Home » BODYCRAFT » BODYCRAFT How To Update Connect 22 Software Instructions

Contents

- 1 BODYCRAFT How To Update Connect 22 Software
- 2 HOW TO UPDATE CONNECT 22 SOFTWARE
- 3 Documents / Resources
 - 3.1 References
- **4 Related Posts**



BODYCRAFT How To Update Connect 22 Software



TO UPDATE THE CONNECT 22 CONSOLE YOU WILL FIRST NEED TO PREPARE A USB FLASH DRIVE. DELETE ANY AND ALL FILES OFF THE USB FLASH DRIVE. THEN CLICK TO DOWNLOAD THE SOFTWARE UPDATE FILE: CONNECT 22 UPDATE THIS FILE (UPDATE.ZIP) SHOULD BE IN YOUR DOWNLOADS FOLDER



ON YOUR COMPUTER.

MAKE SURE THE FILE NAME IS

"UPDATE.ZIP". MODIFY THE FILE NAME IF NECESSARY. DRAG & DROP OR COPY THE UPDATE.ZIP FILE TO THE USB DRIVE. THEN PLUG THE USB INTO THE CONNECT 22.

HOW TO – UPDATE CONNECT 22 SOFTWARE

1. UNPLUG THE POWER CABLE FROM THE CONNECT 22. MAKE SURE THE USB IS INSTALLED IN THE CONNECT 22. THEN PLUG THE POWER CORD BACK INTO THE CONNECT 22. THE CONNECT 22 WILL BOOT UP AND THIS MESSAGE WILL APPEAR. (THIS COULD TAKE SEVERAL MINUTES. THE FILE IS LARGE.)




2. LET THE TABLET UPDATE. (THIS COULD TAKE SEVERAL MINUTES) YOU WILL SEE A BLACK SCREEN

WITH A PROGRESS BAR (SHOWN BELOW)

WHEN THE UPDATE IS DONE YOU WILL

SEE THE SCREEN TO THE LEFT. SELECT NO. THEN IMMEDIATELY REMOVE THE USB DRIVE.

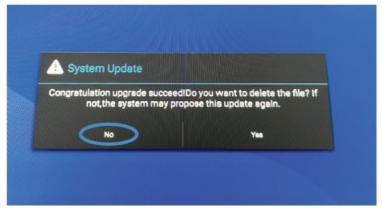

- 3. YOU WILL NEED TO PREFORM A FACTORY RESET FOR THE FINAL STEP. FIRST GO THROUGH THE INITIAL SETUP PROCESS. SKIP THROUGH ALL OF THE STEPS THAT PROVIDE A SKIP OPTION. NEXT YOU WILL PERFORM A FACTORY RESET.
 - 1. (CLICK TO SHOW) HOW TO PERFORM FACTORY RESET AFTER THE RESET, FOLLOW ALL PROMPTS FOR THE FINAL INITIAL SETUP.
 - 2. (CLICK TO SHOW) FINAL ITINTIAL SETUP STEPS THEN YOU'RE ALL SET!

Documents / Resources



BODYCRAFT How To Update Connect 22 Software [pdf] Instructions How To Update Connect 22, Software, How To Update Connect 22 Software

References

• B Home page - BODYCRAFT

Manuals+,