

BOGASING G4 Bluetooth Speaker



BOGASING G4 Bluetooth Speaker User Manual

[Home](#) » [BOGASING](#) » BOGASING G4 Bluetooth Speaker User Manual 

Contents

- [1 BOGASING G4 Bluetooth Speaker](#)
- [2 Product Usage Instructions](#)
- [3 Specifications](#)
- [4 Accessories](#)
- [5 Button Configuration](#)
- [6 LED Indicator](#)
- [7 Battery Indicator](#)
- [8 Troubleshooting](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

BOGASING

BOGASING G4 Bluetooth Speaker



Specifications

- **Model:** G4
- **Bluetooth Range:** Up to 18m/60ft (Unobstructed)
- **Output Power:** 50W
- **Battery Capacity:** 8000 mAh
- **Bluetooth Version:** 5.3
- **Frequency Response:** 48Hz-20KHz
- **Input Power:** 5V 2A
- **Charging Time:** 3 – 4 hours
- **Dimension:** 8.86 x 2.52 x 3.39 inches
- **Weight:** 830g

Product Usage Instructions

Button Configuration

The speaker comes with various buttons for different functions:

- Status indicator light
- Battery indicator light
- Power ON/OFF/Sound effect mode
- Switch modes/Reset
- Play/Pause/Answer/End a call
- Volume down/Previous track
- Volume up/Next track
- USB-C charging port

- TF-card slot
- Aux-in port

LED Indicator

The LED indicator provides information about the status and sound effects:

- Bluetooth light – Red and blue lights blink alternately when ready to connect.
- Sound effects indicator – Different colors for different sound modes.
- Battery Indicator – Alerts for low battery and charging status.

Button Operation

The button operations include functions like turning ON/OFF, switching modes, adjusting volume, and more.

Bluetooth Connection

1. Power on the speaker and enable Bluetooth on your device.
2. Select the speaker named “BOGASING-G4” from the device list.
3. Once connected, you will hear a prompt tone and the indicator light will glow solid.

Wired Connection

You can also connect your device to the speaker via a 3.5mm audio-in cable for a wired connection.

Multiple Play Modes

1. The speaker supports up to 128GB TF-card with supported music formats.
2. Insert the TF card into the slot for automatic playback.
3. Automatic mode switching when AUX or USB-C cable is plugged in.

FAQ

Q: How do I reset the speaker to factory settings

A: Press and hold the specified button until you hear a prompt tone to clear all paired devices or restore to factory settings.

Q: What is the charging time for the speaker

A: The speaker requires 3 - 4 hours for a full charge.

Q: Can I use the speaker while it's charging

A: Yes, you can use the speaker while it's charging via the USB-C port.

Thank you for purchasing the BOGASING-G4 Bluetooth speaker. Please read the User Manual before use and keep it properly for future reference. If you have any questions or comments, please contact us by email: bogasing@hotmail.com

 
Specifications



Model:	G4
Bluetooth Range:	Up to 18m/60ft (Unobstructed)
Output Power:	50W
Battery Capacity:	8000 mAh
Bluetooth Version:	5.3

Frequency Response:	48Hz-20KHz
Input Power:	5V 2A
Charging Time:	3 - 4 hours
Dimension:	8.86*2.52*3.39inch
Weight:	830g




Accessories

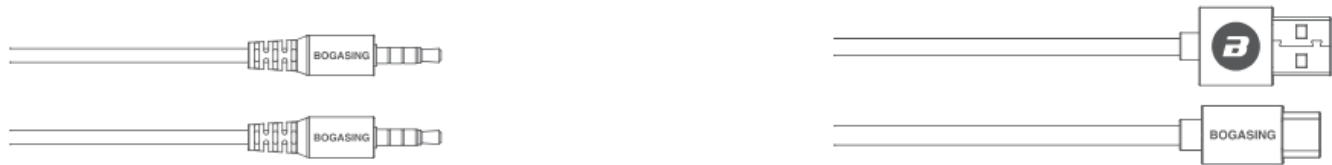

3.5 mm AUX cable

USB-C cable

   Button Configuration

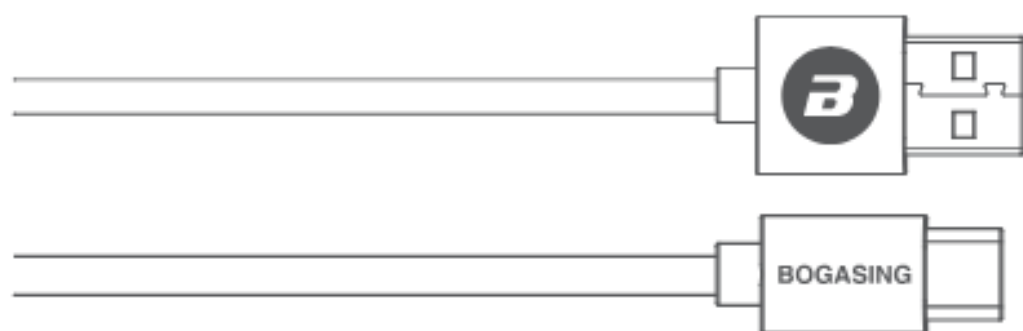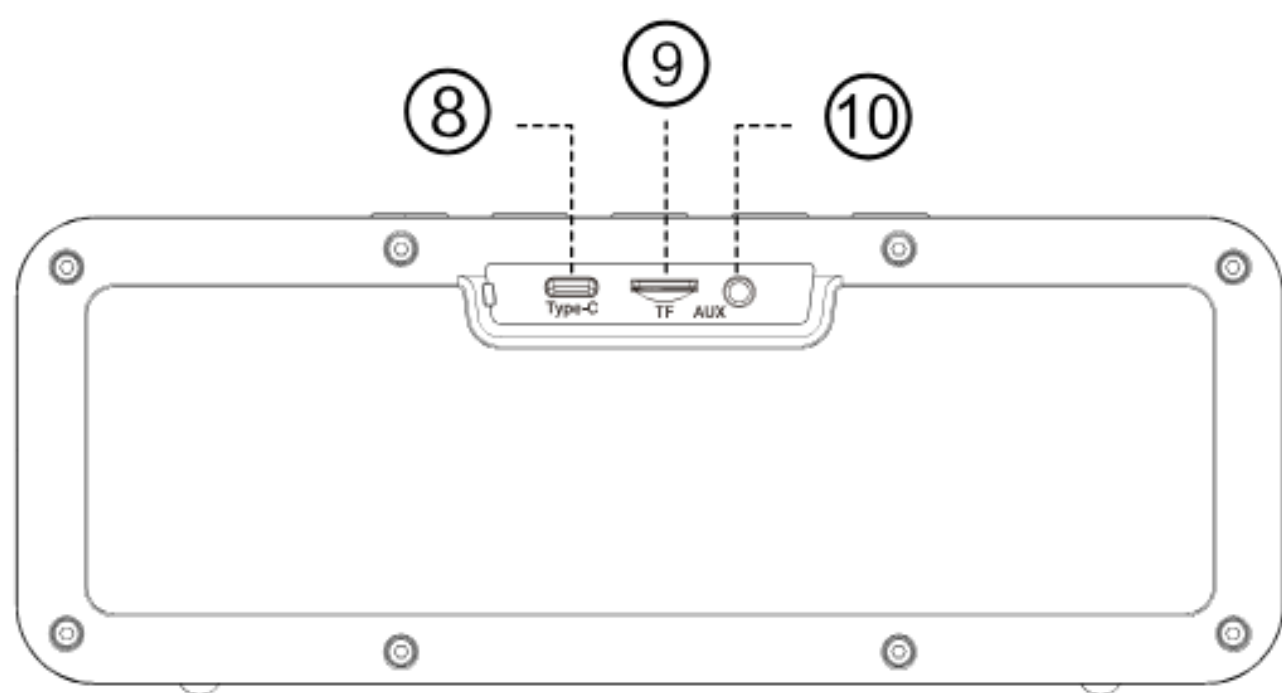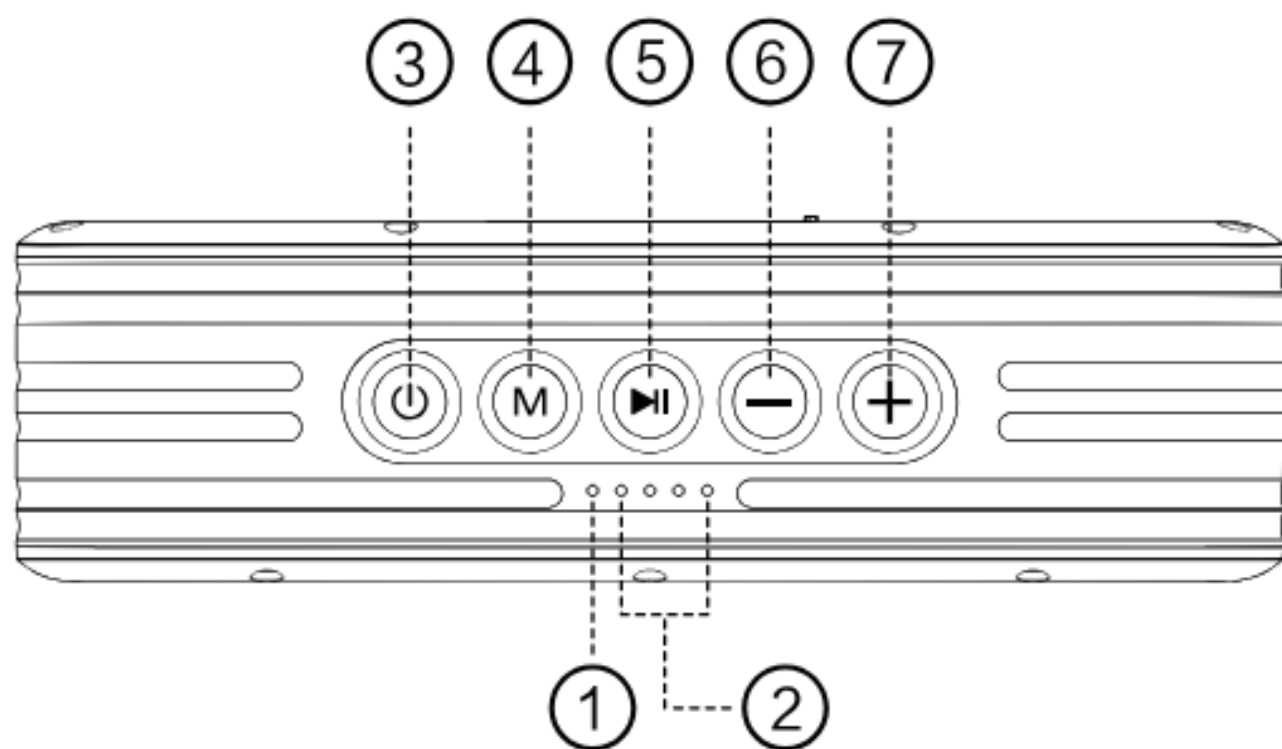


USB-C cable

1. Status indicator light
2. Battery indicator light
3. Power ON/OFF/Sound effect mode
4. Switch modes/Reset
5. Play/Pause/Answer/End a call
6. Volume down/Previous track
7. Volume up/Next track
8. USB-C charging port
9. TF-card slot
10. Aux-in port

LED Indicator

 - **Status Indicator**

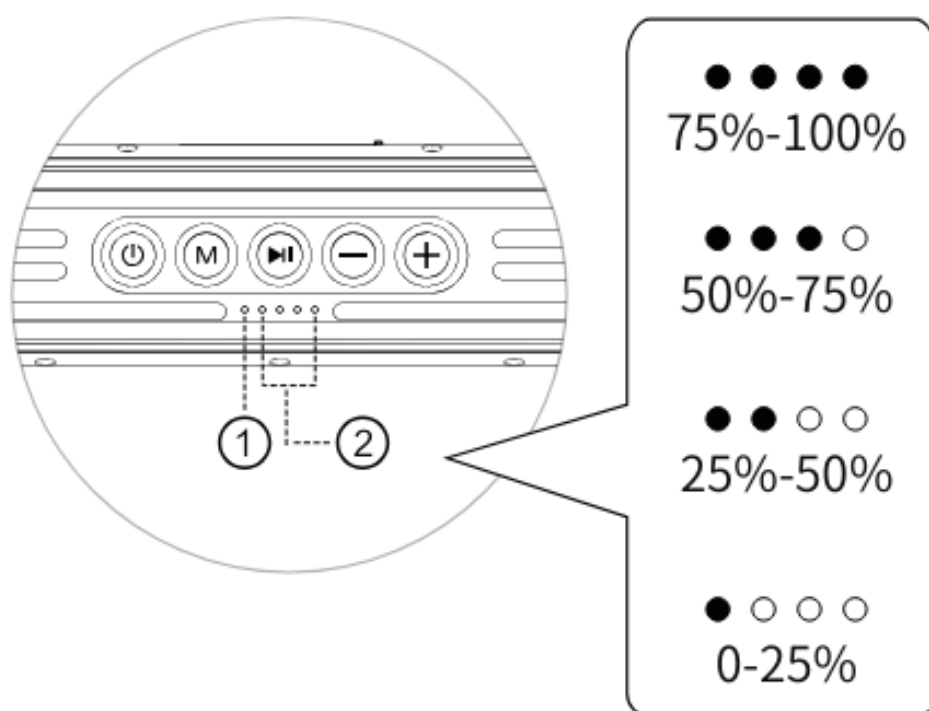

Bluetooth light

- **Ready to connect:** Red and blue lights blinking alternately;
- **Connected:** Glows solid.






Sound effects indicator

- **3D:** Glows solid blue
- **Vocal:** Glows solid red
- **Super Bass:** Glows solid green


(**Note:** The sound effect indicator has a memory function, and it will default to the last sound effect you used when connecting again.)

Battery Indicator

- When the battery runs low, the speaker make the sound of “beep beep” to prompt the speaker needs to be charged at this time.
- The battery light blinks while charging. When the battery is fully charged, the blinking stops and the battery light glows solid.


BUTTON	OPERATION	FUNCTION DESCRIPTION
	Press and hold	Turn ON/OFF.
	Press twice quickly	Enter into True Wireless Stereo (TWS) mode
	Press	Switch sound effect modes in turn (3D, Vocal, and Super Bass).
	Press	Switch the playing modes (Bluetooth, Aux-in, USB-C or TF-card)
	Press and hold	Press and hold it until you hear a prompt tone to clear all paired devices or restore to factory settings.
	Press	1. Play/Pause. 2. Answer the incoming calls. 3. End the current call.
	Press twice quickly	Call back the last call.
	Press and hold	1. Press and hold for 2s, decline an incoming call. 2. Press and hold for 3s, disconnect the bluetooth device.
	Press	Volume down, total 16 levels
	Press and hold	Previous track
	Press	Volume up, total 16 levels
	Press and hold	Next track

 Bluetooth Connection

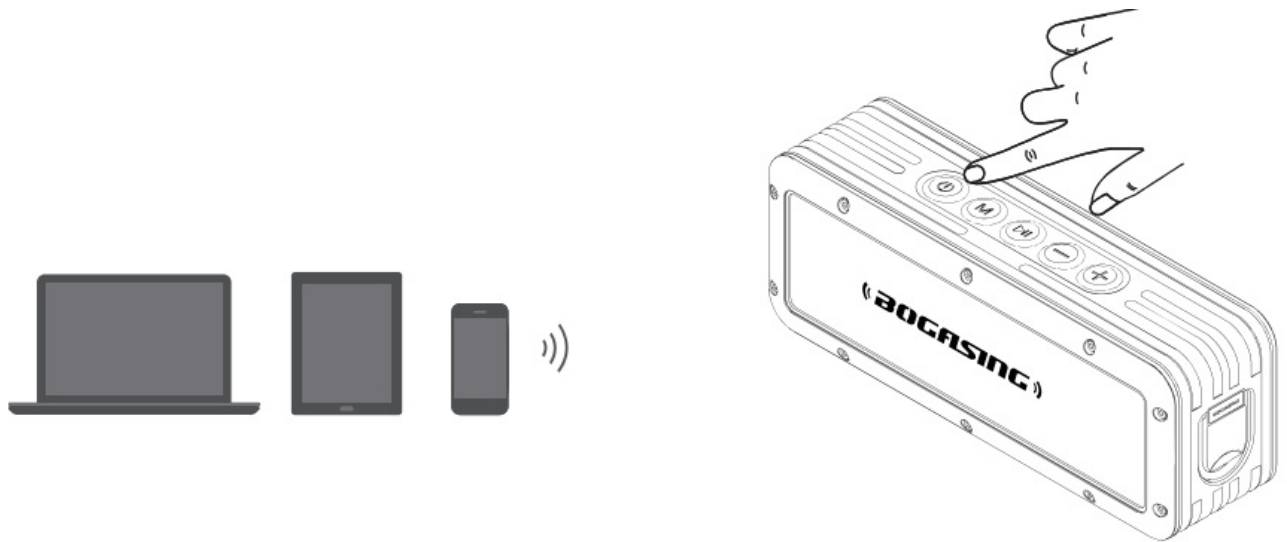

1. Power on the speaker and the indicator light blinking alternately between red and blue.
2. On your device, enable the Bluetooth feature. Select the speaker which named is "BOGASING-G4" from the device list.
3. Once connected, you will hear a prompt tone, and the indicator light will glow solid.

 Wired Connection

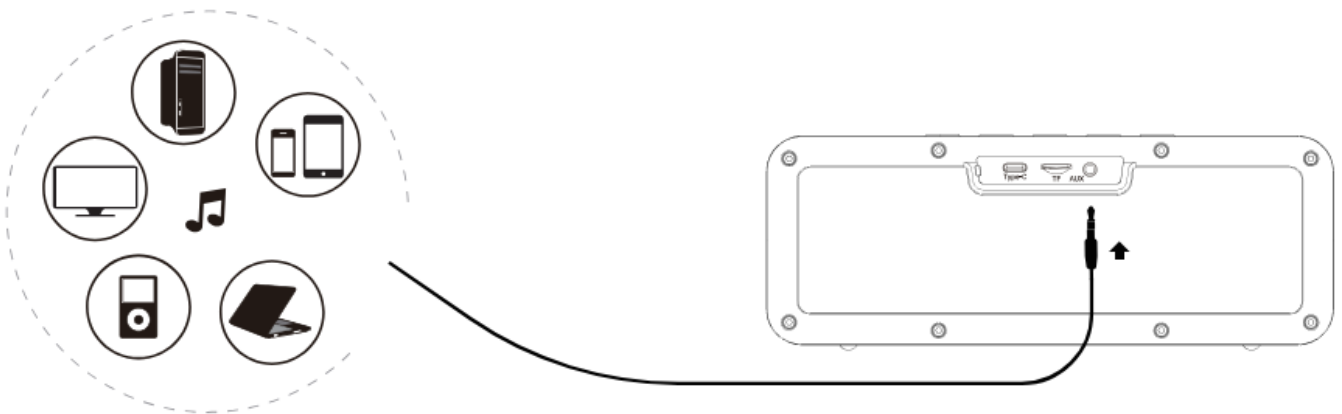

Connect your device with the speaker via 3.5mm audio in cable. When the aux cable is plugged in, play mode will automatically switch to AUDIO IN mode.

Multiple Play Modes

1. This speaker supports up to 128GB TF-card and supports music format: APE/FLAC/WAV/MP3.
2. Insert the TF card into the slot and automatically play the audio file in sequence after recognition.
3. When AUX or USB-C cable is plugged, play mode will automatically switch to AUDIO IN or USB-C mode. If the bluetooth is connected, press the " " button to switch the play mode.

TWS Pairing

1. Make sure both speakers are powered on and they are disconnected with other devices;
2. Press the " " button twice quickly on one of the speakers to enter TWS pairing mode;
3. After two speakers are paired, you will hear a prompt tone. At this time, the indicator light of the first speaker is

blinking, the other one is solid;

4. Enable the Bluetooth feature of your cell phone or other devices, find and connect the speaker which is named of "BOGASING-G4";
5. After the two speakers are successfully paired, it will automatically enter the TWS mode when the next time you turn ON, no need to re-pair;
6. If the speaker was ever paired with other speakers, Please press and hold the " " button to reset it. Restart the speaker after reset, and then refer to steps 1-4 to enter the TWS pairing.
7. In TWS mode, only the main speaker can be used for hands-free calling when there is a call, the other speaker has no sound.

Troubleshooting

Problem	Solution
Speaker does not charge	<ol style="list-style-type: none">1. Please use 5V/2A charger to charge the speaker, or try another charging source or cable.2. If your speaker has been exposed to high or low temperatures, let it return to room temperature and then try charging again.3. If you have not used it for a long time or the battery exhausted, please charge it for 20 minutes to activate the battery.4. Please charge it every three months if you do not use it for a long time.
Speaker does not connect with mobile device	<ol style="list-style-type: none">1. On your device:<ul style="list-style-type: none">– Disable and then enable the Bluetooth feature.– Delete your speaker from the Bluetooth list on your device, Connect again (see page 06).2. Connect a different device.3. Clear the speaker pairing list (Press and hold the "M" button to reset it). Connect again.
Problem	Solution
No sound or the volume abnormal	<ol style="list-style-type: none">1. Check the volume setting of the mobile device2. Reduce the volume to minimum on your speaker, and then increase it to maximum.3. Use a different music source.4. Connect a different mobile device
Stuck in Bluetooth mode while playing	<ol style="list-style-type: none">1. Make sure that the mobile device is within the effective transmission range of the Bluetooth speaker (18m/60ft), and that Bluetooth has been enabled on it.2. Make sure there are no obstacles between the speaker and the device, or no interference from other wireless signals.
Cannot be played in TF card mode	<ol style="list-style-type: none">1. Refer to the user manual to confirm if it is in TF card playback mode.2. Make sure the audio files in the memory card are supported by the speaker.
The speaker can't be operated	Press and hold the power button for 10 seconds to force shutdown.
Other issues	Contact BOGASING customer service at: bogasing@hotmail.com

Warranty Card

Dear customer, thank you for purchasing our products.
Please keep this warranty card properly in order to serve you better.

Maintenance records	Date	Malfunctions and causes
Product		
Model		
Name		
TEL/Phone		
Purchase date		
Address		

Enterprise Life Artificial Intelligence Yousong Industrial Park,

Yousong Community, Longhua District, Shenzhen, China

- Email: bogasing@hotmail.com



 
R 219 - 239060

RoHS



Made in China

Documents / Resources

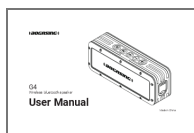

[BOGASING G4 Bluetooth Speaker](#) [pdf] User Manual
G4 Bluetooth Speaker, G4, Bluetooth Speaker, Speaker

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.