

BOGASING M5 Wireless Speaker User Manual

Home » BOGASING » BOGASING M5 Wireless Speaker User Manual



Contents

- 1 BOGASING M5 Wireless **Speaker**
- **2 Product Information**
- **3 Product Usage Instructions**
- 4 Specifications
- **5 Accessories**
- **6 Button Configuration**
- 7 Battery Life
- **8 Bluetooth Connection**
- 9 Multiple Play Modes
- **10 LED Indicator**
- 11 TWS Pairing
- 12 Troubleshooting
- **13 Warranty Card**
- 14 FCC Warnning
- 15 Documents / Resources
- **16 Related Posts**



BOGASING M5 Wireless Speaker



Product Information

The product is a device that complies with part 15 of the FCC Rules. It is designed to operate without causing any harmful interference and must accept any interference received, including interference that may cause undesired operation. The device is also compliant with FCC radiation exposure limits for an uncontrolled environment.

Product Usage Instructions

When using the product, it is important to note that any changes or modifications made to the device that are not explicitly approved by the manufacturer could void your authority to operate the equipment.

Additionally, the device should be installed and operated with a minimum distance of 0cm between the radiator and your body to comply with FCC radiation exposure limits. This means that the device should not be placed directly against your body when in use.

It is recommended to follow all instructions provided by the manufacturer to ensure proper operation of the device and to prevent any potential interference or harm caused by improper use.

If you have any questions or concerns regarding the usage of the product, please refer to the user manual or contact the manufacturer for further assistance.

 
Thank you for purchasing the BOGASING-M5 Bluetooth speaker. Please read the user manual before using and keep it for future reference. If you have any other questions or comments, please contact us by email: bogasing@hotmail.com

Specifications


Model:	M5
Bluetooth Version:	V5.3
Bluetooth Range:	Up to 18m/60ft (Unobstructed)
Output Power:	40W
Battery Capacity:	6000 mAh

Frequency Response:	50 Hz – 20kHz
Waterproof:	IPX7
Input:	5V 2A
Charging Time:	4 hours
Dimension:	6.30 × 2.99 × 2.79 in

Accessories




3.5mm AUX Cable

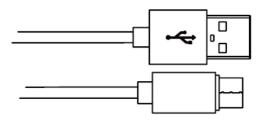

Type-C Charging Cable

Button Configuration

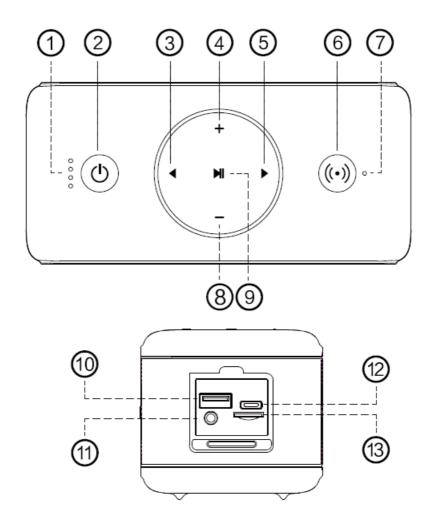

- 1. Battery indicator
- 2. Power ON/OFF/Switch playing modes
- 3. Previous track
- 4. Volume up
- 5.
- 6. Next track
- 7. TWS mode button/Switch sound effects
- 8. Bluetooth indicator
- 9. Volume down
- 10. Play/Pause/Answer/End a call
- 11. USB flash drive port
- 12. Aux-in port

14. TF-card slot

BUTTON	OPERATION	FUNCTION DESCRIPTION	
ds	Press and hold	Turn ON/OFF.	
Press		Switch the playing modes (Bluetooth, USB flash drive, TF-card or Aux-in).	
	Press	Switch sound effect modes in turn (3D, Vocal, and Super Bass).	
((•))	Press and hold	Press and hold for 8s until you hear a prompt tone to clear all paired devices or restore to factory settings.	
Press twice quick l y		Enter into True Wireless Stereo (TWS) mode.	
	Press	 Play/Pause. Answer the incoming calls. End the current call. 	
M	Press and hold	 Press and hold for 2s, disconnect the bluetooth device. Press and hold for 2s, decline an incoming call. 	
	Press twice quickly	Call back the last call.	
-	Press	Volume down,total 16 levels	
+	Press	Volume up,total 16 levels	
•	Press	Previous track	
•	Press	Next track	

Battery Life

Playtime	Volume
Up to 30 hours	10% - 30%
Up to 20 hours	30% - 60%
Up to 10 hours	60% - 100%

Note: Playtime varies according to volume and audio content.

Bluetooth Connection

1. Power on the speaker and the indicator light blinking blue.

- 2. On your device, enable the Bluetooth feature. Select the speaker which named is "BOGASING M5" from the device list.
- 3. Once connected, you will hear a prompt tone and the indicator light glows solid blue.

Multiple Play Modes

- 1. This speaker supports up to 128GB TF-card/USB Flash drive; Supports music format: APE/FLAC /WAV/MP3.
- 2. Insert the TF card or USB flash drive into the slot and automatically play the audio file in order after recognition.
- 3. Press the () " button to switch the playing mode to Bluetooth, USB flash drive, TF-card or Aux-in.

Note: Due to the additional USB Flash drive playback mode, TYPE-C will no longer support playback, only charging


LED Indicator

Battery Indicator

- When the battery runs low, the speaker will "beep beep" to prompt the speaker needs to be charged at this
 time.
- While charging, the last-lit battery indicator is blinking orange. when the speaker is fully charge, all battery indicators glows solid orange.

Status indicator

- a. Bluetooth light
 - Ready to connect: Blue light blinking;
 - Connected: Glows solid blue.
- **b.** Sound effects indicator
 - 3D: Glows solid blue
 - Vocal: Glows solid orange
 - Super Bass: Glows solid green

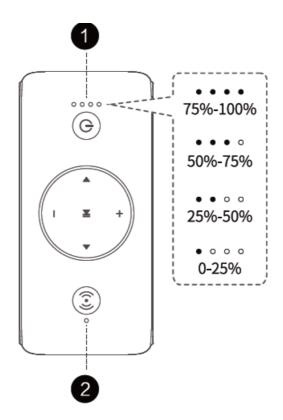

Note: The sound effect indicator has a memory function, and it will default to the last sound effect you! used when connecting again.

TWS Pairing

- 1. Make sure both speakers are powered on and they are disconnect with other devices;
- 2. Press the" ((•)) " button twice quickly on one of the speakers to enter TWS pairing mode;
- 3. After two speakers are paired, you will hear a prompt tone. At this time, the indicator light of the first speaker is blinking, the other one is solid;
- 4. Enable the Bluetooth feature of your cell phone or other devices, find and connect the speaker which named of "BOGASING M5";
- 5. After the two speakers are successfully paired, it will automatically enter the TWS mode when the next time you turning ON, no need to re-pair;
- 6. If the speaker was ever paired with other speakers, Please Press and hold the " () " button for 8s to reset it. Restart the speaker after reset, and then refer to steps 1-4 to enter the TWS pairing.
- 7. In TWS mode, only the main speaker can be use for hands-free calling when there is a call, the other speaker has no sound

Troubleshooting

Problem	Solution
Speaker does not charge	 Please use 5V == 2A charger to charge the speaker, or try another charging source or cable. If your speaker has been exposed to high or low temperatures, let it return to room temperature and then try charging again. If you have not used it for a long time or the battery exhausted, please charge it for 20 minutes to activate the battery. Please charge it every three months if you do not use it for a long time.
Speaker does not connect with mobile device	 On your device: Disable and then enable the Bluetooth feature. Delete your speaker from the Bluetooth list on your device, Connect again (see page 06). Connect a different device. Clear the speaker pairing list (Press and hold the " (**) " button to reset it). Connect again.

Problem	Solution
No sound or the volume abnormal	 Check the volume setting of the mobile device Reduce the volume to minimum on your speaker, and then increase it to maximum. Use a different music source. Connect a different mobile device
Stuck in Bluetooth mode while playing	 Make sure that the mobile device is within the effective transmission range of the Bluetooth speaker (18m/60ft), and that Bluetooth has been enabled on it. Make sure there are no obstacles between the speaker and the device, or no interference from other wireless signals.
Cannot be played in TF card mode	 Refer to the user manual to confirm if it is in TF card playback mode. Make sure the audio files on the TF card or USB flash drive are supported by the speaker.
The speaker can't be operated	Press and hold the " (1) " button for 8 seconds to force shutdown.
Other issues	Contact BOGASING customer service at: bogasing@hotmail.com

Warranty Card

- Dear customer, thank you for purchasing our products.
- Please keep this warranty card properly in order to serve you better.

	Date	Malfunctions and causes
Maintenance records		
Product		
Model		
Your name		
Your phone		
Purchase date		
Your address		

FCC Warnning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- · Reorient or relocate the receiving antenna.
- • Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

- 1. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
- 2. This device may not cause harmful interference, this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

SHENZHEN BOGASING TECHNOLOGY CO.,LTD.

Enterprise Life Artificial Intelligence Yousong Industrial Park, Yousong Community, Longhua District, Shenzhen, China

Email: bogasing@hotmail.com



BOGASING M5 Wireless Speaker [pdf] User Manual 2AZPW-M5, 2AZPWM5, m5, M5, Wireless Speaker, M5 Wireless Speaker, Speaker

Manuals+,