



BONTEMPI 16 5415 54 Key Digital Keyboard Owner's Manual

[Home](#) » [BONTEMPI](#) » BONTEMPI 16 5415 54 Key Digital Keyboard Owner's Manual 

BONTEMPI 16 5415 54 Key Digital Keyboard Owner's Manual




Contents

- [1 POWER SUPPLY](#)
- [2 BATTERY SUPPLY](#)
- [3 CONTROL PANEL](#)
- [4 SOCKETS](#)
- [5 TECHNICAL CHARACTERISTICS](#)
- [6 DIRECTIONS ON THE KEYBOARD](#)
- [7 HOW TO USE THE KEYBOARD](#)
- [8 HOW TO PLAY THE SONG IN EASY MODE](#)
- [9 TROUBLE SHOOTING GUIDE](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

POWER SUPPLY

MAINS SUPPLY

The instrument can be supplied by the AC/DC (Vdc =9V / I = 500 mA) positive central adapter (supplied) conforms to national and international safety regulations covering electrical appliances. Insert the jack in the DC 9V socket.

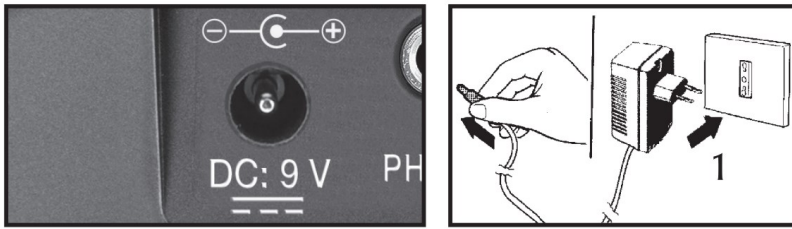

RECOMMENDATIONS: The socket (1) for the adapter plug must be easily accessible.


- Inserting the plug into the socket at the back of the instrument automatically cuts off supply from the batteries.
- Ensure that the adapter is sufficiently ventilated
- Do not expose the adapter to drops or splashes of water.
- The AC/DC adaptor shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- The AC/DC adaptor is used as disconnect device.
- The AC/DC adaptor of apparatus should not be obstructed OR should be easily accessed during intended used.
- To be completely disconnect the power input, the AC/DC adaptor of apparatus shall be disconnected from the mains.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- minimum distances 15cm around the apparatus for sufficient ventilations.
- The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- No naked flame sources such as lighted candles should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- The apparatus should only be used in moderate climates.

WARNING: All batteries or transformers with safety insulation must be checked regularly for faults in cable, wire, or plug insulation or other parts.

NOTE: Rating plate information was located at bottom enclosure of the apparatus.

BATTERY SUPPLY

This instrument works with six 1.5V IEC R6 /AA batteries (not supplied) which are inserted in the housing at the bottom. To open press on the part of the lid marked OPEN. Fit the batteries as shown at the bottom of the housing.

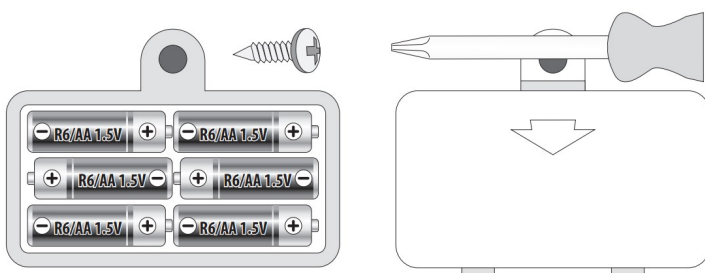

ADVICE ON USING THE BATTERIES

- Non-rechargeable batteries are NOT to be recharged.
- Rechargeable batteries must be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and old batteries are not to be mixed.
- Use only batteries of the same or equivalent type.
- Batteries are to be inserted with correct polarity.
- Remove exhausted batteries to prevent leakage.
- Do not short circuit supply terminals.
- Remove batteries during long periods of non-use.

WASTE DISPOSAL STANDARDS

For information regarding the disposal of the items mentioned here below, please refer to Council Administration office regarding specialised waste collection centres.

1. DISPOSAL OF BATTERIES



Protect the environment by disposing of batteries in the special containers provided for this use.

2. PACKAGING DISPOSAL


Take the paper, cardboard and corrugated board to the appropriate waste collection centres. Plastic material must be placed in the relevant collection containers. The symbols indicating the various types of plastic are:



3. DISPOSING OF ELECTRICAL APPLIANCES

The wheellie bin symbol with a cross indicates that the product must not be disposed of in the domestic waste at the end of its useful life. Instead, it should be taken to your nearest designated collection point or recycling facility. Alternatively, check with your retailer and return the product when buying a replacement, on a one-to-one basis or as free of charge in case the size is smaller than 25 cm. Appropriate disposal promotes the recycling of parts and materials, as well as helping to protect the environment and human health. Under current legislation, strict penalties are enforced against those disposing of products illegally. For more information about the collection of special waste, contact your Local Authority.

CONTROL PANEL

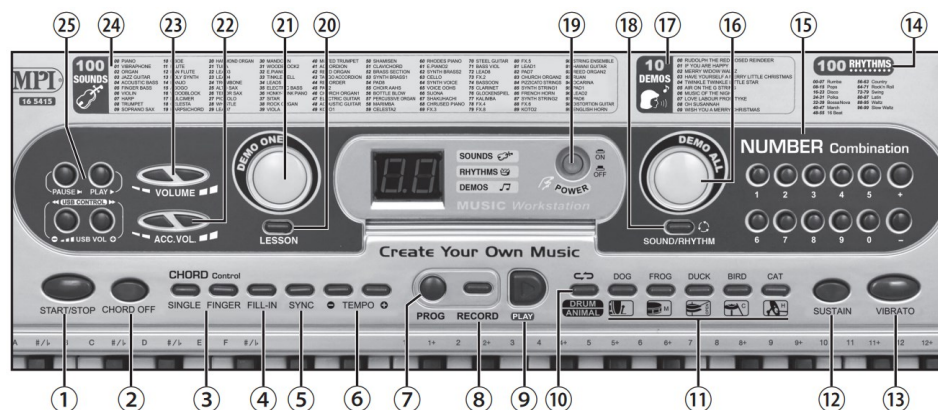

1. START/STOP -Starts/Stops a rhythm or a song
2. CHORD OFF -Disables the arrangement of a rhythm style
3. SINGLE -Enables composition of chords on the left side of the keyboard according to the easy method
4. FILL-IN -Enters a rhythmic variation
5. SYNC -Enables automatic accompaniment, in Single mode, after composing a chord
6. TEMPO +/- -Sets the tempo for style performance and songs.
7. PROG -Records a rhythmic sequence or animal voices
8. RECORD -Records what is being played
9. PLAY -Plays what has been recorded
10. DRUM/ANIMAL -Selection of rhythm instruments or animal voices
11. Rhythm instruments or animal voices
12. SUSTAIN -Enables or disables the SUSTAIN function (prolonged sound)
13. VIBRATO -Enables or disables the VIBRATO function (sound modulation)
14. 100 RHYTHMS -Rhythms list
15. NUMBER Combination – To select functions, rhythms, songs and sounds
16. DEMO ALL -To listen to all pre-recorded songs in sequence
17. 10 DEMOS -Songs list
18. SOUND/RHYTHM -To select the sounds or the rhythms on the keyboard
19. POWER ON/OFF -Turns the instrument on and off
20. LESSON -Learning level following a pre-recorded melody
21. DEMO ONE -To listen to a pre-recorded song in sequence
22. ACC +/- -Adjusts the accompaniment volume
23. VOLUME +/- -Sets the master volume
24. 100 SOUNDS -Sounds list
25. USB Play-Pause-Vol -Adjusts MP3 songs read by the USB port.

SOCKETS



DC 9 V -Socket for adapter (included).

PHONE -Socket for headphones (not included).

AUDIO IN -Socket for external audio source (MP3 player, smartphone etc.)

MIC -Socket for condenser microphone (not included).

USB -Socket for connecting a USB Flash Drive.

TECHNICAL CHARACTERISTICS

KEYBOARD: 54 Keys (C-F)

DISPLAY: 2 Digit 100 SOUNDS

EFFECTS: Sustain and Vibrato 100 RHYTHMS

REC and PLAY to record and listen

EASY CHORDS

SONGS: 10 pre-recorded songs

General controls: Master Volume, Tempo +/-, Accompaniment Volume

USB player controls: Volume, next or previous song selection, pause

POWER SUPPLY: 6 x 1,5 Volt IEC R6/AA batteries AC/DC Adapter – Input Vdc = 9 V / I = 500 mA

PHONE –Socket for headphones (not included).

AUDIO IN -Socket for external audio source (MP3 player, smartphone etc.)

MIC: Socket for condenser microphone

DIMENSIONS: 695 x 230 x 65 mm

DIRECTIONS ON THE KEYBOARD

Letters and numbers to play easily

Numbers 1 to 18 indicate the keys to play a melody with the easy musical scores at the end of this manual. The letters on the left indicate the name of the notes in order to compose a chord in SINGLE Chord and CLASSIC Chord mode (refer to the relative section).



 
HOW TO USE THE KEYBOARD

SWITCH ON AND SWITCH OFF



Move the switch to the POWER ON/OFF position to turn the instrument on or off. When turned on, the keyboard is set to operate with the Piano sound, the Rumba rhythm and the song Rudolph the red nosed reindeer.

DEMO – Demo song

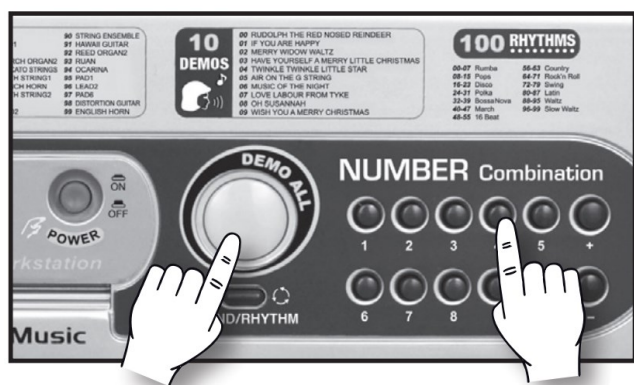

The instrument has 10 pre-recorded songs. Press DEMO ONE to hear the song in sequence; the display indicates the song number (e.g.: d1). Press DEMO ONE again to hear the next song. Press START/STOP button ① to stop the song. The DEMO ALL button plays all 10 songs in sequence. Press DEMO ALL again to stop the song. When a song is playing, press +/- to select the next or previous one, or enter a number from 0 to 09 to select one from the “10 DEMOS” list .

VOLUME



To regulate the volume of the instrument you must use buttons VOLUME + (to turn up) or VOLUME – (to turn down) .

SOUNDS



To select one of the 100 sounds recorded in the instrument, press SOUND/RHYTHM and enter a number from 0 to 99 to select one from the list of 100 SOUNDS ; the display shows a dot after the first digit, indicating that you are selecting sounds. To select the next or previous sound, press +/- from the numerical keyboard .

Sustain



Prolongs the sound of a note when the key is released. To enable or disable this function, press SUSTAIN .

Vibrato

The vibrato effect is a sound modulation. To enable or disable this function, press VIBRATO .

RHYTHM SELECTION




The keyboard has 100 rhythms recorded. To select them, press SOUND/RHYTHM followed by a number from 0 to 99 to select one from the list of 100 RHYTHMS; the display shows a dot after the second digit, indicating that you are selecting rhythms. To start or to stop a rhythm press the START/STOP button ①. To increase or decrease the speed of the song press the two buttons TEMPO + and TEMPO – ⑥. By holding the button pressed down, the variation becomes continuous. To go back to standard rhythm press buttons TEMPO + and TEMPO – together. The TEMPO + / – buttons are also used to adjust the speed of a demo.

FILL-IN



Pressing this button ④ while a rhythm is playing, reproduces a rhythmic variation of the drums.

SINGLE CHORD (easy chord)

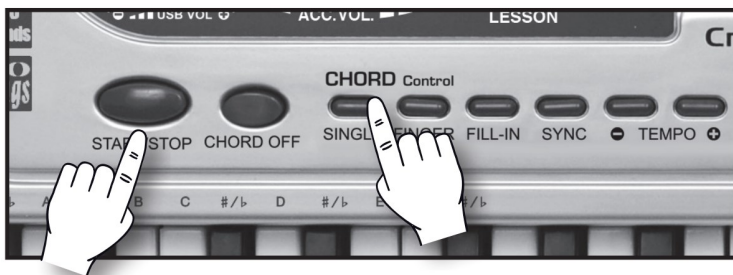

To compose the simplified chords, play a rhythm by pressing START/STOP ① : press SINGLE ③ for the keyboard to automatically be split into two sections. This way, it is possible to compose chords on the left side (from C1 to F#2) in easy mode with one, two or three fingers (refer to the SINGLE CHORD table at the end of this manual).

SYNC



In SINGLE CHORD mode, instead of pressing START/STOP, press SYNC ⑤, in this way the rhythm will start after composing the chord.

CHORD OFF

When using chords in SINGLE mode, pressing CHORD OFF ② will exclude automatic arrangement

CLASSIC CHORD

It is possible to compose chords in classic mode (refer to the CLASSIC CHORD at the end of this manual).

Percussion / animal voices




By pressing the button DRUM/ANIMAL ⑩ you can alternatively utilize the 5 pads either to play percussion instruments (DRUM) or to reproduce the animal voices (ANIMAL).

Programming rhythm / animal voices



This function enables you to record a rhythmic sequence or a sequence of animal voices. To programme, press PROG ⑦ and compose with the pads at least 16 percussion instruments or animal voices (the letter “P” flashes on the display); press PLAY ⑨ to listen to the programming again and adjust rhythm speed by pressing TEMPO + or TEMPO – ⑥ . To stop playing, press PROG ⑦ or START/STOP ① . The programming is not memorised.

LESSON

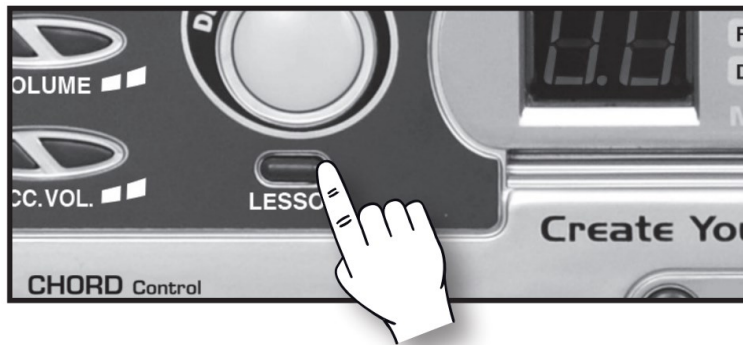

Press LESSON ; the letter (d) will appear on the display. Choose one of 10 pre-recorded songs by pressing a white key on the keyboard: the display shows the selected song number and plays the backing track. Now try to play the melody of the song by casually and repeatedly pressing one or more keys on the keyboard, trying to keep tempo with the orchestra. Press LESSON again to exit the mode.



RECORD/PLAYBACK FUNCTION



This function enables you to record and playback a tune played on the keyboard. Press RECORD ® before playing a tune. When you have finished press PLAY © to listen to the tune.

USB Player



This keyboard enables you to read MP3 songs on a USB Flash drive (Pen Drive) when it is connected to a USB port at the back of the instrument. After connecting the device, the first song will automatically start playing and will be heard from the speakers on the keyboard. To adjust the volume, keep the PAUSE PLAY button pressed; to pause the song, press PAUSE PAUSE or PLAYPLAY ; to go to the next or previous song, press PAUSE PLAY .

COMPOSING A SONG

Each song is printed on a separate page.

Under the title there is information regarding:

SOUND: the sound needed to create the tune

RHYTHM: the rhythm of the song

TEMPO: the speed of the song



You can use this information to configure the keyboard and play the song at its best. This manual tells you how to select sound, rhythm and tempo.

MARY HAD A LITTLE LA MB			


The song also indicates:

SINGLE CHORD: the easy chords for song accompaniment

CLASSIC CHORD: the classic chords for song accompaniment

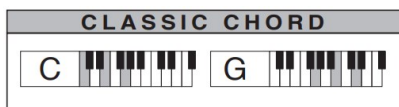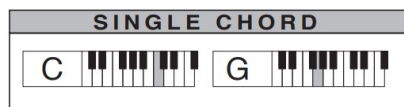


The song is marked by a continuous grey strip that indicates the numbers used to play the melody with your right hand. Each key must be pressed for some time, depending on the distance that separates each number on the grey strip from the next

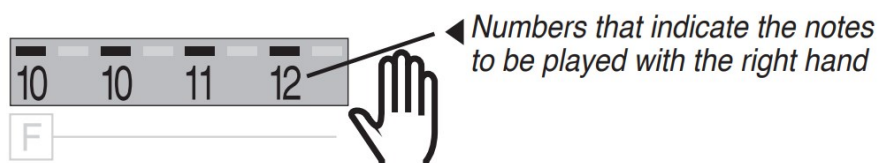


Basically, above the numbers you will notice a sequence of alternating black and grey sections within the grey strip. The distance between one black section and another represents the unit of musical time known as “beat”,


which corresponds to the movement of the metronome pointer from one end to the other. Every black and grey section represents a half “beat”.

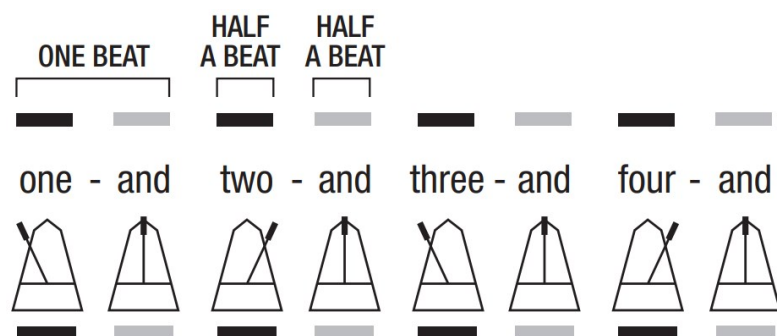

The instructions (meaning squares with letters) are found under this strip in order to use your left hand to play the accompaniment chords.

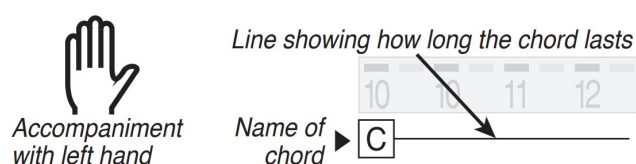

All musical notes of the song, which use classical wording, are under the grey strip.

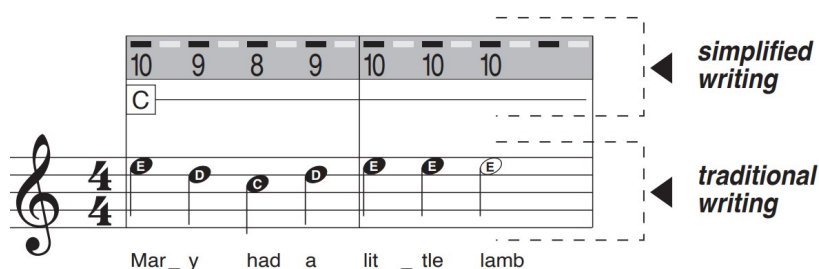

For now, it is sufficient to remember that each note has a name: A, B, C, D, E, F, G, in anglo-saxon notation which correspond to LA, SI, DO, RE, MI, FA, SOL, in Latin notation and A, H, C, D, E, F, G, in German notation. This correspondence is illustrated on the next diagram.

HOW TO PLAY THE SONG IN EASY MODE

MELODY

Each note corresponds to a number on the grey strip. However, as you can see, there is a number on each note as well. This will help you to find the right key easily



To play the melody, read the sequence of numbers contained in the grey band and press, one after the other, the white keys which correspond to the same numbers on the strip above the keyboard. The black keys correspond to the numbers for example on the music method grey band followed by the “+”. The black key after white key 1 corresponds to the symbol 1+. Now that you know which key corresponds to which note, try and play the tune following the numbers on the grey strip.


CHORDS

To use accompaniment, press each chord with SINGLE or CLASSIC mode for the time indicated by the line next to the letter that represents the chord, until you come to the next one.

TROUBLE SHOOTING GUIDE

Problem	Solution
The instrument does not play or the sound is distorted.	Batteries discharged – insert new batteries. Batteries inserted incorrectly – check. Mains adapter not suitable.
The instrument switches on or off when keys are pressed.	Batteries discharged – insert new batteries.
The display does not light up.	Check the batteries or the mains adapter.
ATTENTION: In the event of malfunction, remove the batteries and then reinsert them.	ATTENTION: In the event of malfunction, remove the batteries and then reinsert them.

Documents / Resources

	<p>BONTEMPI 16 5415 54 Key Digital Keyboard [pdf] Owner's Manual</p> <p>16 5415 54 Key Digital Keyboard, 16 5415, 54 Key Digital Keyboard, Digital Keyboard, Keyboard</p>
--	---

References

- [B Bontempi - Home](#)