Boori BK-TISBC Tidy Storage Bookcase





Boori BK-TISBC Tidy Storage Bookcase Instruction Manual

Home » Boori » Boori BK-TISBC Tidy Storage Bookcase Instruction Manual

Contents

- 1 Boori BK-TISBC Tidy Storage
- **Bookcase**
- 2 Hardware
- **3 Parts List**
- 4 Assembly
- **5 Boori Care Instructions**
- **6 Boori Warranty**
- **7 Boori Care Instructions**
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts



Boori BK-TISBC Tidy Storage Bookcase



IMPORTANT:

PLEASE READ THE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE


Boori Australia Pty Ltd

- 11/4 Southridge Street Eastern Creek NSW 2766
- Tel: +61 2 9833 3769
- www.boori.com.au


Boori (Europe) Ltd

- Unit 1 Riverside House, Mill Lane, Newbury, Berkshire, RG14 5QS UK
- Tel: +44 016 3529 5670
- www.boori.co.uk

Hardware

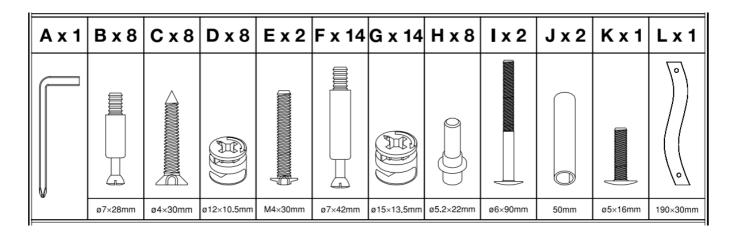



Parts List

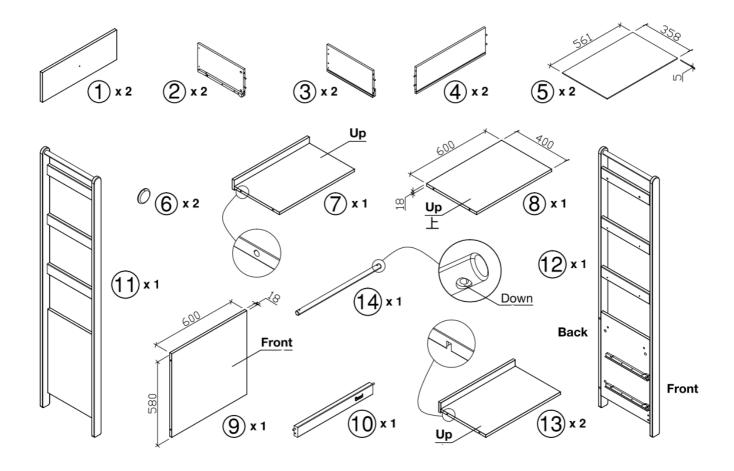



Note: Use only spare parts approved by the manufacturer.


Assembly

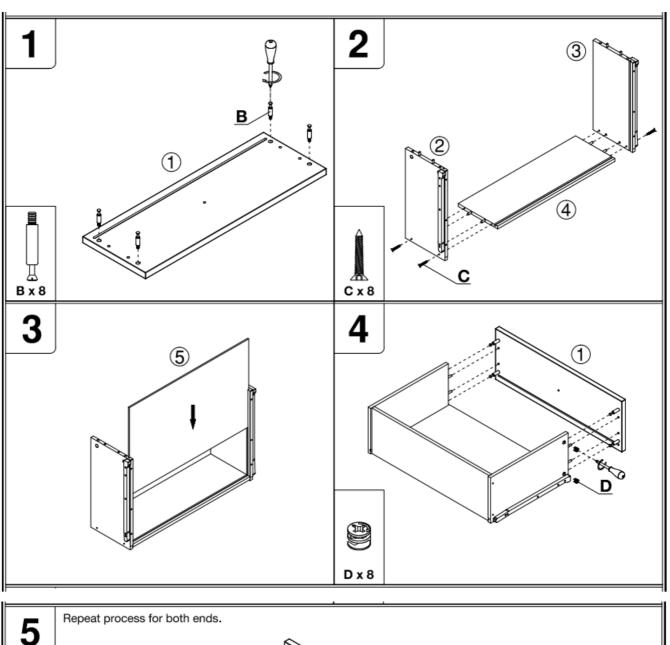


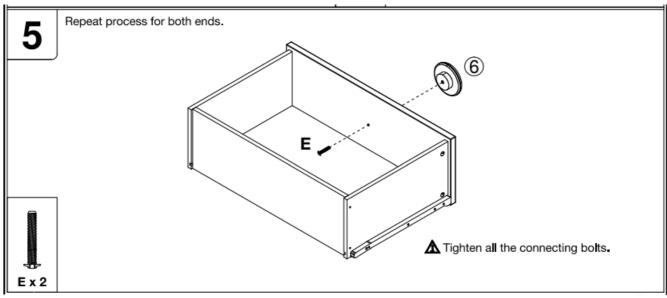

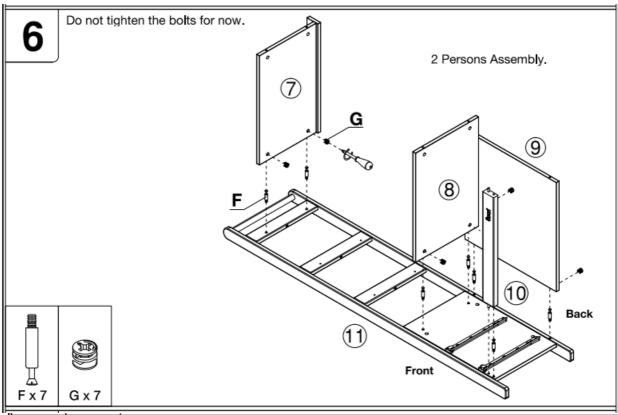

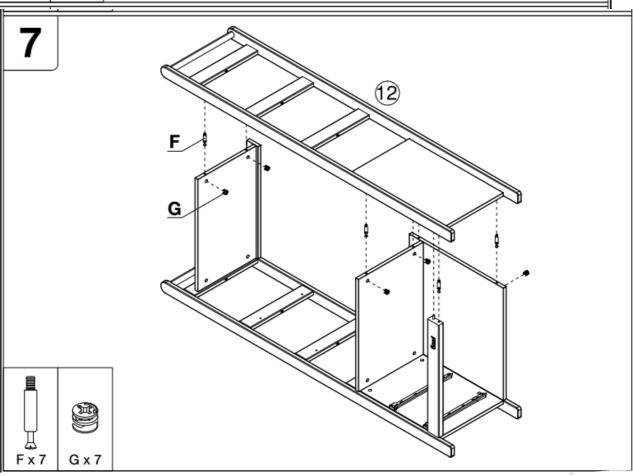

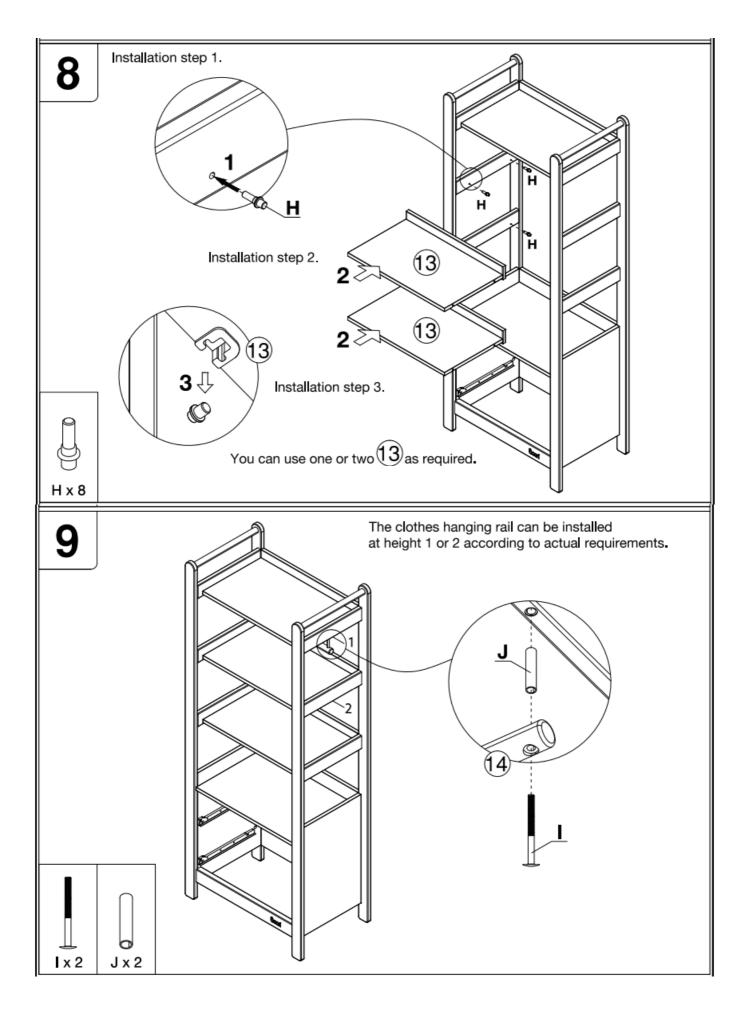


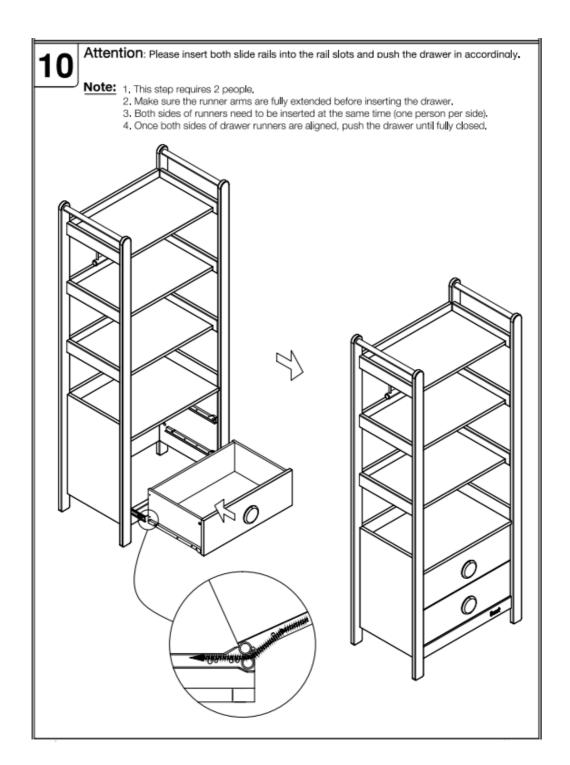

Attention: Please insert both slide rails into the rail slots and push the drawer in accordingly.

Note:

- 1. This step requires 2 people.
- 2. Make sure the runner arms are fully extended before inserting the drawer.
- 3. Both sides of runners need to be inserted at the same time (one person per side).
- 4. Once both sides of the drawer runners are aligned, push the drawer until fully closed.

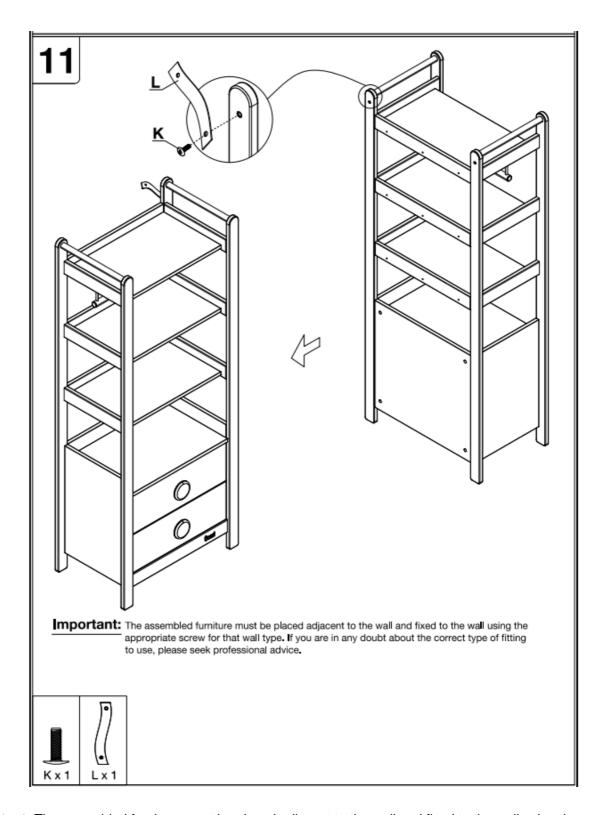

Important: The assembled furniture must be placed adjacent to the wall and fixed to the wall using the appropriate screw for that wall type. If you are in any doubt about the correct type of fitting to use, please seek professional advice.

Boori Care Instructions

Congratulations and thank you for choosing Boori products). The furniture you have purchased is constructed from high quality materials for strength and durability. Here are some tips on how you can preserve its beauty for a long time.

- 1. Do not expose furniture to strong sunlight, direct heat sources, extreme changes in temperature or moisture.
- 2. Wipe up spills immediately with a soft, clean cloth.

- 3. Urine spills on furniture can cause discoloration.
- 4. Clean furniture by wiping the surface with a soft cloth dampened with water.
- 5. If necessary clean furniture using a mild soap solution and wipe clean with a soft cloth dampened with water and then dry with soft clean cloth.
- 6. Do not use strong household cleaners.
- 7. Always wipe in the direction of the grain in the wood do not wipe in a circular motion.
- 8. Avoid contact with sharp objects, or containers containing hot liquid.
- 9. Avoid contact with 'rubber feet' on items such as radios, computers, telephones etc. Use a felt mat (not plastic) to protect furniture surfaces.
- 10. Do not open more than one drawer at a time.
- 11. When moving furniture do not drag always lift and place in position.

Boori Warranty

- All Boori wood products carry a full three (3) years manufacturer's warranty as testimony to the quality and longevity of the range. This warranty excludes general wear & tear and damage caused, by the product not being used in accordance with its instructions or the care instructions.
- During this guarantee period Boori will replace or repair any defective part. In the event of a product being replaced, as a whole unit or part thereof during the guarantee period, the guarantee on the replacement will expire three (3) years from the original purchase date.
- This guarantee excludes accidental damage, misuse and or improper transporting and handling,
- The warranty is void if the original product has been altered in design or colour in anyway. All warranty claims must be lodged at the place of original purchase and proof of purchase must be provided in order to lodge a warranty claim.

Warranty against defects

For Australia only (updated 01/16/2019) Boori Australia Pty Ltd 26 Peter Brock Drive Eastern Creek Sydney NSW 2766 Australia

PH: (61 2) 9833 3769 FAX:(61 2) 9673 4240

ABN: 43 160 962 354

Boori Care Instructions

Congratulations and thank you for choosing Boori products). The furniture you have purchased is constructed from high quality materials for strength and durability. Here are some tips on how you can preserve its beauty for a long time.

- 1. Do not expose furniture to strong sunlight, direct heat sources, extreme changes in temperature or moisture.
- 2. Wipe up spills immediately with a soft, clean cloth.
- 3. Urine spills on furniture can cause discoloration.
- 4. Clean furniture by wiping the surface with a soft cloth dampened with water.
- 5. If necessary clean furniture using a mild soap solution and wipe clean with a soft cloth dampened with water and then dry with soft clean cloth.
- 6. Do not use strong household cleaners.
- 7. Always wipe in the direction of the grain in the wood do not wipe in a circular motion.
- 8. Avoid contact with sharp objects, or containers containing hot liquid.

- 9. Avoid contact with 'rubber feet' on items such as radios, computers, telephones etc. Use a felt mat (not plastic) to protect furniture surfaces.
- 10. Do not open more than one drawer at a time.
- 11. When moving furniture do not drag, always lift and place in position.

Boori Warranty ("this Warranty")

All Boori Collection wood products ("Boori Wood Products") carry a full three (3) years manufacturer's warranty ("Warranty Period" to the end-purchaser ("the Customer") as testimony to the quality and longevity of the range. This warranty excludes general wear & tear and damage caused, by the Boori Product not being used in accordance with its instructions or the care instructions. During this Warranty Period Boori Australia Pty Ltd (ABN 43 160 962 354) ("Boori") will replace or repair any defective part. In the event of a Boori Product being replaced, as a whole unit or part thereof during the Warranty Period, the warranty on the replacement will expire three (3) years from the original purchase date. This guarantee excludes accidental damage, misuse and or improper transporting and handling. The warranty is void if the original Boori Product has been altered in design or colour in anyway.

All warranty claims must be lodged:

- 1. at the place of original purchase as set out on your receipt for purchase of the Boori Products or you may contact Boori on 9833 3769 to obtain further details; and
- 2. together with a proof of purchase. Where the Customer makes a claim pursuant to this Warranty, all expenses incurred in sending the Boori Products to Boori are the Customer's responsibility. Boori's liability in respect of a breach of a consumer guarantee or any warranty made under this

Warranty for any Boori Products not of a kind ordinarily acquired for personal, domestic or household use is limited, in relation to the Boori Products to the extent permissible by law and at it's option to:

- 1. replacing the Boori Products or the supply of equivalent Boori Products;
- 2. the repair of the Boori Products;
- 3. the payment of the cost of replacing the Boori Products or of acquiring equivalent goods; or
- 4. the payment of the cost of having the Boori Products repaired.

To the extent permitted by law, all other warranties whether implied or otherwise, not set out in this Warranty are excluded and Boori is not liable in contract, tort (including, without limitation, negligence or breach of statutory duty or otherwise to compensate the Customer for:

- 1. any increased costs or expenses;
- 2. any loss of profit, revenue, business, contracts or anticipated savings;
- 3. any loss or expense resulting from a claim by a third party; or
- 4. any special, indirect or consequential loss or damage of any nature whatsoever caused by the Customer's failure in complying with its obligations.

Limitations on Warranty Disclaimers

- In the following paragraph, 'Our' means 'Boori", 'You' means 'the Customer' and 'goods' means 'Boori Products':
- Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

- You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably
 foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be
 of acceptable quality and the failure does not amount to a major failure.
- The benefits given to the Customer in this Warranty are in addition to other rights and remedies under a law in relation to the Boori Products to which this warranty applies.

Boori Australia Pty Ltd, 26 Peter Brock Drive Eastern Creek Sydney NSW 2766 Australia. PH:(61 2) 9833 3769 FAX:(61 2) 9673 4240 <u>www.boori.com.au</u>

Documents / Resources



Boori BK-TISBC Tidy Storage Bookcase [pdf] Instruction Manual BK-TISBC Tidy Storage Bookcase, BK-TISBC, Tidy Storage Bookcase, Storage Bookcase

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.