

borne 2AJMW-SPK1289 Portable Party Speaker System



borne 2AJMW-SPK1289 Portable Party Speaker System Instructions

[Home](#) » [Borne](#) » borne 2AJMW-SPK1289 Portable Party Speaker System Instructions 

Contents

- [1 borne 2AJMW-SPK1289 Portable Party Speaker System](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 FAQs](#)
- [5 IMPORTANT SAFETY INSTRUCTIONS](#)
- [6 LOCATION OF CONTROLS](#)
- [7 CHARGING THE SPEAKER](#)
- [8 BLUETOOTH MODE](#)
- [9 TWS FUNCTION](#)
- [10 LIMITED WARRANTY](#)
- [11 CONTACT](#)
- [12 FCC](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)

borne[®]

borne 2AJMW-SPK1289 Portable Party Speaker System



Product Information

- **Specifications:**

- LED Light Power Switch
- MicroSD Input
- Volume Dial
- Aux-in Input
- Treble Control
- Bass Control
- Microphone Echo
- Microphone Volume
- DC Power Port
- Microphone Input
- ON / OFF Switch
- USB Input
- Mode / LED Light Button

- Previous Button
- Play / Pause / TWS Button
- Next Button
- Microphone Priority Button
- Repeat Button (USB / Micro SD playback only)

Product Usage Instructions

• Charging the Speaker:

- Plug the AC adapter into the DC Power Outlet and the other end into a standard AC power outlet. The LED Indicator Light will illuminate red while charging and turn off when completed. A full charge will take 4-6 hours.

• Power On/Off:

- To turn ON / OFF the speaker, press the ON/OFF Switch. Note: To use the ON/OFF Button on the remote control, the speaker must be in the ON position on the speaker.

• Bluetooth Mode:

- Keep the unit and your Bluetooth-enabled device within 1 metre at all times during the pairing process.
- Turn on the speaker and the speaker will be in Bluetooth mode.
- Turn on the Bluetooth function on your Bluetooth-enabled device and search for Bluetooth devices.
- When the search is complete, select BTSPK145 from the Bluetooth device list.
- To increase or decrease the volume on the speaker, turn the Volume Dial.
- To skip songs forward or backward, press the Previous or Next Button.
- To pause and resume playback, press the Play/Pause button.
- Use the Treble and Bass Dial to adjust the sound.

• FM Mode:

- Press the Mode Button to cycle through to the FM Mode. Press the Play/Pause Button to start the auto-search function.
- Once the auto-search feature is completed, all stations with signals will be saved in memory. Use the Previous or Next Buttons to search through the saved stations. Use the Dial to adjust the volume.

• USB Mode:

- This unit allows you to play music from a USB thumb drive with MP3 formatted files. Insert the USB thumb drive. Press the Mode Button to cycle through to the USB Mode.

• Micro SD Mode:

- This unit allows you to play music from a MicroSD memory card with MP3 formatted files. Insert the MicroSD card. Press the Mode Button to cycle through to the MicroSD Mode.

FAQs

• Q: How do I dispose of the product and battery?

- **A:** This product contains a built-in lithium battery and should not be disposed of in normal household waste. Contact your local waste management authorities for disposal and recycling instructions.

• Q: What should I do if my speaker does not operate normally?


- **A:** If your speaker does not operate normally, check if any objects have fallen into the product, ensure it has not been dropped, and refer to troubleshooting steps in the user manual.

- **Q: How long does it take to fully charge the speaker?**
 - **A:** A full charge of the speaker will take approximately 4-6 hours.

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions carefully.
- Keep these instructions in a safe place and follow all instructions.
- Do not use this product near water.
- **Cleaning:** Do not use liquid cleaners or aerosol cleaners. Clean only with a dry damp cloth.
- Do not place near any heat sources such as radiators, heat registers, stoves, or other apparatuses (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as objects have fallen into the product, does not operate normally, or has been dropped.

LOCATION OF CONTROLS

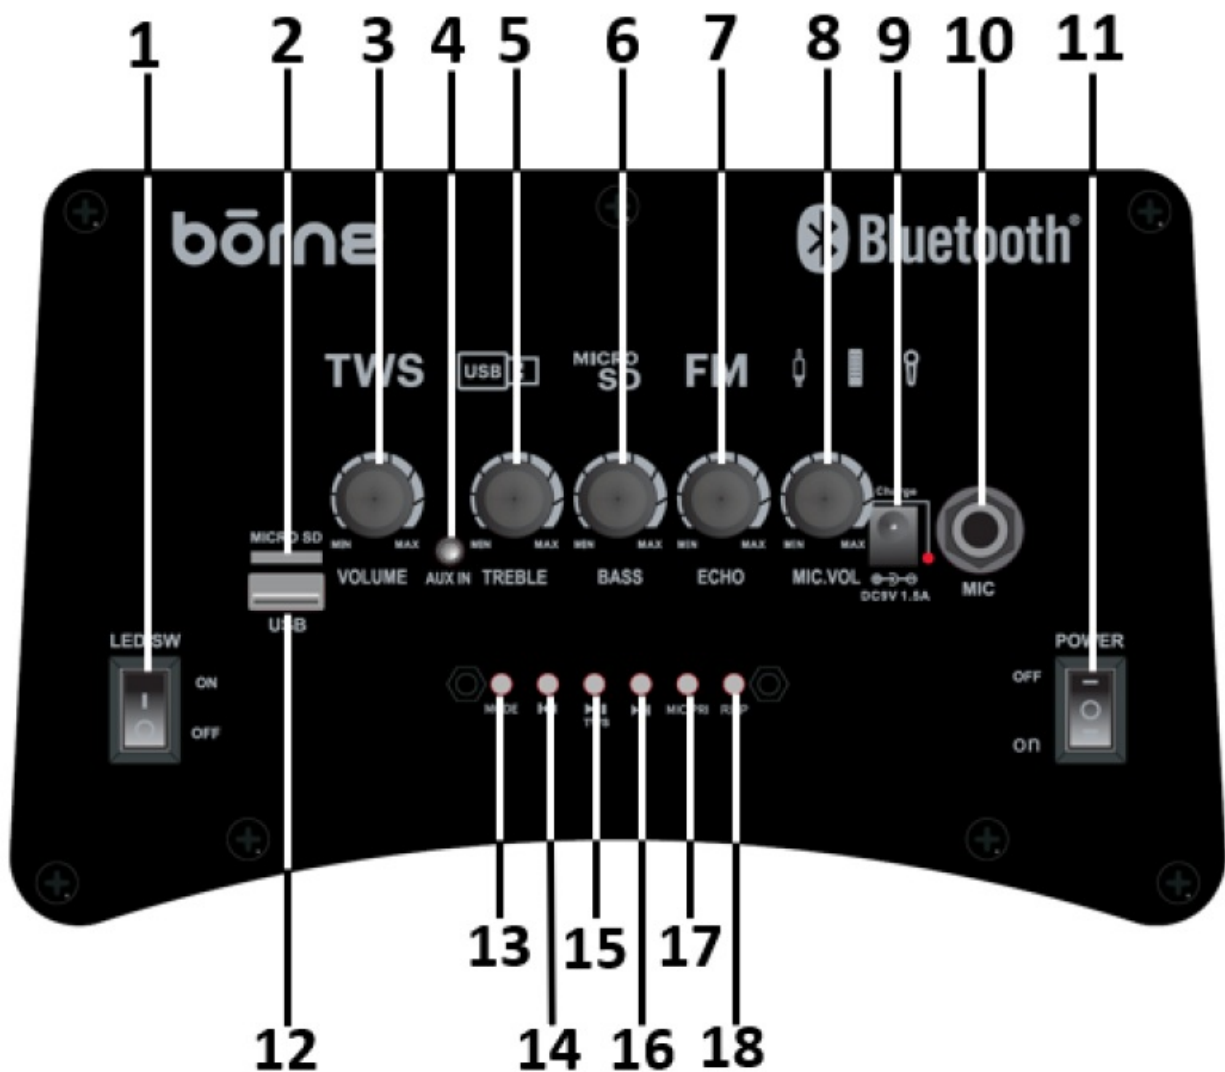

1. LED Light Power Switch	10. Microphone Input
2. MicroSD Input	11. ON / OFF Switch
3. Volume Dial	12. USB Input
4. Aux-in Input	13. Mode / LED Light Button
5. Treble Control	14. Previous Button
6. Bass Control	15. Play / Pause / TWS Button
7. Microphone Echo	16. Next Button
8. Microphone Volume	17. Microphone Priority Button
9. DC Power Port	18. Repeat Button (USB / Micro SD playback only)

CHARGING THE SPEAKER

- Plug the AC adapter into the DC Power Outlet and the other end to a standard AC power outlet. The LED Indicator Light will illuminate red while charging and turn off when completed. A full charge will take 4-6 hours.

Product and Battery Disposal

- This product contains a built-in lithium battery and should not be disposed of in normal household waste. The battery in this device is not intended to be removed by the individual or end user.
- For disposal and recycling, please contact your local waste management authorities.
- The recycling and processing of electronic waste will make a significant contribution towards helping protect the environment.
- **Warning:** To reduce the risk of fire and burns, do not disassemble, crush, puncture, short external contacts or dispose of in fire or water.

POWER ON/OFF

- To turn ON / OFF the speaker, press the ON/OFF Switch.
- **NOTE:** To use the ON/OFF Button on the remote control, the speaker must be in the ON position on the speaker.

BLUETOOTH MODE

Pairing a Bluetooth Enabled Device for the First Time to your Bluetooth Speaker

NOTE: Refer to the user manual for your Bluetooth-enabled device for instructions on pairing and connecting Bluetooth devices.

1. Keep the unit and your Bluetooth-enabled device within 1 metre at all times during the pairing process.
2. Turn on the speaker and the speaker will be in Bluetooth mode.
3. Turn on the Bluetooth function on your Bluetooth-enabled device and search for Bluetooth devices. When the search is complete, select "BTSPK145" from the Bluetooth device list.

- **NOTE:**

- If the pairing is unsuccessful, turn off the speaker first and repeat the steps above to re-pair again.
 - After successful pairing, paired devices will remember each other. Unless pairing information is deleted, re-pairing is not required after the first time.
 - If you want to pair the unit with other Bluetooth-enabled devices, please disconnect/remove the existing device and pair it with the new device according to the steps above.
4. To increase or decrease the volume on the speaker, turn the Volume Dial.
 5. To skip songs forward or backward, press the Previous or Next Button.
 6. To pause and resume playback, press the Play/Pause button.
 7. Use the Treble and Bass Dial to adjust the sound.

FM MODE

- Press the Mode Button to cycle through to the FM Mode. Press the Play/Pause Button to start the auto search function. Once the auto search feature is completed, all stations with signal will be saved into memory. Use the Previous or Next Buttons to search through the saved stations.
- Use the Dial to adjust the volume.
- **Tips for Best Reception:** If the FM reception is weak, change the position or location of the unit or try placing the unit near a window until you get the best reception.

USB MODE

- This unit allows you to play music from a USB thumb drive with MP3-formatted files. Insert the USB thumb drive. Press the Mode Button to cycle through to the USB Mode.

MICRO SD MODE

- This unit allows you to play music from a MicroSD memory card with MP3 formatted files. Insert the MicroSD card. Press the Mode Button to cycle through to the MicroSD Mode.

AUX-IN (AUDIO INPUT) MODE

- Using a 3.5mm aux-in cable (not included) plug one end into a smartphone, tablet, MP3 player or other audio source and the other into the Aux-in Port. Press the Mode Button to cycle through to the Aux-in Mode.

MICROPHONE

- Connect a microphone (not included) to sing along to your favourite tunes. Adjust the Microphone Volume and Echo Control.
- This speaker has a feature for microphone priority. When this setting is turned on, the music volume level will decrease when you talk or sing into the microphone. To turn ON/OFF this feature, press the Microphone Priority button.

LED LIGHT EFFECTS

- To turn ON / OFF the LED lights, press the ON/OFF LED Light Power Switch.
- To cycle through the various LED light modes, press and hold the MODE / LED Light Button.

TWS FUNCTION

- You can connect another BTSPK145 speaker for double the sound using the TWS function. Turn on both speakers to the Bluetooth Mode. Make sure no other devices are connected via Bluetooth to either speaker.
- Press and hold the Mode Button and the 2 speakers will connect automatically.
- You will hear a beep, then an audible alert when both are connected. After the 2 speakers are connected, go ahead and pair your device to the BTSPK145 speaker.
- **Need help?** Please call us.
- If you encounter any difficulties with this product, please call or email us and our representatives will be ready to help you.
- **Toll-free:** 1-[800-593-6669](tel:800-593-6669) (Monday to Friday: 9 am – 5 pm EST)
- **Email:** support@borne-lifestyle.com.
- Thank you for your purchase.
- We want you to start enjoying your product.

LIMITED WARRANTY

Warning: Some Products may contain components that are small enough to be swallowed. Keep out of the reach of children. Before returning your product for service under this Warranty, (i) please read the instruction manual carefully and visit our website at www.borne-lifestyle.com for product updates and extended support documentation (e.g., Frequently Asked Questions, Common Troubleshooting Guides); (ii) please contact Edco Electronics Support if you are still having trouble with your Product. Subject to the terms and conditions herein, Edco Electronics warrants to the original purchaser of the Product ("Customer") that the Product will be free from defects in material or workmanship under normal, noncommercial use ("Defects") for 1 year. Warranty Period encompasses separate "Coverage Periods" for Parts and Labor, with each Coverage Period to begin from the original date of Customer purchase. Parts are covered for a period of 1yr. Labour is covered for 90 days. If Customer returns a defective Product during the applicable Warranty Period, Edco Electronics will, at its option during the specified Coverage Periods for Parts and Labor (as applicable), either: (i) repair the Product or (ii) replace the Product with a new or refurbished Product, in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and Edco Electronics' sole liability for breach of the limited warranty contained herein. This Warranty specifically excludes any Product (or, as applicable, any component thereof) that has Defects resulting from (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product by any party other than Edco Electronics or a party authorized in writing by Edco Electronics; (c) any damage to Product due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product; (d) cosmetic damage to the Product caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions; or (g) any acts of God. The product is sold to Customers for personal, non-commercial use only. The product is not warranted for the Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. Edco Electronics expressly disclaims any warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any risks associated with such uses of Product and agrees to indemnify Edco Electronics for any damages claimed against Edco Electronics for such uses. This Warranty specifically and expressly excludes any Product that is purchased by Customer as a "floor" or "display" model. Any such Product is purchased by Customer "AS IS" and Edco Electronics disclaims any warranties, express or implied, in relation thereto. EXCEPT FOR THE EXPRESS

WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCT IS PROVIDED "AS IS", AND EDCO ELECTRONICS DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY OF (I) MERCHANTABILITY, (II) FITNESS FOR A PARTICULAR PURPOSE, OR (III) NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL EDCO ELECTRONICS BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE). ADDITIONALLY, EVEN IF EDCO ELECTRONICS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, EDCO ELECTRONICS' AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT COSTS PAID BY THAT CUSTOMER FOR THE PRODUCT CAUSING SUCH DAMAGES, IF ANY. This Warranty gives Customer specific rights, and Customers may also have other rights that vary from jurisdiction to jurisdiction. To obtain Warranty service, the Customer must call Edco Electronics Support before making a Product Return. Customer must include with Product Return the following items: (i) a dated sales receipt that indicates the place of purchase, model number of Product, and amount paid; (ii) a detailed description of the Customer's problem with the Product; (iii) Customer's full name, phone number, and return address, and; (iv) money order for any applicable shipping costs made out to Edco Electronics Inc. to cover return shipping charges to US and Canadian destinations only. Edco Electronics will not make return shipments to a P.O. Box. For shipping to international addresses, actual freight will be charged to the Customer. Failure to enclose any of these items may delay the processing of your Warranty claim. Return your Product freight-prepaid in its original packaging, or packaging that affords an equal measure of protection. Please allow 4 to 6 weeks for the processing of your claim.

CONTACT

- Edco Electronics Inc.
- 8484 Esplanade,
- Montreal, Quebec H2P 2R7
- Canada
- **Toll-Free:** 1-[800-593-6669](tel:800-593-6669) (Monday to Friday: 9 am to 5 pm EST)
- **Email:** support@borne-lifestyle.com.

FCC

FCC Warning

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, according to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used per the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body.

IC Warning


This device complies with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

The digital apparatus complies with Canadian CAN ICES-003 (B)/NMB-3(B). This equipment complies with ICES radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body.

Documents / Resources

	<p>borne 2AJMW-SPK1289 Portable Party Speaker System [pdf] Instructions 2AJMW-SPK1289 Portable Party Speaker System, 2AJMW-SPK1289, Portable Party Speaker System, Party Speaker System, Speaker System</p>
---	---

References

- [lifestyle.com](#)
- [Borne](#)
- [Borne](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.