



BOSCH AdvancedTemp Thermo Detector In Soft Storage Bag Instruction Manual

[Home](#) » [Bosch](#) » **BOSCH AdvancedTemp Thermo Detector In Soft Storage Bag Instruction Manual** 

Contents

- [1 BOSCH Advanced Temp Thermo Detector In Soft Storage Bag](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
 - [3.1 Mounting](#)
- [4 Messvorbereitung](#)
- [5 Messfunktionen](#)
- [6 Wartung und Service](#)
- [7 Safety Instructions](#)
- [8 Product Description and Specifications](#)
 - [8.1 Intended Use](#)
 - [8.2 Product features](#)
- [9 Technical data](#)
- [10 Assembly](#)
- [11 Operation](#)
- [12 Measurement preparations](#)
- [13 Measuring functions](#)
- [14 Errors – causes and corrective measures](#)
- [15 Glossary of terms](#)
- [16 Maintenance and Service](#)
- [17 Documents / Resources](#)
 - [17.1 References](#)
- [18 Related Posts](#)



BOSCH Advanced Temp Thermo Detector In Soft Storage Bag



Product Information

The Advanced Temp Thermo detector is a product by Robert Bosch Power Tools GmbH. It is a portable handheld device that can measure the temperature of various surfaces using infrared technology. The device can also measure the relative humidity of the surrounding environment. The device is powered by replaceable batteries and has a battery life of approximately 8 hours. The device weighs 0.28 kg and has a laser point divergence of 1.5 mrad.

Product Usage Instructions

Mounting

To mount the Advanced Temp Thermo detector, insert the batteries into the device. The battery indicator (g) on the device shows the battery level as follows:

- 76% to 100% – Full battery
- 51% to 75% – Medium battery
- 26% to 50% – Low battery
- 15 minutes to less than 25% – Battery needs to be replaced

Messvorbereitung

Before using the device, ensure that the surface to be measured is clean and free of any obstructions. The device can measure the temperature of various surfaces such as iron, refractory, paving stone, textiles, linoleum, paper, and fiberboard.

Messfunktionen

The Advanced Temp Thermo detector has two modes of operation:

- Absolute mode – This mode measures the temperature of a surface in degrees Celsius or Fahrenheit and displays it on the device screen.
- Differential mode – This mode measures the temperature difference between two surfaces and displays it on the device screen. The device automatically compares the values and interprets the result as follows:
 - Positive temperature difference – The first surface is hotter than the second surface.
 - Negative temperature difference – The first surface is cooler than the second surface.
 - Zero temperature difference – Both surfaces have the same temperature.

Wartung und Service

To maintain the device, only qualified personnel should perform repairs using original replacement parts. For further assistance, customers can visit the service addresses listed on www.bosch-pt.com/serviceaddresses.

Safety Instructions

All instructions must be read and observed in order for the measuring tool to function safely. The safeguards integrated into the measuring tool may be compromised if the measuring tool is not used in accordance with these instructions. Never make warning signs on the measuring tool unrecognizable. SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE AND INCLUDE THEM WITH THE MEASURING TOOL WHEN TRANSFERRING IT TO A THIRD PARTY.

- **Warning:** If operating or adjustment devices other than those specified here are used or other procedures are carried out, this can lead to dangerous exposure to radiation.
- The measuring tool is delivered with a laser warning sign (marked in the illustration of the measuring tool on the graphics page).
- If the text of the laser warning label is not in your national language, stick the provided warning label in your national language over it before operating for the first time.
- Do not direct the laser beam at persons or animals and do not stare into the direct or reflected laser beam yourself. You could blind somebody, cause accidents or damage your eyes.
- If laser radiation hits your eye, you must close your eyes and immediately turn your head away from the beam.
- Do not make any modifications to the laser equipment.
- Do not use the laser goggles (accessory) as protective goggles. The laser goggles make the laser beam easier to see; they do not protect you against laser radiation.
- Do not use the laser goggles (accessory) as sunglasses or while driving. The laser goggles do not provide full UV protection and impair your ability to see colours.
- Have the measuring tool serviced only by a qualified specialist using only original replacement parts. This will ensure that the safety of the measuring tool is maintained.
- Do not let children use the laser measuring tool unsupervised. They could unintentionally blind themselves or other persons.
- Do not use the measuring tool in explosive atmospheres which contain flammable liquids, gases or dust. Sparks may be produced inside the measuring tool, which can ignite dust or fumes.
- The measuring tool may not be 100% accurate for technological reasons. Environmental factors (e.g. dust or steam in the area being measured), temperature fluctuations (e.g. from fan heater) as well as the nature and condition of the surfaces being measured (e.g. highly reflective or transparent materials) can distort

measurement readings.

Product Description and Specifications

Please observe the illustrations at the beginning of this operating manual.


Intended Use


The measuring tool is intended for contactless measurement of surface temperature, ambient temperature and relative humidity. It calculates the dew point temperature and indicates thermal bridges and mould risk. Mould spores cannot be detected with the measuring tool. The measuring tool must not be used for temperature measurement on persons and animals or for other medical purposes. The measuring tool is not suitable for surface temperature measurement of gases or liquids. The measuring tool is not intended for commercial use. The measuring tool is suitable for indoor use.

This product is a consumer laser product in accordance with EN 50689.

Product features

The numbering of the product features shown refers to the illustration of the measuring tool on the graphic page.

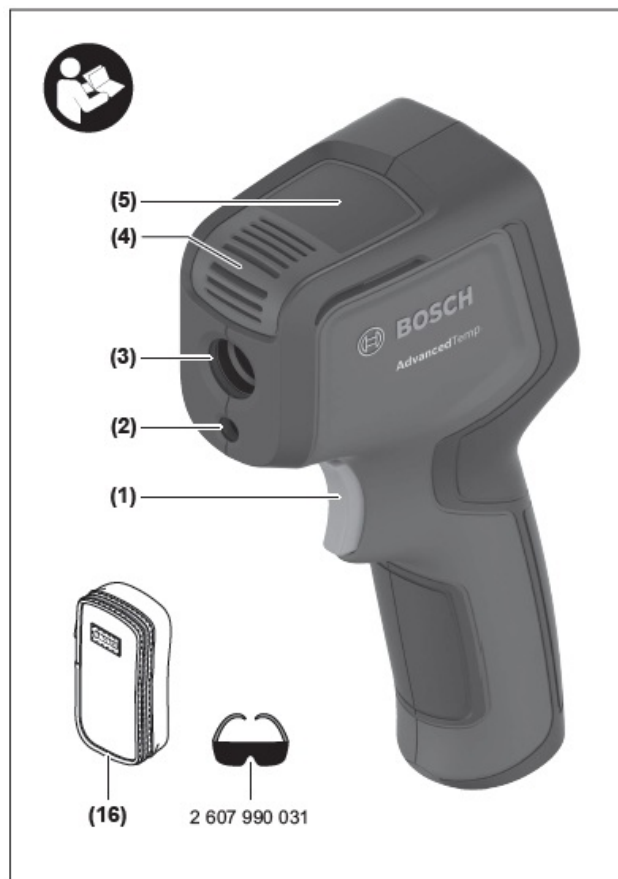

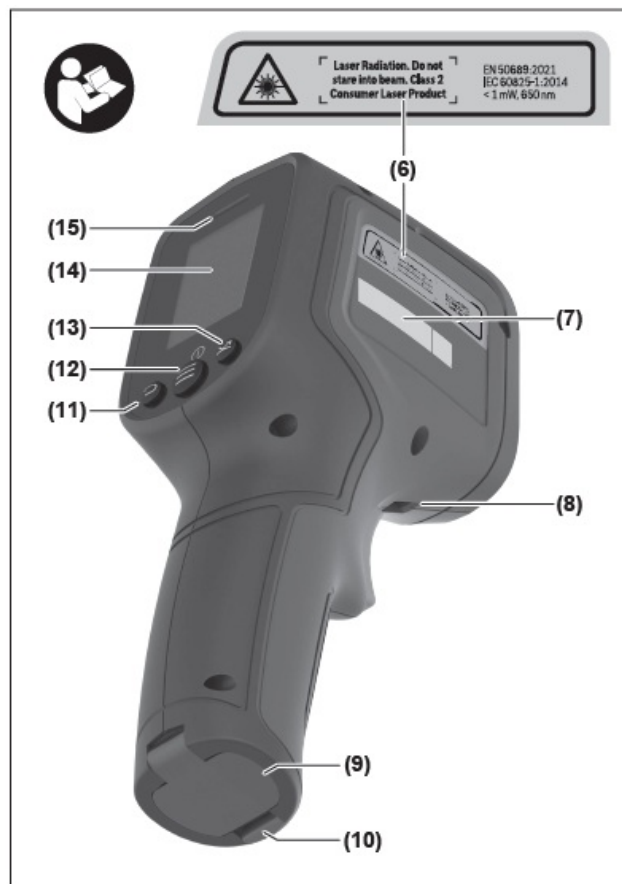


1. Measure button
2. Laser beam outlet aperture
3. Infrared beam reception lens
4. Humidity and temperature sensor
5. Emissivity label
6. Laser warning label
7. Serial number
8. Retaining strap holder
9. Battery compartment cover
10. Battery compartment cover locking mechanism
11. Back button/delete button
12. ON/OFF button/mode button
13. Emissivity button
14. Display
15. Indicator LED
16. Protective bag

Display elements

- (a) Mould warning mode indicator
- (b) Thermal bridge mode indicator
- (c) Reference temperature mode indicator
- (d) Surface temperature mode indicator
- (e) Emissivity

- (f) Unit of temperature measurement
- (g) Battery indicator
- (h) Current measured value for surface temperature
- (i) Previous measured value for surface temperature
- (j) Surface temperature reference value
- (k) Surface temperature difference value
- (l) Difference value symbol
- (m) Reference value symbol
- (n) Test result indicator
- (o) Surface temperature symbol
- (p) Dew point temperature symbol
- (q) Dew point temperature
- (r) Ambient temperature symbol
- (s) Ambient temperature measured value
- (t) Relative humidity symbol
- (u) Relative humidity measured value

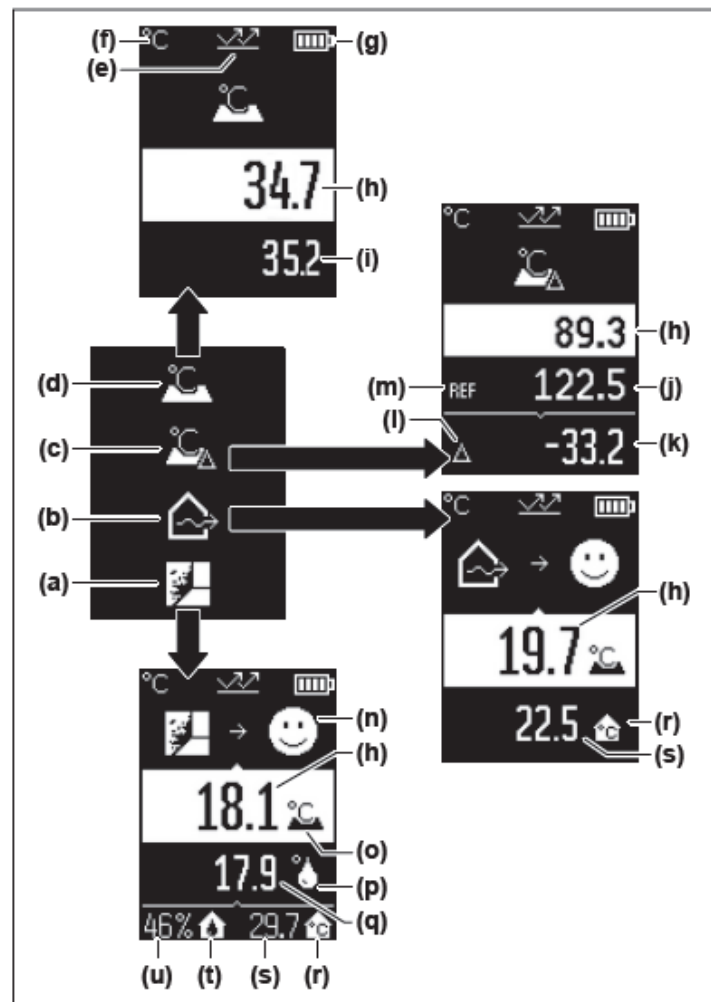

Technical data


Thermo detector	AdvancedTemp
Article number	3 603 F83 2..
Measuring range	
– Surface temperature	–30 °C to +500 °C
– Ambient temperature	–5 °C to +50 °C
– Relative humidity	10 to 90 %
Measuring accuracy	
Surface temperature^{A)B)}	
– –30 to –10 °C	$\pm(1.5 + 0.1 \times t) \text{ °C}^C)$
– –10 to 0 °C	$\pm 2.5 \text{ °C}$
– 0 to 100 °C	$\pm 1.5 \text{ °C}$
– 100 to 500 °C	$\pm 0.015 \times t \text{ °C}$
Ambient temperature	$\pm 1 \text{ °C}$
Relative humidity^{B)}	
– < 20 %	$\pm 3 \text{ %}$
– 20 to 60 %	$\pm 2 \text{ %}$
– 60 to 90 %	$\pm 3 \text{ %}$
Optics (measuring distance:measured surface ratio) ^{D)E)}	12:1
Operating temperature	–5 °C to +50 °C
Storage temperature	–20 °C to +70 °C
Max. altitude	2000 m
Relative air humidity max.	90 %
Pollution degree according to IEC 61010-1	2 ^{F)}
Laser class	2
Laser type (typical)	650 nm, < 1 mW
Laser point divergence	$\leq 1.5 \text{ mrad}$
Batteries	2 × 1.5 V LR6 (AA)
Approx. operating time	8 h

Thermo detector	AdvancedTemp
Weight according to EPTA-Procedure 01:2014	0.28 kg
Dimensions (length × width × height)	124 × 53 × 180 mm

- At a measuring distance of 0.75–1.25 m from the surface
- At an ambient temperature of 21–25 °C
- At a measuring distance of 0.1–0.3 m from the surface
- Values in accordance with the Association of German Engineers' VDI/VDE 3511 part 4.3 standard (publication date July 2005); applies for 90 % of the measuring signal.

In all areas beyond the values detailed in the technical data, deviations are possible in measurement readings.

- Refers to infrared measurement, see figure:

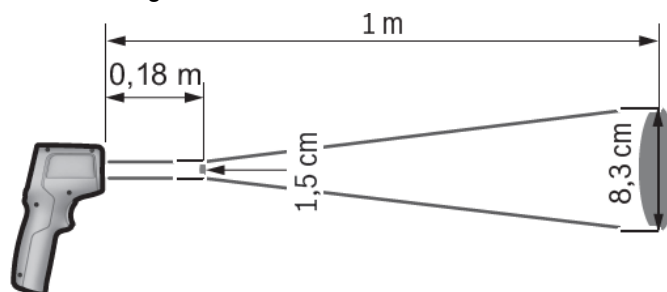

- Only non-conductive deposits occur, whereby occasional temporary conductivity caused by condensation is expected.


The serial number (7) on the type plate is used to clearly identify your measuring tool.





Assembly

Inserting/changing the batteries

It is recommended that you use alkaline manganese batteries to operate the measuring tool. To open the battery compartment cover (9), press the locking mechanism (10) and lift open the battery compartment cover. Insert the batteries. When inserting the batteries, ensure the polarity is correct according to the representation on the inside of the battery compartment cover.

The battery indicator (g) shows the state of charge of the batteries:

Display	Capacity
	76 % to 100 %

Display	Capacity
	51 % to 75 %
	26 % to 50 %
	15 min to < 25 %
	maximum 15 min

If the battery indicator (g) flashes with the empty battery symbol, the batteries must be replaced. Always replace all the batteries at the same time. Only use batteries from the same manufacturer and which have the same capacity.

- Take the batteries out of the measuring tool when you are not using it for a pro-longed period of time. The batteries can corrode and self-discharge during pro-longed storage in the measuring tool.

Operation

Starting operation

- Protect the measuring tool from moisture and direct sunlight.
- Do not expose the measuring tool to any extreme temperatures or variations in temperature. For example, do not leave it in a car for extended periods of time. In case of large variations in temperature, allow the measuring tool to adjust to the ambient temperature before putting it into operation. The precision of the measuring tool may be compromised if exposed to extreme temperatures or variations in temperature.
- Make sure that the measuring tool is correctly acclimatized. In case of large variations in temperature, acclimatization can take up to 30 min, or up to 90 min in extreme situations. This may be the case, for example, if you store the measuring tool in a cool car and then perform a measurement in a warm building.
- Avoid hard knocks to the measuring tool or dropping it. After severe external influences and in the event of abnormalities in the functionality, you should have the measuring tool checked by an authorized Bosch after-sales service agent.
- Do not close or cover the humidity and temperature sensor (4), the reception lens (3) or the laser outlet aperture (2).

Switching on/off

You can switch on the measuring tool by pressing the ON/OFF button/mode button (12) or the measure button (1). After a brief start sequence, the measuring tool is ready to use – always in surface temperature mode and with the emissivity that was saved when the tool was last switched off. No measurement is initiated at this stage and the laser is still switched off. After pressing the measure button (1), the measuring tool begins measuring.

- Never leave the measuring tool unattended when switched on, and ensure the measuring tool is switched off after use. Others may be dazzled by the laser beam.

- Do not direct the laser beam at persons or animals and do not stare into the laser beam yourself (even from a distance).

To switch off the measuring tool, press the ON/OFF button/mode button (12) for approx. 2 s. If no button on the measuring tool is pressed for approx. 5 min, the measuring tool will automatically switch itself off to preserve battery life.


Measurement preparations

Changing the unit of temperature measurement

To switch the unit of measurement between Celsius and Fahrenheit, press and hold the emissivity button (13) for approx. 3 s. The current setting appears in the unit of temperature measurement (f) display.

Emissivity for surface temperature measurements

To determine the surface temperature, the tool performs a contactless measurement of the natural infrared thermal radiation emitted by the object at which the tool is aimed. To ensure correct measurement, the emissivity setting on the measuring tool must be checked before every measurement and adapted to the measuring object if necessary. To change the emissivity, press the emissivity button (13) repeatedly until the emissivity display (e) shows the required emissivity for the next measurement. Confirm your selection by pressing the measure button (1) or with the ON/OFF button/mode button (12).

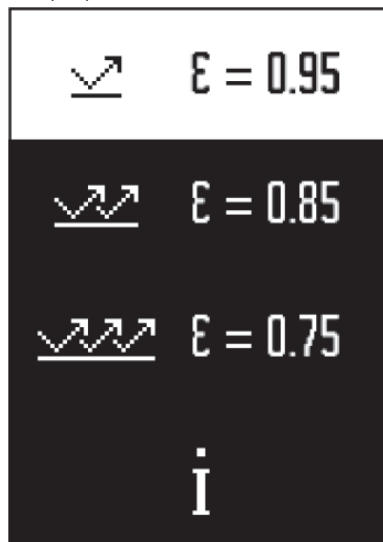

- **High emissivity group (≈ 0.95):** Concrete (dry), brick-work (red, rough), sandstone (rough), marble, plastic (PE, PP, PVC), rubber, anodized aluminium (mat), tiles, radiator paint, wood, mortar, roofing felt, wallpaper, adhesive tape, lacquer, plaster
- **Medium emissivity group (≈ 0.85):** Granite, enamel, cast iron, fireclay, paving stones, textiles, linoleum, paper, fibre board
- **Low emissivity group (≈ 0.75):** Cork, porcelain (white), leather, natural stone
- **i:** More information

Scan the QR code for more information.

- Temperature measurements will only be correct if the emissivity setting matches the emissivity of the object. Otherwise, object temperatures could be shown to be hotter or colder than they are, which may present a danger if touched.

Measuring surface for surface temperature measurements

The laser circle produced by the measuring tool indicates the measuring surface. The infrared radiation of this measuring surface is then determined when performing a contact-less surface temperature measurement. The central laser point marks the centre of the measuring surface. For an optimum measurement reading, position the measuring tool so that the laser beam meets the measuring surface perpendicularly to this point.

- Do not direct the laser beam at persons or animals and do not stare into the laser beam yourself (even from a distance).

Increasing the distance between the measuring tool and the object being measured increases the size of the laser circle and therefore the size of the area being measured. The optimum measuring distance is 0.75 m to 1.25 m.

- Do not hold the measuring tool directly against hot surfaces. The heat can damage the measuring tool.

The displayed reading is the average value of all temperatures measured within the measuring surface.

Information about the measuring conditions

Highly reflective, shiny or transparent surfaces (e.g. high-gloss tiles, stainless steel cup-board fronts or saucepans) may impair the surface temperature reading. If necessary, mask the area to be measured with a dark, matt adhesive tape that conducts heat well. Allow the tape to acclimatize briefly on the surface.

It is not technically possible to perform measurements through transparent materials.

Consequently, the more suitable and stable the measuring conditions are, the more accurate and reliable the results of the measurement will be.

The humidity and ambient temperature sensor (4) can be damaged by chemical contaminants, such as paint or varnish vapours. Infrared temperature measurement is impaired by smoke, vapour or dusty air. It is therefore important to ventilate the room prior to measuring, especially when the air is contaminated or steamy. For example, do not perform measurements in a bathroom immediately after the shower has been used. Once ventilated, allow the room to reacclimatise a while until it returns to the usual temperature. The ambient temperature and relative humidity are measured directly on the measuring tool at the humidity and ambient temperature sensor (4). To achieve meaningful results, do not hold the measuring tool directly over or next to sources of interference such as radiators or open liquids. Do not cover the sensor (4) under any circumstances.

Measuring functions


Individual measurements

Briefly pressing the measure button (1) once switches the laser on and actuates a single measurement in the selected mode. The measuring process can take 1 to 2 s to complete. The measurements are displayed in the display section with the white background. Upon completion of the measurement, the laser switches off automatically. The most recent measurement readings are shown on the display.

Continuous measurement



Press and hold the measuring button (1) to perform continuous measurements in the selected mode. The laser remains switched on. Using slow movements, aim the laser circle at each of the surfaces to be measured, one by one. Move the measuring tool slowly in the room to perform humidity and ambient temperature measurements. The indication on the display and the indicator LED (15) are continually updated. As soon as you let go of the measuring button (1), the measurement is stopped and the laser is switched off. The most recent measurement readings are shown on the display. The indicator LED remains unchanged for the last display.

Mode selection

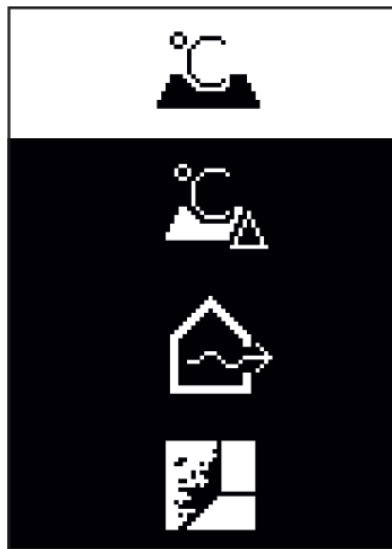


To open the mode menu, press the ON/OFF button/mode button (12). Use the ON/OFF button/mode button (12) to select the required mode. Confirm your selection by pressing the measure button (1) or the emissivity button (13). To return to the previous mode, press the back button/delete button (11).

Surface temperature mode

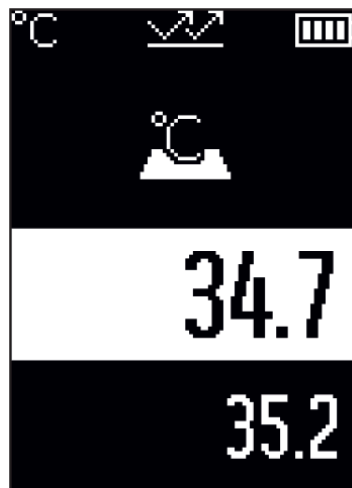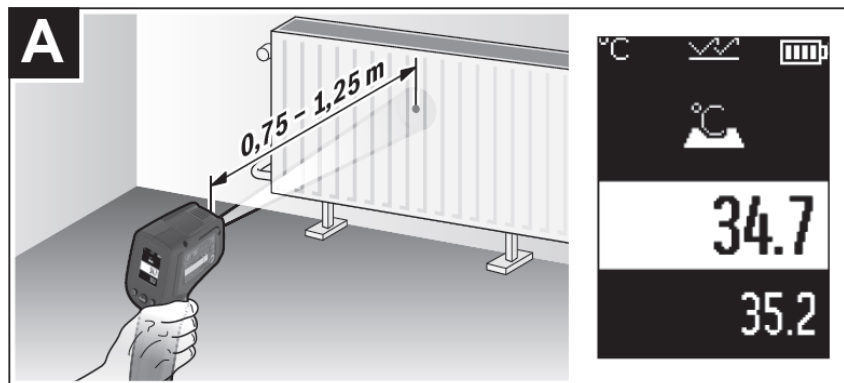



Surface temperature mode is used to measure the surface temperature of an object. Press the measure button (1) and aim the laser circle so that it is perpendicular to the centre of the object being measured. The surface temperature measured (h) is displayed in the area of the display with the white background. When the next measurement is taken, the previously measured value appears in the display (i). Press the back button/delete button (11) to delete the measured value (h) in the area of the display with the white back-ground. The indicator LED (15) does not light up in surface temperature mode. You can use this mode to measure the temperature of radiators, underfloor heating or fridge interiors, for example.

Reference temperature mode

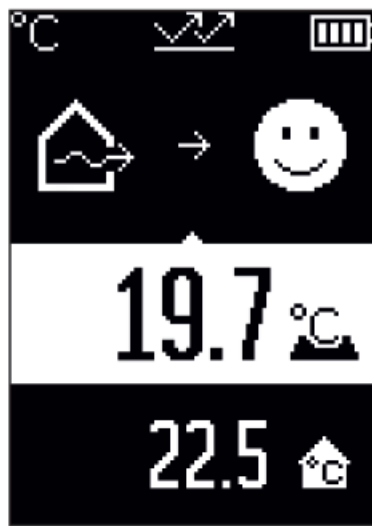

In reference temperature mode, 2 measured surface temperatures are compared and the difference is displayed. This way, significant temperature differences can be measured at 2 different positions on one or more surfaces. Press the measure button (1) to measure the reference value (j). All subsequent measured values are then related to the reference value (j). The temperature difference (k) is displayed immediately after a new measurement. With each new measurement, the measured value (h) is updated in the area of the display with the white background and the difference from the reference value is recalculated. If the new value (h) is more than 1 °C lower than the reference value (j), the indicator light (15) lights up blue. If the new value (h) is more than 1 °C lower than the reference value (j), the indicator light (15) lights up red. If the difference value (k) falls within the ± 1 °C range, the indicator light (15) does not light up.



Thermal bridge mode

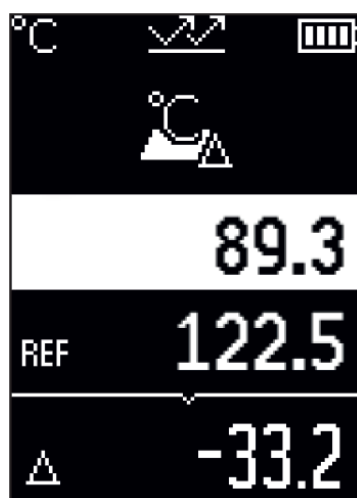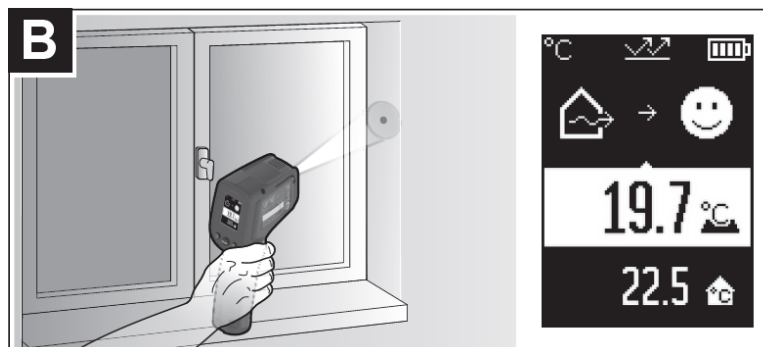

In thermal bridge mode, the surface and ambient temperatures are measured and compared with each other. If there is a significant difference between the two temperatures, a thermal bridge (see “Thermal bridge”, page 37) warning is issued. Press the measure button (1) and aim the laser circle so that it is perpendicular to the centre of the object being measured. Once the measurement is complete, the measured surface temperature (h) is displayed. The ambient temperature (s) is automatically displayed before the measurement is taken. The measuring tool automatically compares the values and interprets the result as follows:

- Green indicator LED (15): Low temperature difference, no thermal bridges present.
- Yellow indicator LED (15): Temperature difference near the limit value, a thermal bridge may be present in the area being measured; if necessary, repeat the measurement at a later point in time.
- Red indicator LED (15): The symbol indicates that the surface temperature of the area being measured deviates significantly from the ambient temperature. There is a thermal bridge in the area being measured, which is an indication of poor insulation. The room is too cold – if it is being heated normally, then the low temperature is an indication of poor overall insulation. If there are thermal bridges, check the thermal insulation in this area. If necessary, consult a building expert.

Mould warning mode

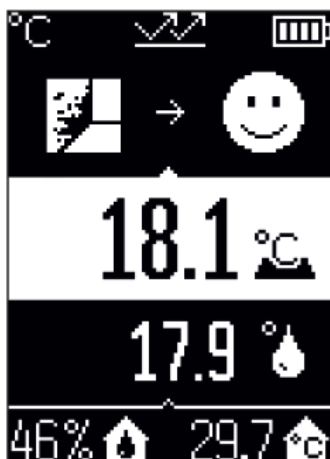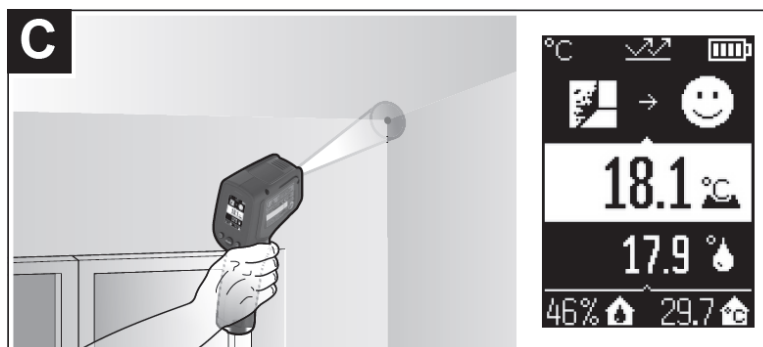

In mould warning mode, the ambient temperature and relative humidity (see “Relative humidity”, page 37) are measured. The dew point temperature (see “Dew point temperature”, page 37) is then calculated using these two values. The surface temperature is also measured. The dew point temperature is compared with the surface temperature and the result is interpreted with regard to the risk of mould forming. Relative humidity (u), ambient temperature (s) and calculated dew point temperature (q) are determined and displayed automatically. Press the measure button (1) and aim the laser circle so that it is perpendicular to the centre of the object being measured. The surface temperature measured value (h) is displayed in the area of the display with the white background. The measuring tool automatically compares the values and interprets the result as follows:

- Green indicator LED (15): There is no risk of mould forming under the current conditions.
- Yellow indicator LED (15): The values are near the limit; pay attention to room temperature, thermal bridges and humidity, and repeat the measurement if necessary at a later point in time.
- Red indicator LED (15): There is an increased risk of mould forming because the humidity is too high or the surface temperature is close to the dew point temperature.


When the risk of mould is indicated, you should – depending on the cause – reduce the humidity through more frequent and thorough ventilation, increase the room temperature and eliminate thermal bridges. Contact a building expert, if necessary.

Note: Mould spores cannot be detected with the measuring tool. It only indicates that mould may form if the conditions remain unchanged.

Errors – causes and corrective measures

Measured values outside the measuring range

If the measured values for the object being measured in the laser circle are outside the measuring range, the following indicators are shown on the display:

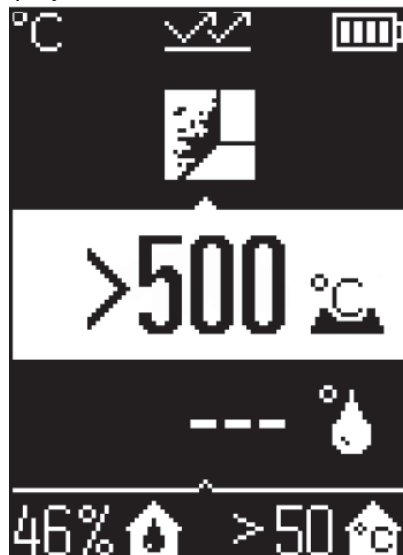

500 °C – the surface temperature is too high.



< -30 °C – the surface temperature is too low.

For an ambient temperature: > 50 °C (too high) or < -5 °C (too low) The values of this object cannot be measured. Aim the laser circle at another object and start a new measurement.

Internal error



The measuring tool has experienced an internal error and switches off after five seconds. To reset the software, re-move the batteries, wait a few seconds and then reinsert the batteries.

If the error persists, have the measuring tool checked by a Bosch customer service agent.

Glossary of terms

Emissivity

The emissivity of an object depends on the material and the structure of its surface. This specifies how much infrared thermal radiation the object emits compared with an ideal radiant warmer (black body, emissivity $\varepsilon = 1$) and accordingly has a value between 0 and 1.

Thermal bridge

A thermal bridge is defined as a position on the external wall of a building, where there is a localized increase in heat loss due to a structural defect.

Thermal bridges can lead to an increased risk of mould.

Relative humidity

The relative humidity indicates the degree to which the air is saturated with water vapour. The value is indicated as a percentage of the maximum amount of water vapour the air can absorb. The maximum amount of water vapour depends on the temperature: The higher the temperature is, the more water vapour the air can absorb. If the relative humidity is too high, there is an increased risk of mould. If the relative humidity is too low, it may have a negative impact on your health.

Dew point temperature

The dew point temperature indicates the point at which the water vapour in the air starts to condense. The dew point temperature depends on the relative humidity and the air temperature.

If the temperature of a surface is below the dew point temperature, water will start to condense on this surface.

Condensate on surfaces is one of the main reasons why mould forms.

Maintenance and Service

Maintenance and Cleaning

- Check the measuring tool before each use. If the measuring tool is visibly damaged or parts have become loose inside the measuring tool, safe function can no longer be ensured.

Always keep the measuring tool clean and dry to ensure optimum, safe operation. Never immerse the measuring tool in water or other liquids. Wipe off any dirt using a dry, soft cloth. Do not use any detergents or solvents. When cleaning the measuring tool, ensure that no liquids enter the tool.

In particular, clean the humidity and temperature sensor (4), the reception lens (3) and the laser outlet aperture (2)

very carefully: Ensure that there is no lint on the reception lens or the laser outlet aperture. Do not attempt to remove dirt from the sensor or the reception lens using pointed objects. If necessary, you can carefully blow away dirt using oil-free compressed air. Do not store the measuring tool in a plastic bag, as the evaporation could damage the humidity and temperature sensor (4). Do not affix any stickers near to the sensor on the measuring tool. Do not store the measuring tool for extended periods where the atmospheric humidity is outside the range of 30 % to 50 %. If the measuring tool is stored in conditions that are too damp or too dry, it can result in inaccurate readings. Only store and transport the measuring tool in the protective bag provided. If the measuring tool needs to be repaired, send it off in the protective bag.

After-Sales Service and Application Service

Our after-sales service responds to your questions concerning maintenance and repair of your product as well as spare parts. You can find explosion drawings and information on spare parts at: www.bosch-pt.com

The Bosch product use advice team will be happy to help you with any questions about our products and their accessories. In all correspondence and spare parts orders, please always include the 10-digit article number given on the nameplate of the product.

Great Britain

Robert Bosch Ltd. (B.S.C.)
P.O. Box 98
Broadwater Park
North Orbital Road
Denham Uxbridge
UB 9 5HJ

At www.bosch-pt.co.uk you can order spare parts or arrange the collection of a product in need of servicing or repair.

Tel. Service: (0344) 7360109

E-Mail: boschservicecentre@bosch.com

You can find further service addresses at: www.bosch-pt.com/serviceaddresses

Disposal

Measuring tools, accessories and packaging should be recycled in an environmentally friendly manner.

- Do not dispose of measuring tools or batteries with household waste.


Only for EU countries:

According to the Directive 2012/19/EU on waste electrical and electronic equipment and its transposition into national law, measuring tools that are no longer usable, and, according to the Directive 2006/66/EC, defective or drained batteries must be collected separately and disposed of in an environmentally correct manner. If disposed incorrectly, waste electrical and electronic equipment may have harmful effects on the environment and human health, due to the potential presence of hazardous substances.

Only for United Kingdom:





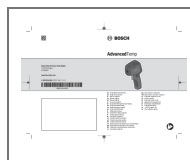


















According to The Waste Electrical and Electronic Equipment Regulations 2013 (SI 2013/3113) (as amended) and the Waste Batteries and Accumulators Regulations 2009 (SI 2009/890) (as amended), products that are no longer usable must be collected separately and disposed of in an environmentally friendly manner.

Documents / Resources



[BOSCH AdvancedTemp Thermo Detector In Soft Storage Bag](#) [pdf] Instruction Manual
AdvancedTemp Thermo Detector In Soft Storage Bag, AdvancedTemp, Thermo Detector In Soft Storage Bag, In Soft Storage Bag, Storage Bag

References

-  [Invented for life | Bosch Global](#)
-  [My Blog](#)
-  [Početna strana | Bosch u Srbiji](#)
-  [pt.com](#)
-  [Skånevik Ølen Kraftlag AS](#)
-  [Д•Д»ДμД°Ñ.Ñ€Д³⁄₄Ñ–Д¹⁄₂ÑÑ.Ñ€ÑƒД¹⁄₄ДμД¹⁄₂Ñ.Д Bosch | Bosch Professional](#)
-  [ДД»ДμД°Ñ.Ñ€Д³⁄₄Д_Д¹⁄₂ÑÑ.Ñ€ÑƒД¹⁄₄ДμД¹⁄₂Ñ.Ñ Bosch | Bosch Professional](#)
-  [Bosch Power Tools | Bosch Power Tools](#)
-  [Select your country | Bosch Power Tools](#)
-  [Електроинструменти на Bosch | Електроинструменти на Bosch](#)
-  [Service worldwide](#)
-  [Elektrické náradí Bosch | Elektrické náradí Bosch](#)
-  [Bosch Elektrowerkzeuge und Zubehör | Bosch Elektrowerkzeuge](#)
-  [Bosch el-værktøj | Bosch el-værktøj](#)
-  [Bosch-sähkötyökalut | Bosch-sähkötyökalut](#)
-  [Outillage électroportatif Bosch | Outillage électroportatif Bosch](#)
-  [Ηλεκτρικά εργαλεία Bosch | Ηλεκτρικά εργαλεία Bosch](#)
-  [Bosch elektromos kéziszerszámok | Bosch elektromos kéziszerszámok](#)
-  [Elektronarzędzia Bosch | Elektronarzędzia Bosch](#)
-  [Scule electrice Bosch | Scule electrice Bosch](#)
-  [Bosch električni alati | Bosch električni alati](#)
-  [bosch-pt.ru](#)
-  [Elektrické náradie Bosch | Elektrické náradie Bosch](#)
-  [Invented for life | Bosch Global](#)
-  [Ana Sayfa | Bosch Türkiye](#)
-  [Početna | Bosch u Hrvatskoj](#)
-  [Domov | Bosch v Sloveniji](#)
-  [herramientasbosch.net](#)