



BOSCH PRY6A6B70 Built In Gas Hob User Manual

[Home](#) » [Bosch](#) » BOSCH PRY6A6B70 Built In Gas Hob User Manual 

Contents

- 1 BOSCH PRY6A6B70 Built-In Gas Hob
- 2 Overview
- 3 Safety
- 4 Preventing Material Damage
- 5 Environmental Protection and Saving Energy
- 6 Familiarising Yourself with Your Appliance
- 7 Accessories
- 8 Basic Operation
- 9 Cookware
- 10 Recommended Settings for Cooking
 - 10.1 Melting, defrosting, fine dishes
- 11 Troubleshooting
- 12 Customer Service
- 13 Disposal
- 14 Documents / Resources
 - 14.1 References
- 15 Related Posts




BOSCH

BOSCH PRY6A6B70 Built-In Gas Hob



Overview

PRY6A6B70

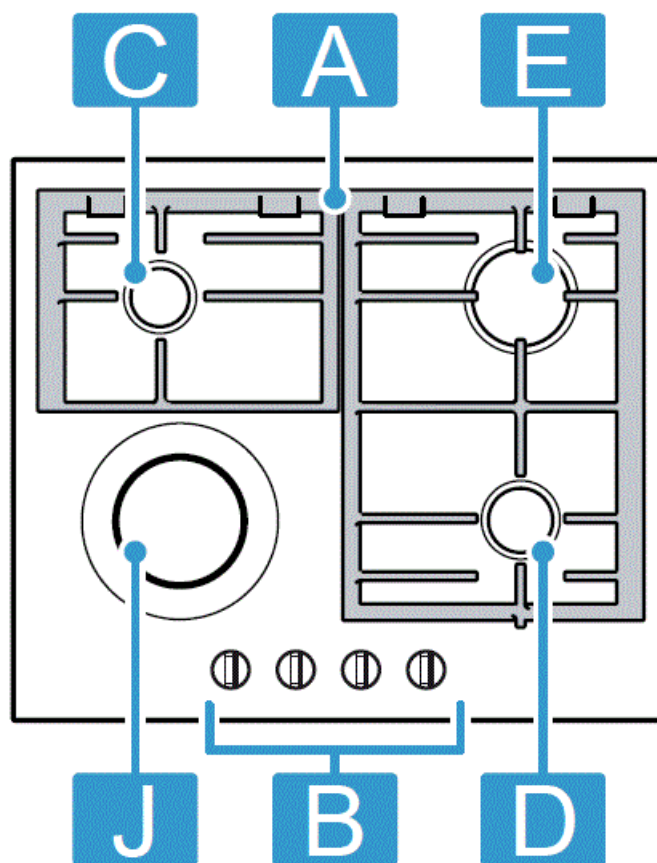

1	Component	
A	Pan support	–
B	Control knob	–
C	Economy burner	1.10 kW
D	Standard-output burner	1.90 kW
E	High-output burner	2.80 kW
J	Electric hotplate	Small cooking zone: 700 W Dual-circuit cooking zone: 1800 W
1 The images shown in these instructions are for guidance only.		

Safety

Observe the following safety instructions.

General information

- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

Intended use

The appliance can only be used safely if it is correctly installed according to the safety instructions. The installer is responsible for ensuring that the appliance works perfectly at its installation location. Only use this appliance:

- For cooking purposes.
- Under supervision. Never leave the appliance unattended when cooking for short periods.
- In a private household and in a domestic environment
- Up to an altitude of max. 2000 m above sea level.

Do not use the appliance:

- On boats or in vehicles.
- as a room heater.
- with an external timer or remote control.
- Outdoors.

Call the after-sales service if you want to convert your appliance to a different type of gas.

Restriction on user group

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers. Do not let children play with the appliance. Children must not perform cleaning or user maintenance unless they are at least 15 years old and are being supervised. Keep children under the age of 8 years away from the appliance and power cable.

Safe use

WARNING – Risk of explosion!

Escaping gas may cause an explosion. WHAT TO DO IF YOU SMELL GAS OR IF THERE ARE FAULTS IN THE GAS INSTALLATION

- Immediately shut off the gas supply or close the gas cylinder valve.
- Immediately extinguish all naked flames and cigarettes.
- Do not operate any light switches or appliance switches.
- Do not pull any plugs out of any sockets.
- Do not use any telephones or mobile phones within the building.
- Open windows and ventilate the room.
- Call the after-sales service or the gas supplier.

Escaping gas may cause an explosion. Small amounts of gas can collect over a longer period of time and ignite.

- Close the safety valve for the gas supply when the appliance is out of use for prolonged periods.

Escaping gas may cause an explosion. If the liquefied gas bottle is not upright, liquefied propane/butane can enter the appliance. Intense darting flames may therefore escape from the burners. Components may become damaged and start to leak over time so that gas escapes uncontrollably. Always use liquefied gas bottles in an upright position.

WARNING – Risk of suffocation!

Using the gas cooking appliance leads to a build-up of heat, moisture, and combustion products in the room where the appliance is installed.

- Ensure that the kitchen is sufficiently ventilated, in particular when operating the gas cooking appliance.
- If the appliance is used intensively and for prolonged periods, ensure that there is additional ventilation so that the combustion products are safely fed to the outside, e.g. if using existing ventilation equipment, set a higher performance level, and, at the same time, ensure that the air is replaced with fresh air in the room where the appliance is installed.
- Consult specialist personnel when installing additional ventilation equipment.

WARNING – Risk of fire!

- Leaving fat or oil cooking on an unattended hot can be dangerous and may lead to fires.
- Never leave hot oil or fat unattended.
- Never attempt to extinguish a fire using water; instead, switch off the appliance and then cover it with a lid or a fire blanket.
- The appliance becomes very hot.
- Never place flammable objects on the cooktop or in its immediate vicinity.
- Never store any objects on the cooktop.

The appliance will become hot.

- Do not keep combustible objects or aerosol cans in drawers directly underneath the hob.
- Never store or use combustible materials (e.g. spray cans or cleaning agents) under the appliance or in its immediate vicinity. Hob covers can cause accidents, for example, due to overheating, catching fire, or material shattering.

- Do not use hob covers. When gas burners are in operation without any cookware placed on them, they can build up a lot of heat. The extractor hood above may become damaged or catch fire.
- Only operate the gas burners with cookware on them.
- The appliance becomes very hot, and fabrics and other objects may ignite.
- Keep fabrics (e.g. garments or curtains) away from the flames.
- Never reach over the flames.
- Do not place combustible objects (e.g. tea towels or newspapers) on, next to or behind the appliance. Escaping gas may ignite.
- If the burner does not ignite after 15 seconds, turn the control knob to the "Off" position and open the door or window in the room. Wait at least one minute before igniting the burner again.
- In the event of the burner flames being accidentally extinguished, turn off the burner control and do not attempt to re-ignite the burner for at least one minute. Food may catch fire.
- The cooking process must be monitored. A short process must be monitored continuously.

WARNING – Risk of burns!

The accessible parts can become hot during operation.

- Small children should be kept away from the appliance. Hob protective grilles may cause accidents.
- Never use hob protective grilles.
- Empty cookware becomes extremely hot when set on gas burners that are operating.
- Never heat up empty cookware. The appliance becomes hot during operation.
- Allow the appliance to cool down before cleaning.

WARNING – Risk of electric shock!

Incorrect repairs are dangerous.

- Repairs to the appliance should only be carried out by trained specialist staff.
- Only use genuine spare parts when repairing the appliance.
- If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk. If the appliance or the power cord is damaged, this is dangerous.
- Never operate a damaged appliance.
- Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- If the appliance or the power cord is damaged, immediately unplug the power cord or switch off the fuse in the fuse box and turn off the gas supply.
- Call customer services. → Page 12

Ingress of moisture can cause an electric shock.

- Do not use steam- or high-pressure cleaners to clean the appliance. The insulation on cables of electrical appliances may melt if it touches hot parts of the appliance.
- Never bring electrical appliance cables in contact with hot parts of the appliance.

WARNING – Risk of injury!

Faults or damage to the appliance and repairs that have not been carried out correctly are dangerous.

- Never switch on the appliance if there is a fault with it.
- If the appliance is faulty, unplug the mains plug or switch off the fuse in the fuse box. Shut off the gas supply and call the aftersales service.
- Always have repairs carried out to the appliance and damaged gas lines replaced by trained, specialist personnel.

Cracks or fractures on the glass surface are dangerous.

- All of the burners and each electrical heating element switch off immediately and disconnect the appliance from the power supply.
- Shut off the gas supply.
- Do not touch the surface of the appliance
- Do not use the appliance.
- Call customer service. Saucepans may suddenly jump due to liquid between the saucepan base and the hotplate.
- Always keep hotplates and saucepan bases dry. Cookware that is not the right size, or that is damaged or incorrectly positioned may cause serious injuries.
- See the notes on cookware. When switching on the burner, sparks are generated in the ignition plugs.
- Never touch the ignition plugs while the burner is being lit. If a control knob is too stiff to turn or it is loose, it must no longer be used.
- Contact our after-sales service immediately to have the control knob repaired or replaced. An appliance with a cracked or broken surface can cause cuts.
- Do not use the appliance if it has a cracked or broken surface.

WARNING – Risk of suffocation!

- Children may put packaging material over their heads or wrap themselves up in it and suffocate.
- Keep packaging material away from children.
- Do not let children play with packaging material. Children may breathe in or swallow small parts, causing them to suffocate.
- Keep small parts away from children.
- Do not let children play with small parts.

Preventing Material Damage

ATTENTION!

Heat can cause damage to adjacent appliances or kitchen units. If the appliance is in operation for an extended period, heat and moisture will be generated.

- Open a window or switch on an extractor hood leading to the outside. A build-up of heat may damage the appliance.
- Do not use two burners or heat sources to heat one single item of cookware.
- Do not use griddle plates, clay pots, etc. for a long time at full power. A build-up of heat may damage the controls.

- Do not use a large item of cookware on burners that are close to the control knobs. If a control knob is in the wrong position, this could lead to malfunctions.
- Always turn the control knob to the “Off” position when the appliance is not being used. Handling the cookware roughly may damage the surface of the appliance.
- Handle the cookware on the hob carefully.
- Do not place any heavy objects on the hob.

Saltwater and damp cookware may damage the hob.

- Keep the hob dry.
- Do not cook with wet cookware.
- Avoid letting liquids overflow onto the surface of the electric hotplate. Use deep cookware when cooking with a lot of liquid.
- Avoid letting salt come into contact with the surface of the electric hotplate. Moving the cookware may scratch the glass.
- Lift the cookware when moving it. Damage may occur if hard or pointed objects fall on the hob.
- Do not let hard or pointed objects fall onto the hob.
- Do not bump into any of the edges of the hob. Salt, sugar or sand that may fall from the vegetables will scratch the glass.
- Do not use the hob as a work surface or storage space. Melted sugar or food with a high sugar content may damage the glass.
- Remove boiled-over food immediately with a glass scraper.

Environmental Protection and Saving Energy

Saving energy

If you follow these instructions, your appliance will use less energy. Choose a burner roughly the same size as your pan. Center the cookware on the hob.

Tip: Cookware manufacturers often give the upper diameter of the saucepan. It is often larger than the base diameter.

- Unsuitable cookware or incompletely covered cooking zones consume a lot of energy. Cover saucepans with suitable lids.
- Cooking without a lid consumes considerably more energy. Lift lids as infrequently as possible.
- When you lift the lid, a lot of energy escapes. Use a glass lid.
- You can see into the pan through a glass lid without having to lift it. Use cookware that is suitable for the quantity of food.
- Large items of cookware containing little food need more energy to heat up.

Cook with only a little water.

- The more water that is contained in the cookware, the more energy is required to heat it up. Turn down to a lower power level early on.
- If you use an ongoing power level that is too high, you will waste energy. Use the residual heat of electric

hotplates. With lengthy cooking times switch off the hotplate 5-10 minutes before the end of cooking.

- Unused residual heat increases energy consumption.

Product Information according (EU) 66/2014 can be found on the attached appliance pass and online on the product page for your appliance.

Disposing of packaging


The packaging materials are environmentally compatible and can be recycled.



- Sort the individual components by type and dispose of them separately.

Familiarising Yourself with Your Appliance

Control knob

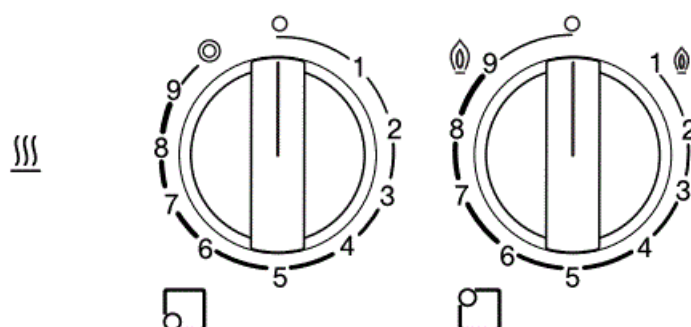
You can use the control panel to configure all functions of your appliance and to obtain information about the operating status. Use the control knobs to set the power incrementally power levels.



Display	Meaning
	Burner assigned to the control knob or assigned electric hotplate.
	Burner or electric hotplate off.
9/🔥9	Highest power setting and electric ignition of the burner.
1/1 🔥	Lowest power setting.
🔥	Ignition of the dual-circuit hotplate.
🔥🔥🔥	Operation and residual heat indicator

Burner


You can find an overview of the parts of the burner here.

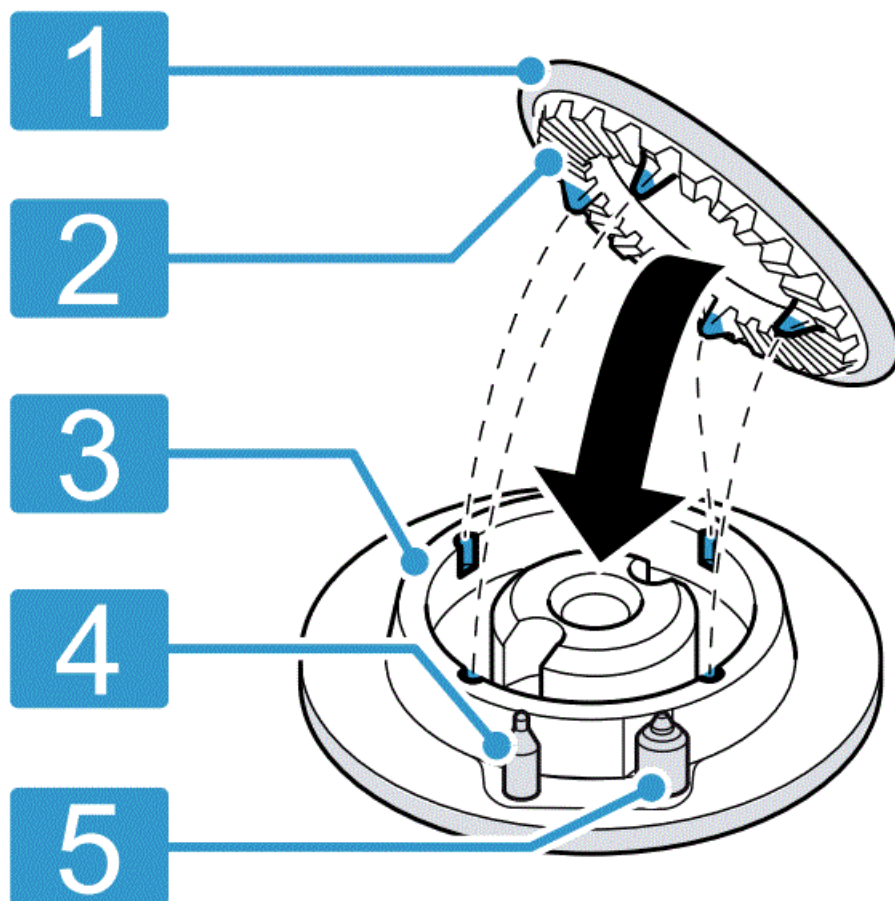

1	Burner cover
2	Burner cup
3	Burner cup base
4	Thermocouple for the flame monitoring
5	Ignition plug

Pan supports

Insert the pan supports correctly.

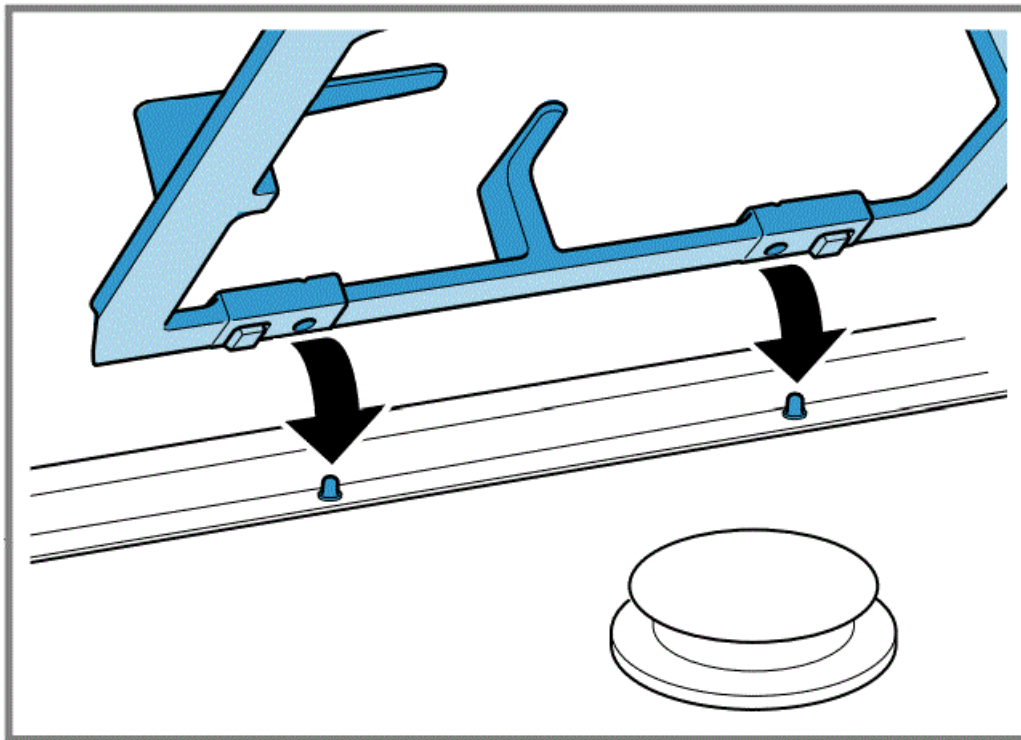
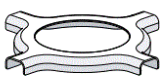

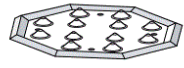


Place the cookware correctly on the pan supports. Never place the cookware directly on the burner. Always carefully remove the pan supports. When moving pan support, the pan supports next to it may also move.

Tip: You can remove the metal residue that remains when some items of cookware are moved on the pan support by cleaning it properly. → “Cleaning the pan supports”, Page 11

Accessories

You can buy accessories from the after-sales service, from specialist retailers, or online. Only use original accessories, as these have been specifically designed for your appliance. Accessories vary from one appliance to another. When purchasing accessories, always quote the exact product number (E no.) of your appliance. → Page 13 You can find out which accessories are available for your appliance in our catalog, in the online shop or from our after-sales service. www.bosch-home.com

Accessories	Description	Using the appliance
Additional espresso maker grid	 	<ul style="list-style-type: none"> Only use on the burner with the lowest power setting. Use with cookware with a diameter smaller than 12.
Simmer plate	 	<ul style="list-style-type: none"> For cooking on a low heat. Use the economy burner or the standard-output burner. If there are several standard-output burners, it is preferable to use the rear or front-right burner. Place it on the pan support with the bumps facing up – never place it directly on the burner.

Basic Operation

Igniting a gas burner

The hob has automatic ignition of the burners.

WARNING – Risk of fire!

Escaping gas may ignite.

- If the burner does not ignite after 15 seconds, turn the control knob to the “Off” position and open the door or

window in the room. Wait at least one minute before igniting the burner again.

- In the event of the burner flames being accidentally extinguished, turn off the burner control and do not attempt to re-ignite the burner for at least one minute.

ATTENTION!

If you turn the control knob directly between position and 1, malfunctions may occur.

- For this reason, never turn directly from position to position 1 or vice versa.
1. Press the control knob for the selected burner and turn it anti-clockwise to the highest level. Keep the control knob pressed in. For all of the burners, sparks are generated and the flame ignites.
 2. Wait a few seconds and release the control knob. → "Safety system", Page 8
 3. Turn the control knob to the required position.
 4. If the burner does not ignite, turn the control knob to the off position and repeat the steps described above. This time, hold the control knob down for longer (up to 10 seconds).

Note:

Take the following information into account to ensure that the appliance works correctly:

- The burner parts → Page 7 and the pan supports → Page 7 must be inserted correctly.
- Do not swap the burner caps around.
- It is important to keep the appliance clean. Clean the ignition plugs regularly with a small, non-metallic brush. Take care to prevent the ignition plugs from suffering any heavy knocks.
- The burner holes and grooves must be clean to ensure a correct flame. → "Cleaning the burners", Page 11

Safety system

The safety system (thermocouple) interrupts the flow of gas if the burners accidentally go out. To ignite the burner, you must activate the system that enables the gas flow.

1. Ignite the burner without releasing the control knob.
 - The flame ignites.
2. Press and hold the control knob for a further four seconds.

Igniting a gas burner manually

In the event of a power cut, you can light the burners manually.

1. Press the control knob for the selected burner and turn it anti-clockwise to the highest level.
2. Hold a lighter or a flame (lighter, match, etc.) against the burner.

Switching off a burner

- Turn the control knob clockwise.

Normal behavior during operation

This behavior is normal for the appliance:

- Slight hissing noise from the ignited burner.
- Release of odors when using the appliance for the first time. These odors disappear after a short time.
- An orange flame is normal. This is due to dust in the environment, spilled liquids, etc.
- Popping noise a few seconds after the burner is switched off. This is caused by switching on the safety system.
→ “Safety system”, Page 8

Operating the electric hotplate

Switching on the small hotplate

- Turn the control knob clockwise to the required position. The operating indicator lights up. Switching on the dual-circuit hotplate
1. Turn the control knob clockwise to .
 2. Turn the knob anti-clockwise to the required position.
 3. To use the small cooking zone only, turn the control knob anti-clockwise to ° and switch on the cooking zone.

Switching off the hotplate

- Turn the knob anti-clockwise to .
- As soon as the hob surface has cooled down, the residual heat indicator goes out.

Cookware

This information has been provided to help you save energy and avoid damaging your cookware.

Suitable cookware

Only use cookware with a suitable diameter. The cookware must not protrude over the edge of the hob. Never use small cookware on large burners. The flames must not touch the sides of the cookware.

Burner	Minimum dia- meter of the cookware base	Maximum dia- meter of the cookware base
High-output burner	20 cm	26 cm
Standard-output burner	14 cm	22 cm
Economy burner	12 cm	16 cm
Electric hotplate	12 cm	18 cm

Only use cookware with a rounded base on the multi-crown burner.

- The hob must have a multi-crown burner and an additional wok grid.
- The additional work grid must be correctly inserted. → “Accessories”, Page 8

Using cookware

The selection and positioning of the cookware affect the safety and energy efficiency of your appliance. → “Saving energy”, Page 6

WARNING – Risk of fire!

Flammable objects may ignite.

- Maintain a distance of at least 50 mm between the cookware and flammable objects.

Do not use deformed cookware. Only use cookware with a thick, flat base.

- Deformed cookware is not stable on the hob and may tip over. Place the cookware right in the center of the burner.
- The cookware may tip over if it is not placed in the center of the burner. Place the cookware correctly on the pan supports.
- The cookware may tip over if you place it directly on the burner.

Recommended Settings for Cooking

You can use the control knobs on the appliance to set the flame height incrementally to different power levels from 1 to 9. The cooking times and power levels may vary depending on the type of food, its weight, and quality, the type of gas used, and the material from which the cookware is made

Tips

- **Cooking tips**
 - When cooking soups, creams, lentils, or chickpeas, add all of the ingredients to the cookware at the same time.
 - For pan-fried dishes, heat the oil up first. As soon as you have started frying, keep the temperature constant and adjust the power level as required. When preparing several portions, wait until the relevant temperature has been reached again. Turn the food regularly.
- To reduce the cooking time:
 - Use a pressure cooker to cook creams and pulses. If you are using a pressure cooker, follow the manufacturer's instructions.
 - The water must be boiling before you add pasta, rice, or potatoes. Then adjust the power level in order to continue boiling.
 - Always use a lid when cooking rice and potatoes

Power level	Preparing meals
9	<ul style="list-style-type: none"> ▪ Bringing water to the boil ▪ Baking in a bain-marie: Sponge, blanc- mange, bread pudding. ▪ Frying at a high temperature: Asian dishes.
7-9	<ul style="list-style-type: none"> ▪ Starting the cooking process: Pasta, soups, creams, paella, pulses, rice pudding. ▪ Deep-fat frying in oil: Tempura vegetables, croquettes, chips, potato om- letters, escalope, frozen food, baked items. ▪ Frying with a little oil: French omelet, steak, well-done sirloin steak, stro- go off. ▪ Frying, searing: Vegetables, meat.
4-6	<ul style="list-style-type: none"> ▪ Continuing the cooking process: Pasta, soups, creams, paella, pulses, rice pudding. ▪ Deep frying with a little oil: Hamburgers, sausages, grilled salmon, ris- soles. ▪ Stew, pot roast: Ragout, goulash, rata- touille. ▪ Cooking at a medium temperature: Cheese sauce, béchamel, carbonara, Neapolitana sau- ce, blancmange, crepes. ▪ Defrosting: Frozen food.
3-1	<ul style="list-style-type: none"> ▪ Finishing cooking: Paella rice, pulses, rice pudding. ▪ Steaming: Fish, vegetables. ▪ Heating and keeping warm: Ready-to-eat meals.
1	Melting: Butter, chocolate, butter, gelatine, honey, caramel.

Recommendations for cooking with the electric hotplate

You can find recommendations here for cooking differ-ent dishes with the right power levels. For bringing liquids to the boil, use heat setting 9.

Boiling, cooking

Food	Ongoing cook- ing setting	Ongoing cook- ing time in minutes
Stew, soups	3–4	15–60
Rice	3	15–30
Pasta 1	5	6–10
Unpeeled boiled potatoes	3–4	25–30
Boiled potatoes	3–4	15–25
Potato dump- lings 1	3–4	20–30
Cooking fish 1 _____ _____ _____	3	10–15
1 Continue to cook the dish without a lid.		

Deep-frying in oil

Roman-style hake 1	4–5	8–20
Fish fingers, frozen	6–7	8–12
1 Prepare the dish without the lid.		

Deep frying with a little oil, until golden brown, frying in the pan

Steak, 3 cm thick 1	7–8	8–12
Chop, plain or breaded 1	6–7	8–12
Escalope, plain or breaded 1 _____ _____ _____	6–7	6–10
Vegetables, frozen	3–4	10–20
Sautéing veget- ables	6–7	6–10
_Crêpes	5–6	–
1 Prepare the dish without the lid.		

Cooking, braising

Goulash	3–4	50–60
Pot roast	3–4	60–100
Roulades	3–4	50–60

Melting, defrosting, fine dishes

Béchamel sauce	1	3–6
Melting chocolate	1	–

Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.

WARNING – Risk of injury!

Improper repairs are dangerous.

- Repairs to the appliance should only be carried out by trained specialist staff.
- If the appliance is defective, call Customer Service

WARNING – Risk of electric shock!

Incorrect repairs are dangerous.

- Repairs to the appliance should only be carried out by trained specialist staff.
- Only use genuine spare parts when repairing the appliance.
- If the power cord of this appliance is damaged, it must be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person in order to prevent any risk.

Malfunctions

Fault	Cause and troubleshooting
The general electrical operation is impaired.	<p>The circuit breaker is faulty.</p> <p>► Check the circuit breaker in the fuse box.</p>

Fault	Cause and troubleshooting
The general electrical operation is impaired.	<p>The circuit breaker or one of the residual-current circuit breakers has been triggered.</p> <ul style="list-style-type: none"> ▶ In the fuse box, check whether the circuit breaker or one of the residual-current circuit breakers has been triggered. <p>The mains plug of the power cord is not plugged in.</p> <ul style="list-style-type: none"> ▶ Connect the appliance to the power supply. <p>There has been a power cut.</p> <ul style="list-style-type: none"> ▶ Check whether the lighting in your kitchen or other appliances are working.
Automatic ignition is not working.	<p>Food remnants or dirt are located between the ignition plug and the burner.</p> <ul style="list-style-type: none"> ▶ Clean the space between the ignition plugs and burners. <p>Burner parts are wet.</p> <ul style="list-style-type: none"> ▶ Carefully dry the burner parts. <p>The burner parts are positioned incorrectly.</p> <ul style="list-style-type: none"> ▶ Correctly position the burner parts. <p>The appliance is not earthed or has not been connected correctly, or the earth cable is damaged.</p> <ul style="list-style-type: none"> ▶ Contact an electrician.
The burner flame is not uniform.	<p>The burner parts are positioned incorrectly.</p> <ul style="list-style-type: none"> ▶ Correctly position the burner parts. <p>Openings on the burner are soiled.</p> <ul style="list-style-type: none"> ▶ Clean and dry the openings on the burner.
The gas does not appear to be flowing normally or there is no gas being produced at all.	<p>The gas supply has been shut off by the intermediate valves.</p> <ul style="list-style-type: none"> ▶ Open the intermediate valves. <p>The gas cylinder is empty.</p> <ul style="list-style-type: none"> ▶ Replace the gas cylinder.
There is a smell of gas in the kitchen.	<p>The control knob is open.</p> <ul style="list-style-type: none"> ▶ Close the control knob. <p>The gas cylinder has not been connected correctly.</p> <ul style="list-style-type: none"> ▶ Ensure that the gas cylinder has been connected correctly. <p>The gas pipe to the appliance is leaking.</p> <ol style="list-style-type: none"> 1. Close the main gas tap. 2. Ventilate the room. 3. Immediately call an authorised installer, who can inspect the gas system and issue an installation certificate. 4. Do not use the appliance until you are sure that gas is not leaking from the installation or the appliance.
The burner switches off as soon as you release the control knob.	<p>Control knob not pressed down long enough.</p> <ol style="list-style-type: none"> 1. Keep the control knob pressed down for a few seconds after ignition. 2. Press the control knob down firmly. <p>Openings on the burner are soiled.</p> <ul style="list-style-type: none"> ▶ Clean and dry the openings on the burner.

Customer Service

If you have any queries on use, are unable to rectify faults on the appliance yourself or if your appliance needs to be repaired, contact Customer Service. Function-relevant genuine spare parts according to the corresponding Ecodesign Order can be obtained from customer Service for a period of at least 10 years from the date on which your appliance was placed on the market within the European Economic Area.

Note: Under the terms of the manufacturer's warranty the use of Customer Service is free of charge.

Detailed information on the warranty period and term warranty in your country are available from our after-sales service, your retailer, or on our website. If you contact Customer Service, you will require the product number (E-Nº) and the production number (FD) of your appliance. The contact details for Customer Service can be found in the enclosed Customer Service directory or on our website.

Product number (E-Nº) and production number (FD)

You can find the product number (E-Nº) and the production number (FD) on the appliance's rating plate. The rating plate can be found:

- on the appliance certificate.
- on the lower section of the hob.

Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

Disposal

Find out here how to dispose of old appliances correctly.


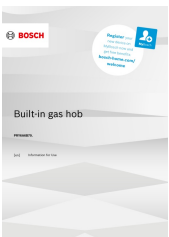
Disposing of old appliance

Valuable raw materials can be reused by recycling.

1. Unplug the appliance from the mains.
2. Cut through the power cord.
3. Dispose of the appliance in an environmentally friendly manner.

Information about current disposal methods are available from your specialist dealer or local authority. This appliance is labeled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment – WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

Documents / Resources

	BOSCH PRY6A6B70 Built In Gas Hob [pdf] User Manual PRY6A6B70 Series, PRY6A6B70, Built In Gas Hob, PRY6A6B70 Built In Gas Hob, Gas Hob
	BOSCH PRY6A6B70 Built-in Gas Hob [pdf] Installation Guide PRY6A6B70 Built-in Gas Hob, PRY6A6B70, Built-in Gas Hob, Gas Hob

References

- [Home Appliances Global Website | Bosch](#)
- [Home Appliances Global Website | Bosch](#)
- [BOSCH Service | Service worldwide](#)
- [Welcome to MyBosch](#)