



Bose SoundLink Color II Bluetooth Speaker User Manual

[Home](#) » [Bose](#) » Bose SoundLink Color II Bluetooth Speaker User Manual 

Contents

- [1 SoundLink Color II Bluetooth Speaker](#)
- [2 Product Description](#)
- [3 Product Information](#)
- [4 Included With Purchase](#)
- [5 Charging The Battery](#)
- [6 Battery Indicator](#)
- [7 Bluetooth Indicator](#)
- [8 Important Safety Information](#)
- [9 Download](#)
- [10 Related Posts](#)

SoundLink Color II Bluetooth Speaker



User Manual

[[Download PDF Manual](#)]

Congratulations on your purchase of Bose SoundLink Color II: Portable Bluetooth, Wireless Speaker with Microphone.

This device has been designed for you to enable wireless Bluetooth pairing, and thereby enable to take your workout to the living room, backyard, garage, or anywhere.

Please read all instructions and warnings prior to use.

Product Description

The device is designed to meet all the criteria for your satisfaction;

The SoundLink Color Bluetooth speaker II provides full range, portable sound anywhere you go. Advanced Bose technology packs big sound into a small, it is a water resistant speaker that's durable enough to take with you, however the day unfolds, even if it's next to the pool.


It's durably built to last longer, with an easy touch silicone texture that won't slip out of your hand when you're on the move. And it's just as simple to use—voice prompts tell you what device you're paired to so you don't have to guess, and if you're using an NFC enabled device, just pair with a tap. Need to keep the music flowing? You're covered with up to 8 hours of music, and it's rechargeable via Micro B USB. There's even a built in speakerphone to handle calls without holding your phone. Also download the Bose Connect app to drag and drop Bluetooth connections, unlock features and access updates down the line. This small colored wireless speaker is available in Aquatic blue, coral red, Soft black or polar white. Included: SoundLink color Bluetooth speaker II; USB cable.

Product Information

- Product Dimensions: 2.2 x 5 x 5.2 inches
- Item Weight: 1.2 pounds
- Department: Unisex-adult
- Manufacturer: Bose Corporation
- ASIN: BOIHETFQKS
- Item model number: 752195-0100
- Batteries: 1 Lithium Polymer batteries required. (included)

Included With Purchase


- SoundLink Color Bluetooth speaker II
- USB cable

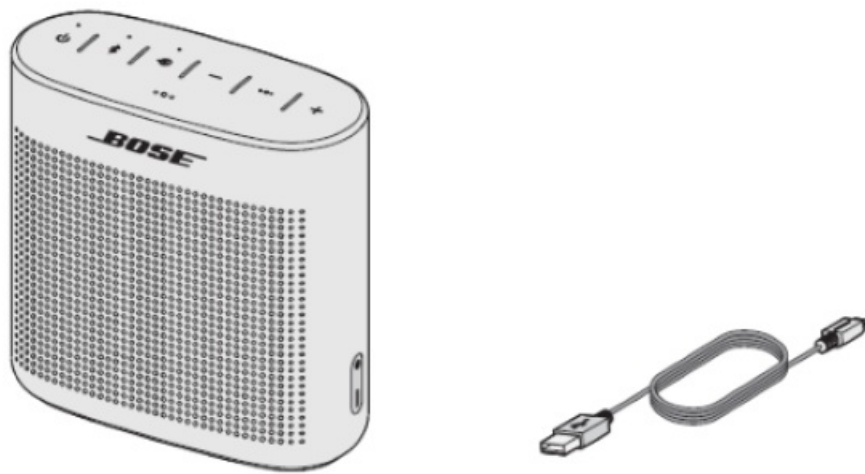

Charging The Battery

To power the device or charge the internal battery, plug the AC/DC power adapter into the DC Power Input on the speaker and a standard power outlet. Battery life is designed to last up to 8 hours.

To charge devices, use an appropriate USB charging cable (included) to connect the USB charging plug on the unit and the device you wish to charge.

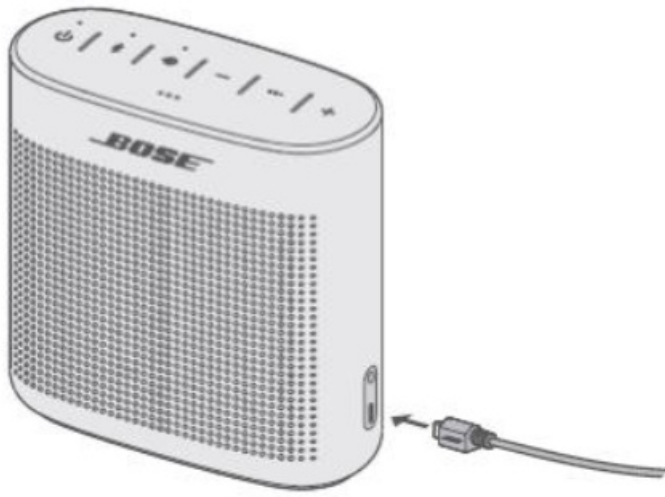

Battery Indicator

The device shows the battery charge level. Each time you power on your speaker, the battery indicator displays the battery charge level for two seconds and a voice prompt Announces the battery charge level.

To check the battery charge level, press and hold the power button while checking the battery indicator.

Indicator Activity	System State
Solid green	Charged / medium to full charge
Blinking amber	Charging
Solid amber	Medium charge
Blinking red	Need to charge

Bluetooth Indicator

The device Shows the connection status of a device

Indicator Activity	System State
Blinking blue	Ready to pair
Blinking white	Connecting
Solid white	Connected

Important Safety Information

- Follow all instructions.
- Do not use this device near water.

- Clean only with a dry cloth.
 - Do not block any ventilation openings. Install in accordance with the manufacturers instructions.
 - Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 - Only use attachments/accessories specified by the manufacturer.
 - Unplug this apparatus during lightning storms or when unused for long periods of time.
 - Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
 - Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
-

Download

Bose SoundLink Color II Bluetooth Speaker User Manual – [[Download PDF](#)]
