



BOSE RC18T1-27 Compatible Remote Instructions

[Home](#) » [Bose](#) » **BOSE RC18T1-27 Compatible Remote Instructions** 

BOSE RC18T1-27 Compatible Remote



Contents

[1 FUNCTIONS BUTTON](#)

 
[2 CUSTOMERS
SUPPORT](#)

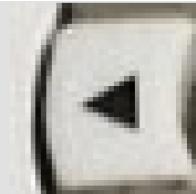 
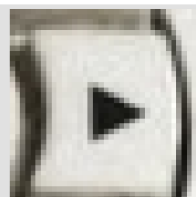 
[3 Documents / Resources](#)

 
 
 
[3.1 References](#)

 
 
[4 Related Posts](#)

FUNCTIONS BUTTON

Original	Recharge
 On / Off	 Power
 Mute All	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 CD-DVD	 +  Shift + 3
 FM-AM	 +  Shift + 6
 AUX	 +  Shift + 7
 TV	 +  Shift + 1
 CBL-SAT	 +  Shift + 0
 VCR	 +  Shift + 4

 Up / Tune +	 Up
 DVD Menu	 D.Menu / Top
 Settings	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right
 Guide	 Guide / EPG / -/--
 System	 Menu / Home

 Down / Tune -	 Down
 Exit	 Exit / Cancel / Clear
 Track/Chap./CH +	 CH+ / Page+
 Volume +	 Vol+
 Track/Chap./CH -	 CH- / Page-
 Volume -	 Vol-
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow

 Seek I<< / Seek -	 PRESET- I<< / Preset-
 Seek I<< / Seek -	 TUNE- << / Tune-
Seek  >>I / Seek +	 TUNE+ >> / Tune+
Seek  >>I / Seek +	 PRESET+ >>I / Preset+
 Shuffle Shuffle / Presets <--	 NETFLIX SEARCH Red / Netflix / Search
 Repeat Repeat / Presets -->	 Prime Video RANDOM Blue / Prime Video / Random
 1	 TV 1 1
 2	 DVD 2 2

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info / Angle



CUSTOMERS SUPPORT

<https://tout-telecommandes.fr/fr/BOSE/1060332-78771-telecommande-de-remplacement-pour-BOSE-RC18T1-27.html>



Documents / Resources



[BOSE RC18T1-27 Compatible Remote](#) [pdf] Instructions

RC18T1-27 Compatible Remote, RC18T1-27, Compatible Remote, Remote

References

- [User Manual](#)