



BOSE RC18T1-27 Duplicate Remote Control Instructions

[Home](#) » [Bose](#) » BOSE RC18T1-27 Duplicate Remote Control Instructions 

 
 


Contents

- [1 RC18T1-27 Duplicate Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

RC18T1-27 Duplicate Remote Control



Original	Recharge	Original	Recharge
 On / Off	 Power	 Down / Tune -	 Down
 Mute All	 Audio / Lang I/II	 Exit	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer	 Track/Chap./CH +	 CH+ / Page+
 CD-DVD	 Shift + 3	 Volume +	 Vol+
 FM-AM	 Shift + 6	 Track/Chap./CH -	 CH- / Page-
 AUX	 Shift + 7	 Volume -	 Vol-
 TV	 Shift + 1	 Stop	 Stop / Hold
 CBL-SAT	 Shift + 0	 Pause	 Pause / Step / Freeze
 VCR	 Shift + 4	 Play	 Play / Slow
 Up / Tune +	 Up	 I<< / Seek -	 I<< / Preset-
 DVD Menu	 D.Menu / Top	 I<< / Seek -	 << / Tune-
 Settings	 Setup / OPT /	 >>I / Seek +	 >> / Tune+
 Left	 Left	 >>I / Seek +	 >>I / Preset+
 Enter	 OK	 Shuffle / Presets <--	 Red / Netflix / Search
 Right	 Right	 Repeat / Presets -->	 Blue / Prime Video / Random
 Guide	 Guide / EPG / -/--	 1	 1
 System	 Menu / Home	 2	 2
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Info	 Info / Angle		



<https://tout-telecommandes.fr/fr/BOSE/1060332-78771-telecommande-de-remplacement-pour-BOSE-RC18T1-27.html>

Documents / Resources

	BOSE RC18T1-27 Duplicate Remote Control [pdf] Instructions RC18T1-27 Duplicate Remote Control, RC18T1-27, Duplicate Remote Control, Remote Control , Control
---	---

References

- [User Manual](#)