



BOSE RC18T1-27 Remote Control Instructions

[Home](#) » [Bose](#) » BOSE RC18T1-27 Remote Control Instructions 

Contents

- [1 BOSE RC18T1-27 Remote Control](#)
- [2 Product Usage Instructions](#)
- [3 Remote Using Instructions](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)



BOSE RC18T1-27 Remote Control



Product Usage Instructions

Power On/Off and Mute

- To turn the device on or off, press the “Power” button. To mute the sound, press the “Mute” button. Pressing the “Mute All” button will mute all audio sources.

Source Selection

- Use the buttons labeled CD-DVD, FM-AM, AUX, TV, CBL-SAT, VCR to select the desired audio or video source.

Navigation and Settings

- Use the directional buttons (Up, Down, Left, Right) to navigate through menus and settings. The “Enter” button

is used to confirm selections.

Audio and Language

- Adjust the audio settings using the “Audio / Lang I/II” buttons.
- These buttons may also allow you to switch between different audio tracks or languages.

Volume Control

- Use the “Volume +” and “Volume -” buttons to increase or decrease the volume.

Playback Control

- Control playback of CDs, DVDs, or other media using the “Stop,” “Pause,” and “Play” buttons.
- Use the “Track/Chap./CH +” and “Track/Chap./CH -” buttons to navigate through tracks or chapters.

Additional Controls

- The remote may have additional buttons for specific functions such as seeking, shuffling, presets, etc.

Remote Using Instructions



	On / Off		Power
	Mute All		Audio / Lang I/II
	Mute		Mute / Dimmer
	CD-DVD		Shift + 3
	FM-AM		Shift + 6
	AUX		Shift + 7
	TV		Shift + 1
	CBL-SAT		Shift + 0
	VCR		Shift + 4
	Up / Tune +		Up
	DVD Menu		D.Menu / Top
	Settings		Setup / OPT /
	Left		Left
	Enter		OK
	Right		Right
	Guide		Guide / EPG / -/--
	System		Menu / Home

	Down / Tune -		Down
	Exit		Exit / Cancel / Clear
	Track/Chap./CH +		CH+ / Page+
	Volume +		Vol+
	Track/Chap./CH -		CH- / Page-
	Volume -		Vol-
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	I<< / Seek -		I<< / Preset-
	I<< / Seek -		<< / Tune-
	>>I / Seek +		>> / Tune+
	>>I / Seek +		>>I / Preset+
	Shuffle / Presets <--		Red / Netflix / Search
	Repeat / Presets -->		Blue / Prime Video / Random
	1		1
	2		2

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info / Angle

<https://tout-telecommandes.fr/fr/BOSE/1060332-78771-telecommande-de-remplacement-pour-BOSE-RC18T1-27.html>

Documents / Resources

	BOSE RC18T1-27 Remote Control [pdf] Instructions RC18T1-27 Remote Control, RC18T1-27, Remote Control, Control
---	--

References

- [M Télécommande qui remplace BOSE RC18T1-27](#)
- [User Manual](#)